



SARNO CHAIR


Gather Your Eggs...

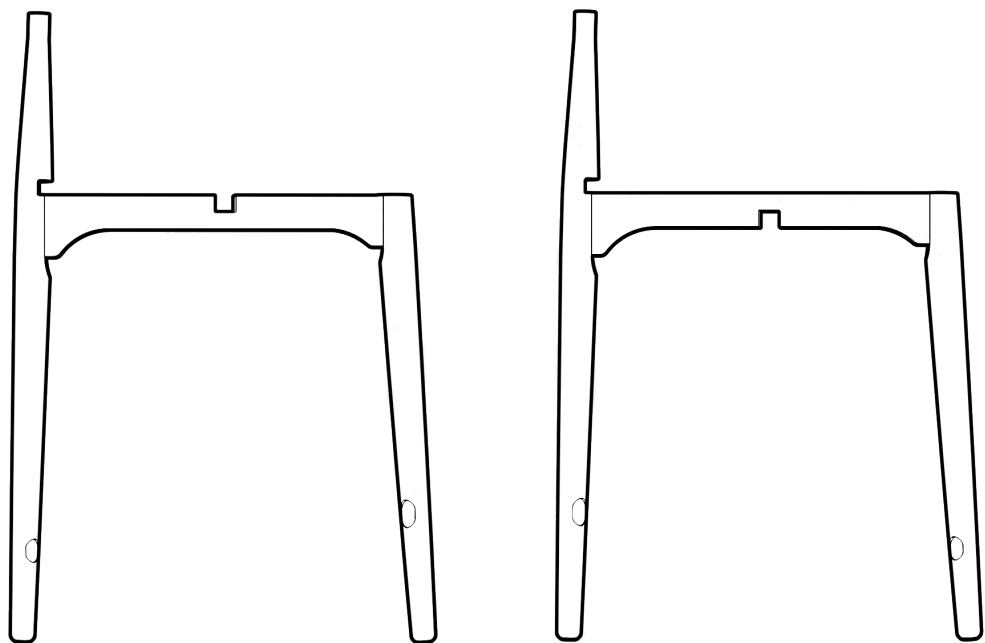


Legs



Seat Back




Back Brace



Front Brace



Side Braces

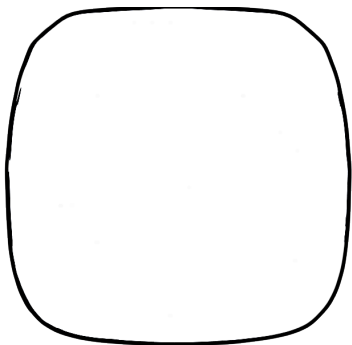


Seat



10x Button Head Screw



2x Short Wood Screw




8x Pocket Hole Screw



Allen Key

Note: Please retain all boxes until you are certain that your product isn't damaged and that you do not wish to return it. Disposal of boxes may prevent/delay our ability to resolve your request.

Step 1: Assemble the Legs

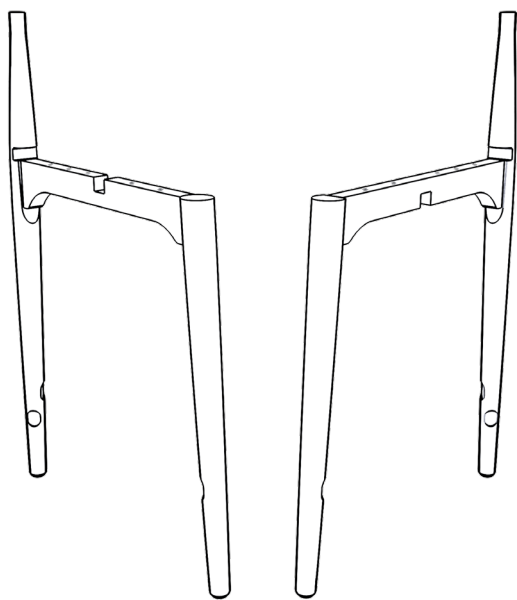

Leg Side A


Leg Side B

Distinguish Leg A and Leg B from their notches.

Leg B slots into Leg A


(Leg A, notch faces up. Leg B, notch faces down).

Facing the front of the chair, make sure the back of Leg A is on the left and Leg B is on the right.

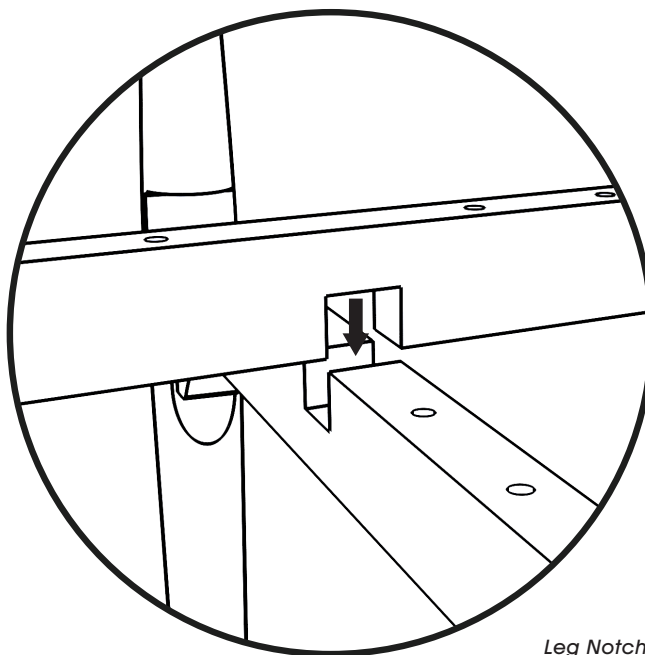


Leg Notches


Assembled legs will criss-cross each other

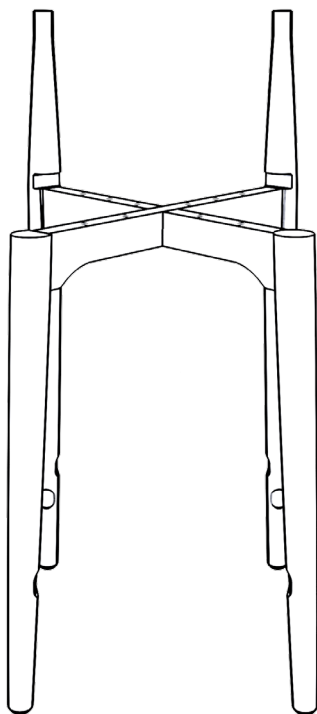

NOTE: To ensure the legs are oriented correctly, check that the hole openings for the back brace are higher than the hole openings for the side braces.

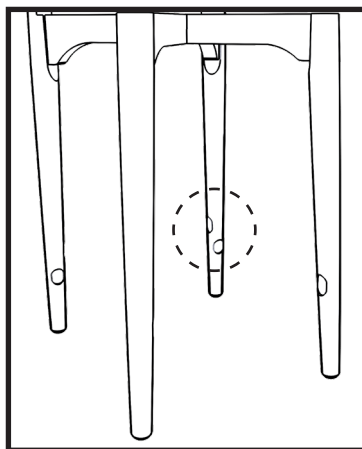


Correct

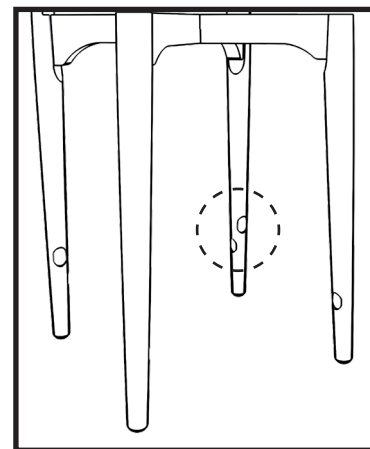



Incorrect

Step 2: Place the Seat

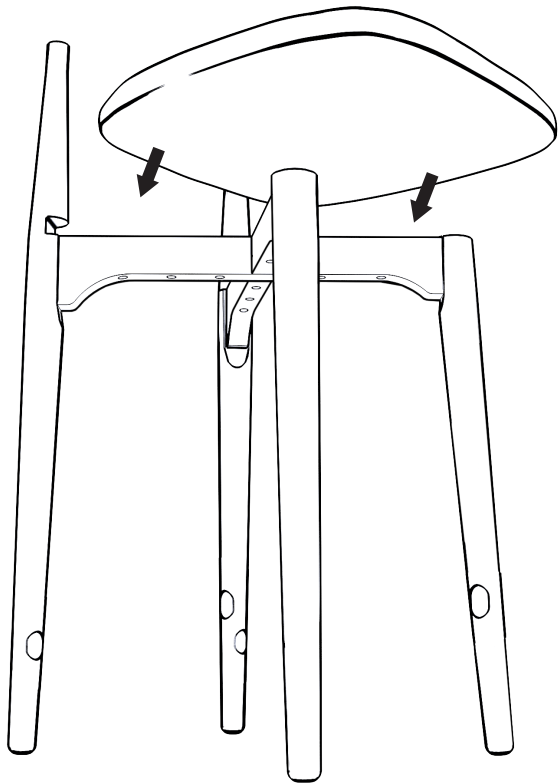


Place the Seat down on the criss-crossed legs.



Push the seat all the way back into the notches in the rear of the legs.

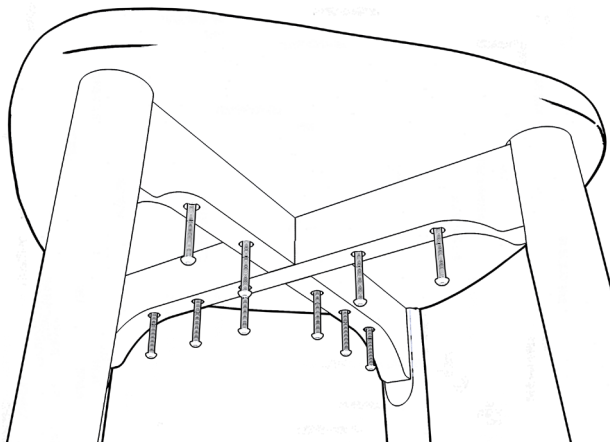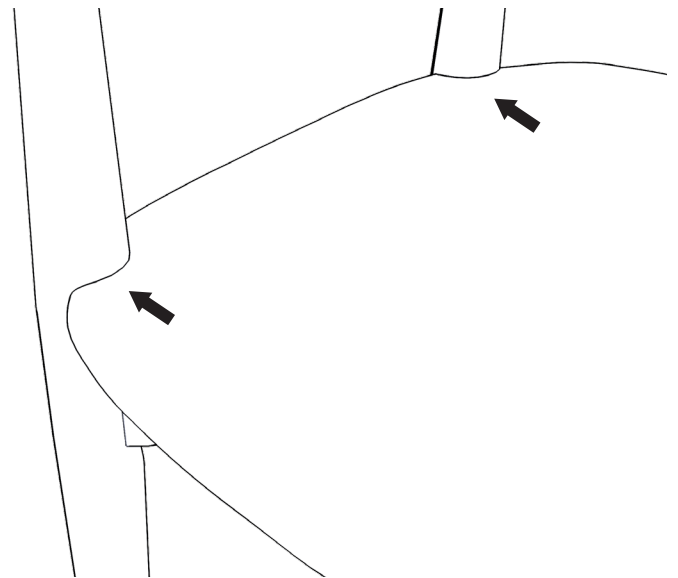

Hand tighten the button head screws through the holes from the bottom. Do not fully tighten yet.

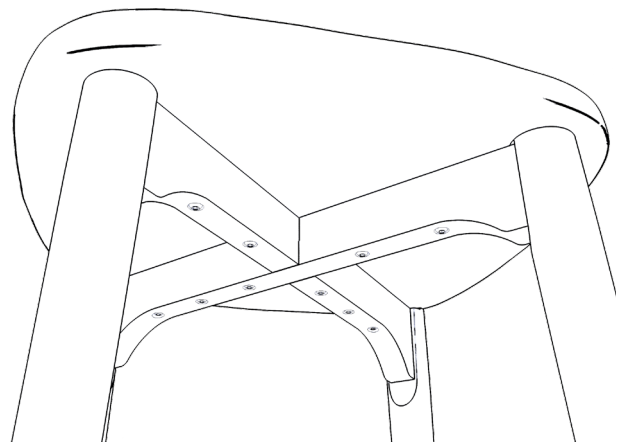


Step 3: Attach the Back

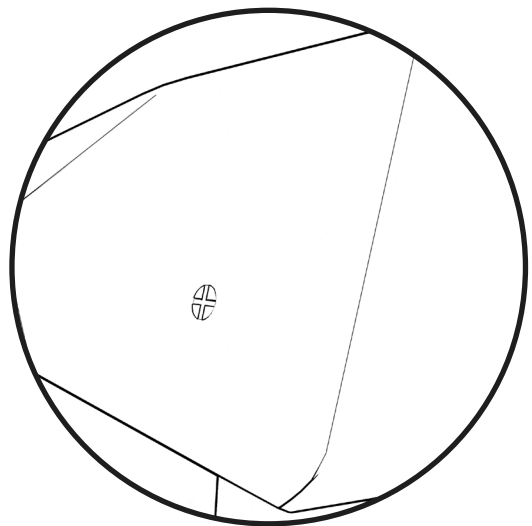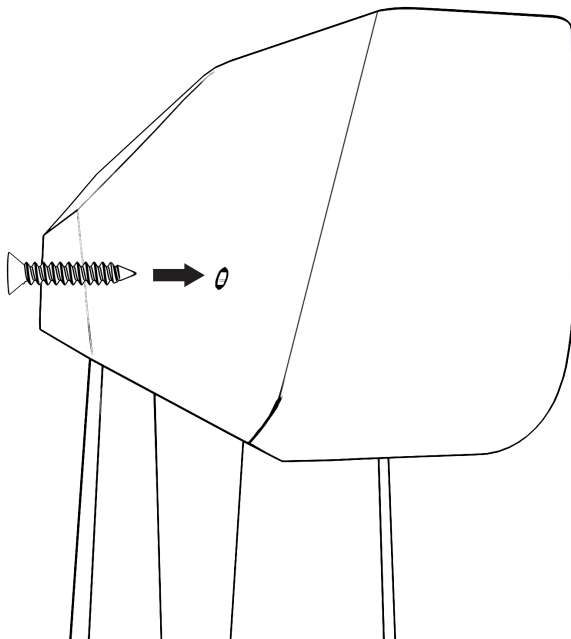

Use the short wood screws and tighten into the seat back until the screw is flush with the surface.


Step 4: Add the Front and Rear Leg Braces

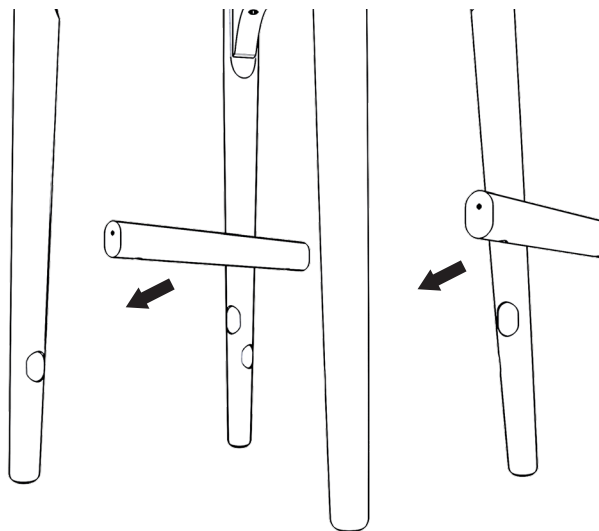

Align the Front Leg Brace with the corresponding holes in the legs.

Repeat with the rear brace.


Step 5: Add the Side Leg Braces

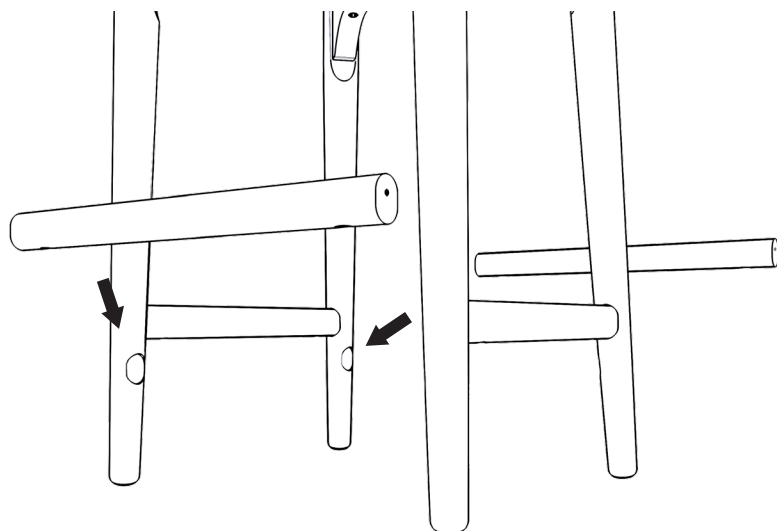

Now fit the side braces in place using the same steps as previously.


Step 6: Tighten the Seat Screws

Using the provided allen key, go back and tighten the screws on the bottom of the frame.

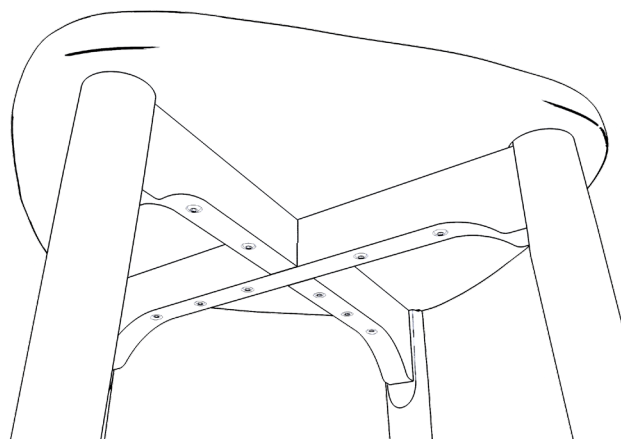


Step 7: Add the Wood Screws

Gently screw the pocket hole screws into the wood dowels.

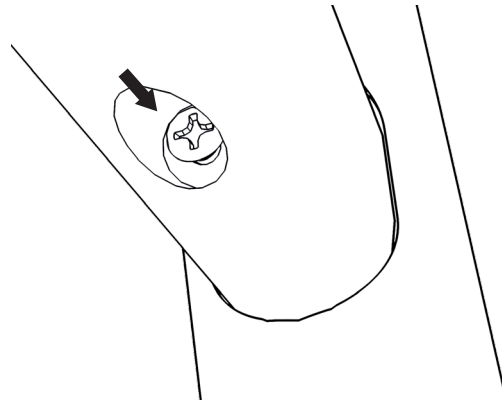

Step 8: Enjoy

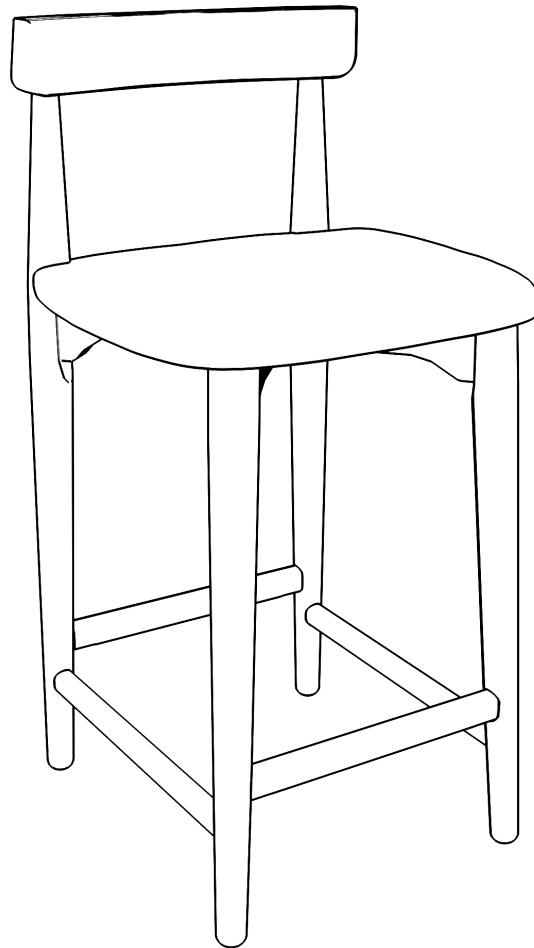

DONE!