
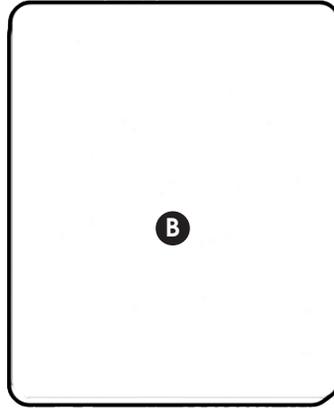




**ARMCHAIR**

# Gather Your Eggs...

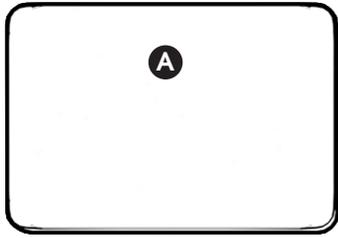

**A** BACK PILLOW

**B** SEAT CUSHION

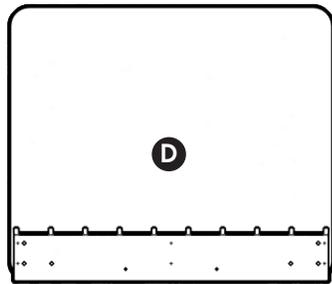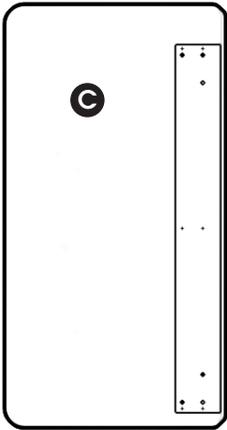


**C** 2x ARMS

**D** BACK PLATE



**E** FRONT PLATE

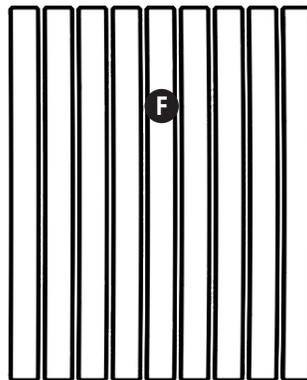


**F** 9x SLATS

---

Note: Please retain all boxes until you are certain that your product isn't damaged and that you do not wish to return it. Disposal of boxes may prevent/delay our ability to resolve your request.

---


## You should have:

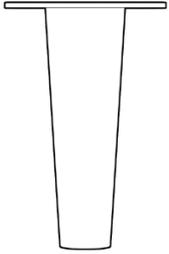

4x LEGS




16x SOCKET HEAD CAP SCREW

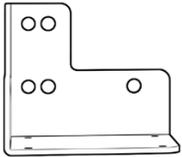


4x CORNER BRACKETS



24x BUTTON HEAD HEX SCREW  
(5 MM HEX BIT)

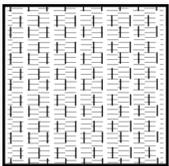

4x NEOPRENE  
STICKY PADS

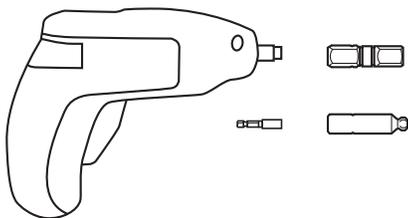


DRILL + EXTENSION  
5MM HEX BIT  
4MM BALL HEAD BIT  
USB CHARGER

*Note: Drill may need to be charged before use*

---


Note: Don't be surprised if you find a few extra screws or washers among your supplies. It's just our way of being extra sure you have everything you need.

## Step 1: Connect the Arms

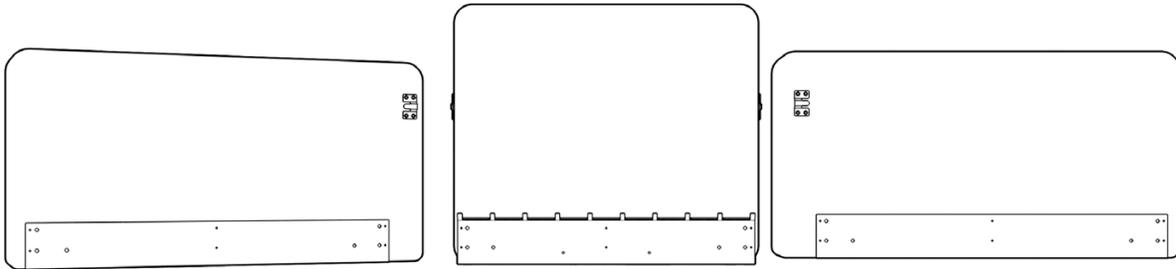

Let's start by connecting the arms to the back panel. Lay the back panel flat on the floor, workbench or other stable surface with the metal strip is facing up. The process is identical for both arms.

## Connect the Hooks

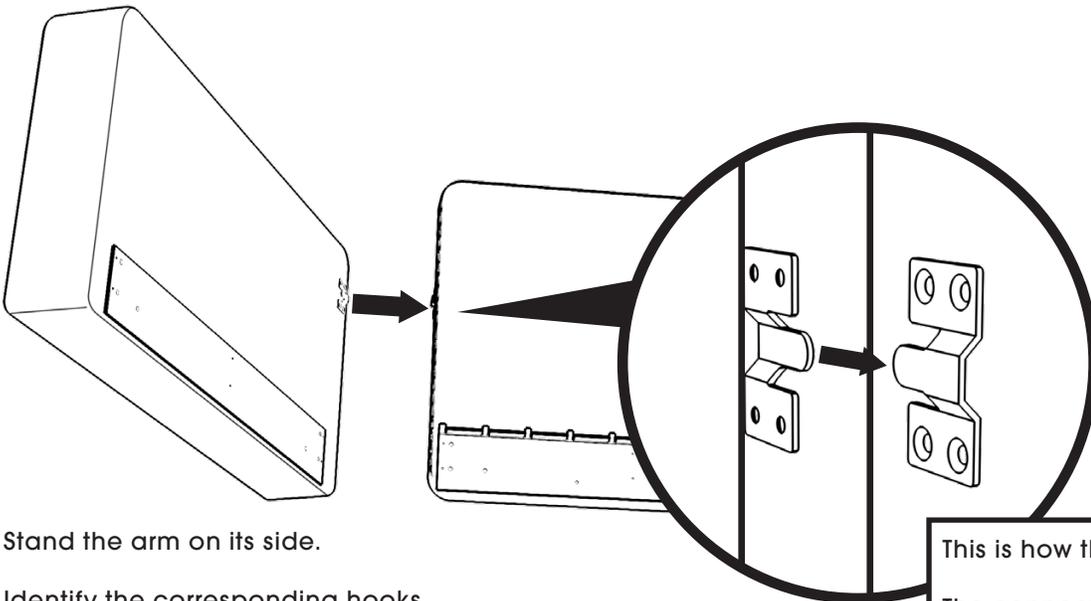


Stand the arm on its side.

Identify the corresponding hooks located on the arm and back panel.

This is how they connect.

The connection is the same for both sides

Align the arm and back panels so that the wooden frames meet at a right angle. Lean the arm slightly away from the back panel. Lift the top of the back panel and gently lower the hook until it connects. Repeat on both sides.

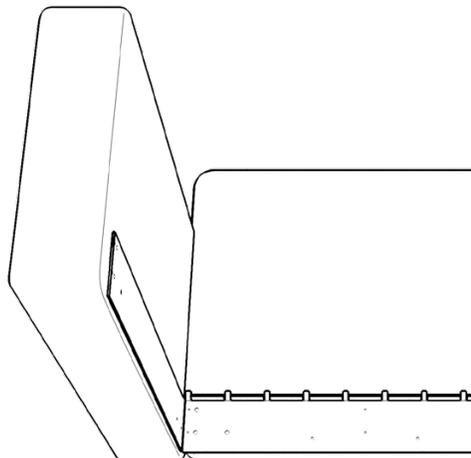

## Connect the Arms (Continued)




Place a corner bracket to connect the back and arm panels.

Put a 5mm button head socket cap screw in each of the three holes in the back panel. Loosely hand tighten only for now.

Screws will be tightened after they have all been placed.


Connect the corner bracket to the arm by hand-threading a button head socket cap screw into each of the three remaining holes.

Once all six screws have been connected, use the drill to fasten each bracket until secure.



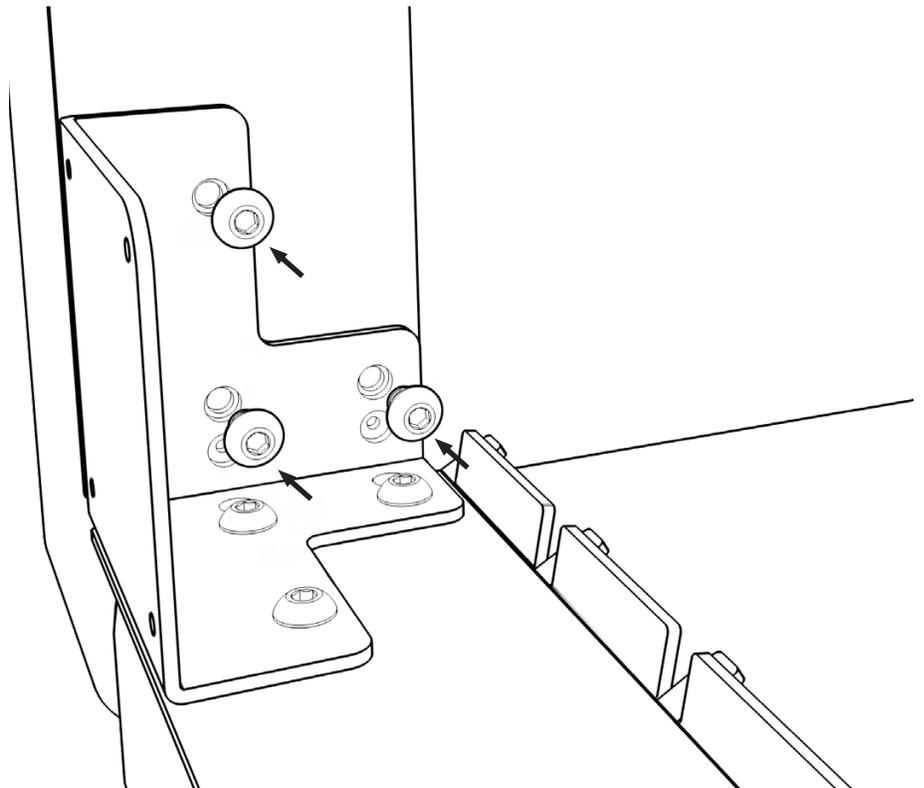


## Step 2: Attach the Front Plate

You'll Need: 1x FRONT PLATE  
2x CORNER BRACKETS  
12x 5MM BUTTON HEAD SCREWS

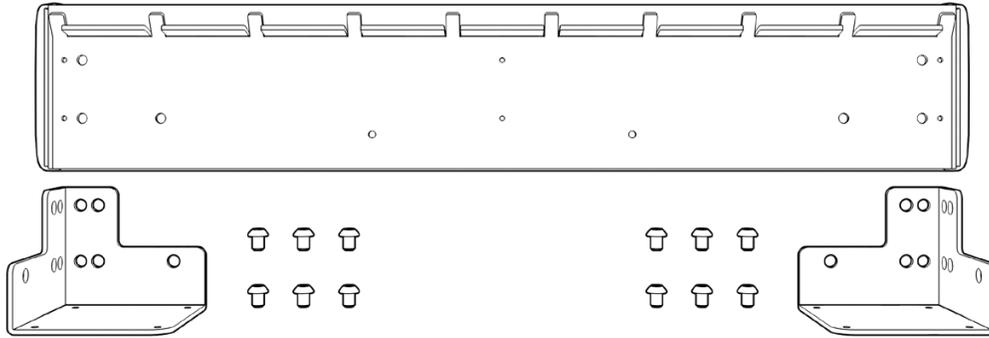

In this step we'll be adding the front plate. But first let's make sure everything is ready!

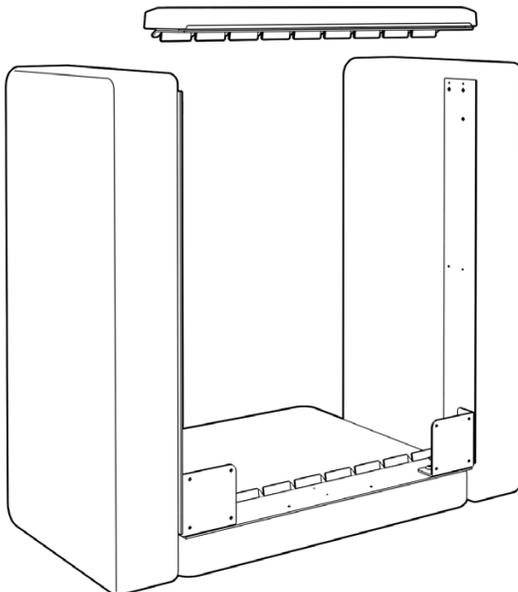
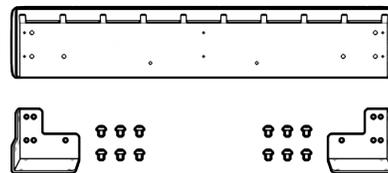
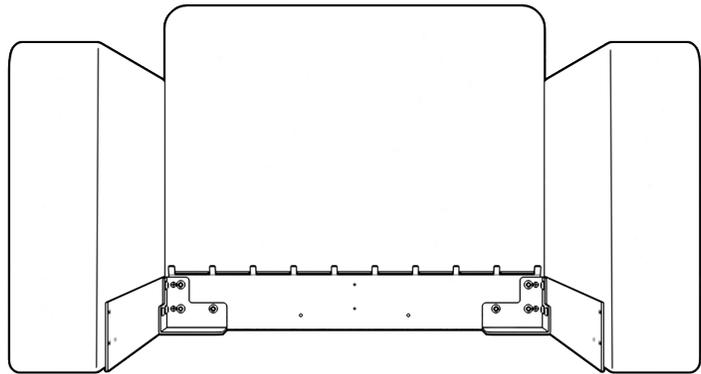


Set the front plate between the two arms as shown. Make sure that the flap of excess fabric is facing the top of the couch and hanging toward the inside of the frame.

This will ensure that the plate is rotated correctly.

## Attach the Front Plate (Continued)

Attach a corner bracket to the front plate using 3 bolts.  
Hand tighten only

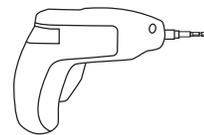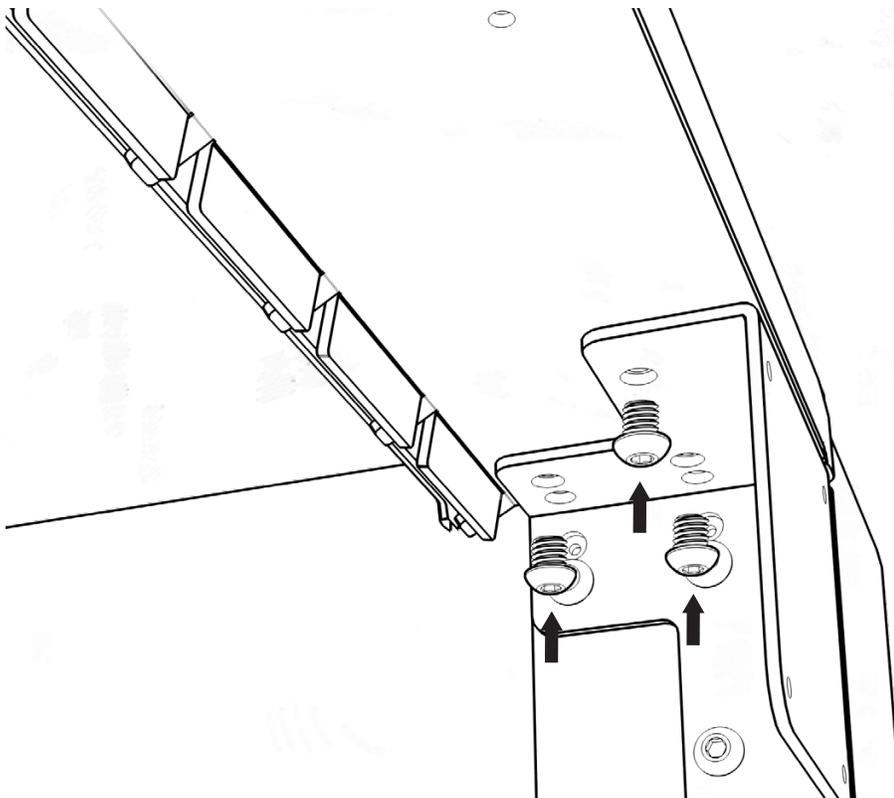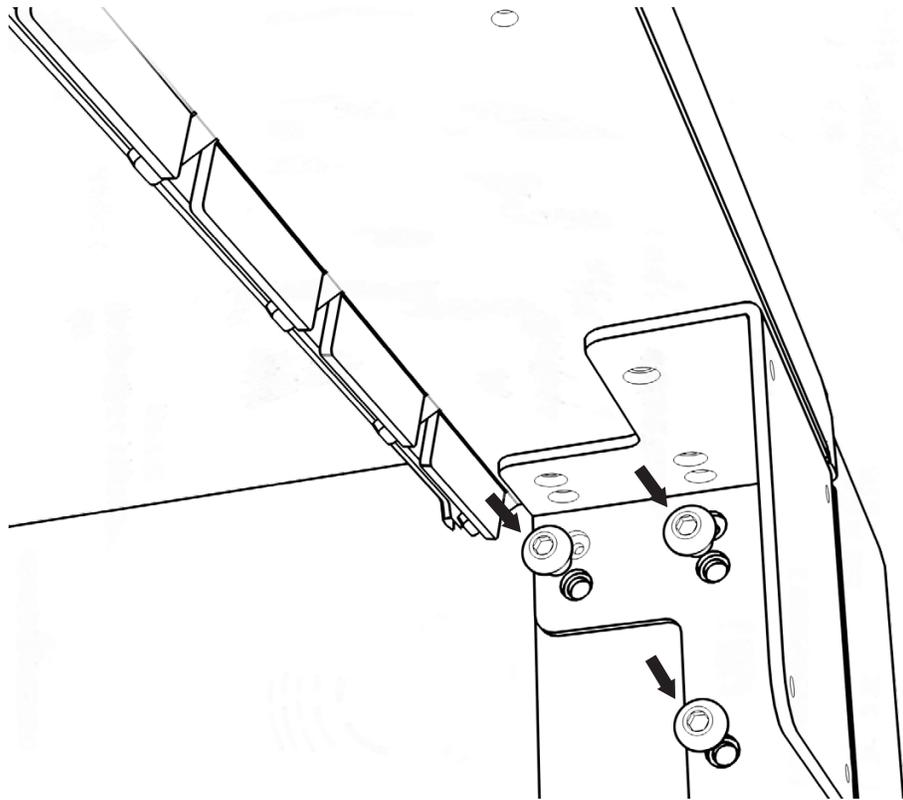

Hold the corner bracket flat against the front plate and add 3 more bolts to attach the bracket to the arm.



Go back over each screw and use the drill to tighten until secure.

## Step 3: Install the Legs

You'll Need: 4x LEGS


16x SOCKET HEAD CAP SCREW

Note: Our legs are universal, and are used across multiple products. All sofa and ottoman legs will attach securely with 4 fasteners per leg.

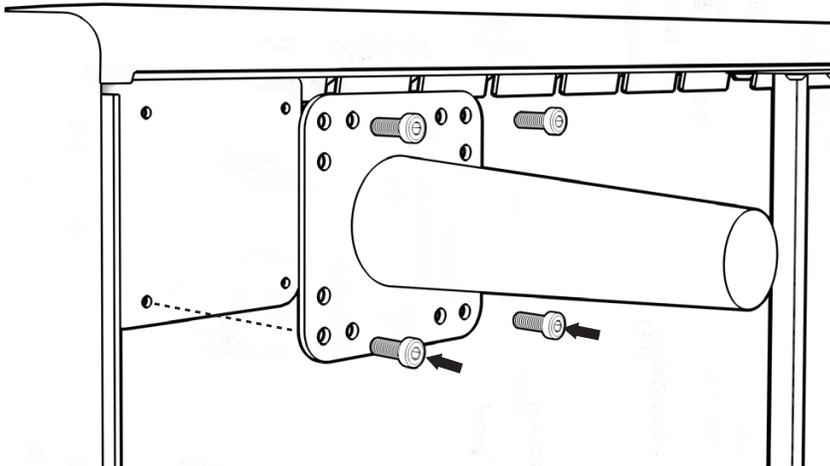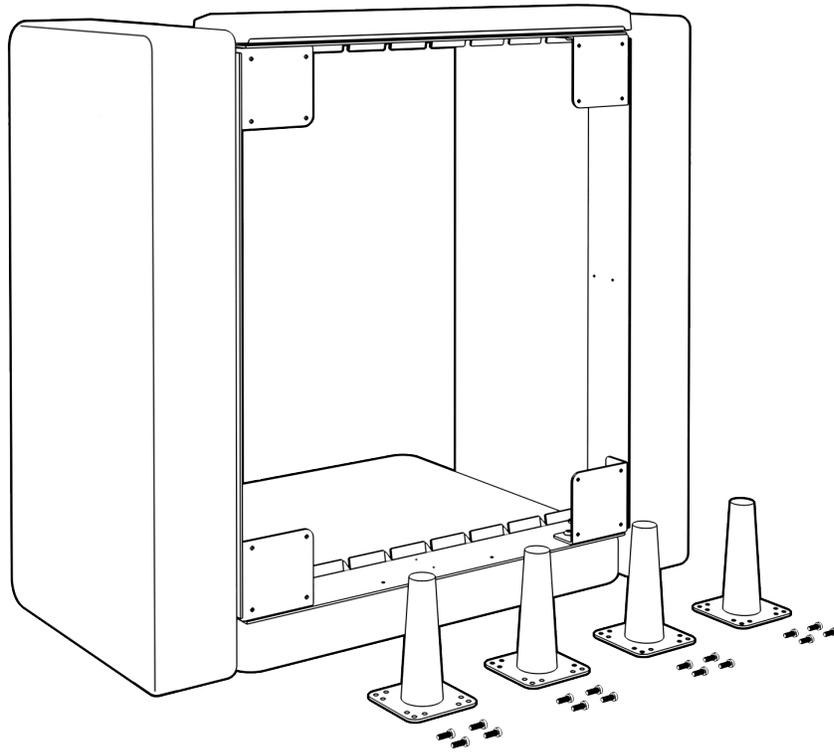

Start by aligning the leg over the mounting holes. Insert bolts into corresponding threaded holes as shown and tighten by hand.

Note: if you have flared legs, make sure that each leg points outward toward its respective corner.


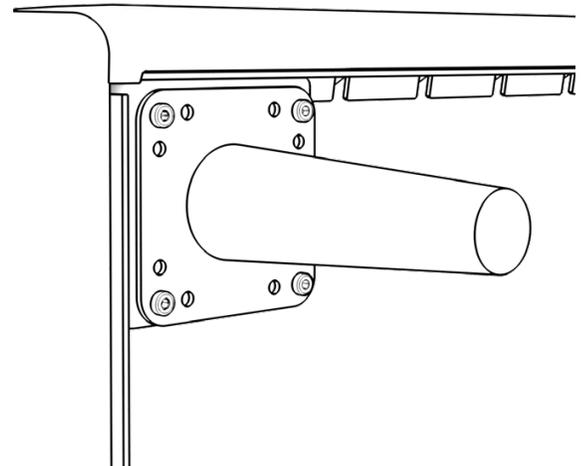


Once each bolt is started by hand, use the drill to finish securing the leg.

Repeat for all four legs.




## Step 4: Add the Neoprene Pads

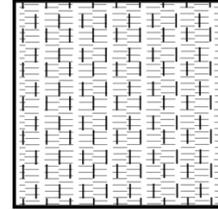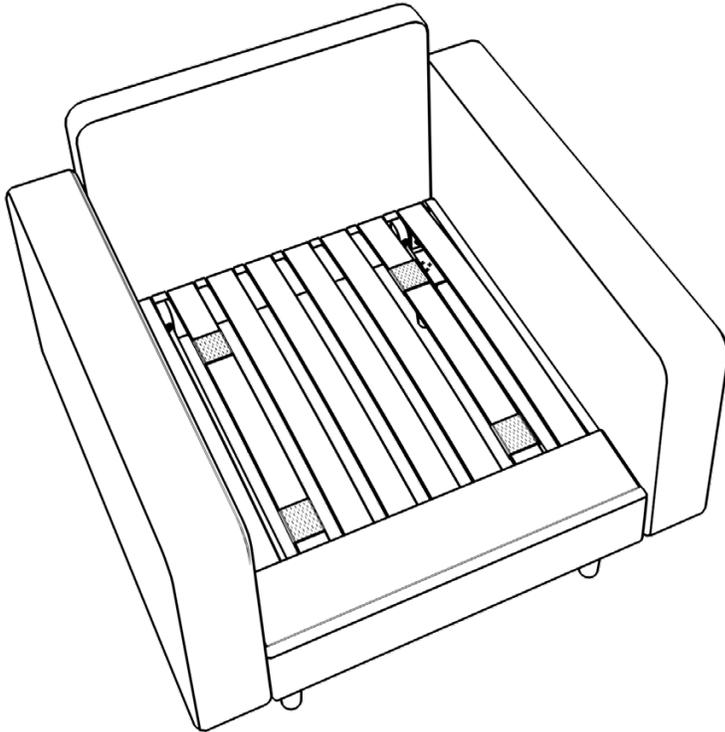

To keep the cushions from sliding add the non-slip neoprene pads.


2 pads will be stuck onto a slat.  
Only 2 of the slats of the sofa will need pads.

Please see diagram for correct placement.

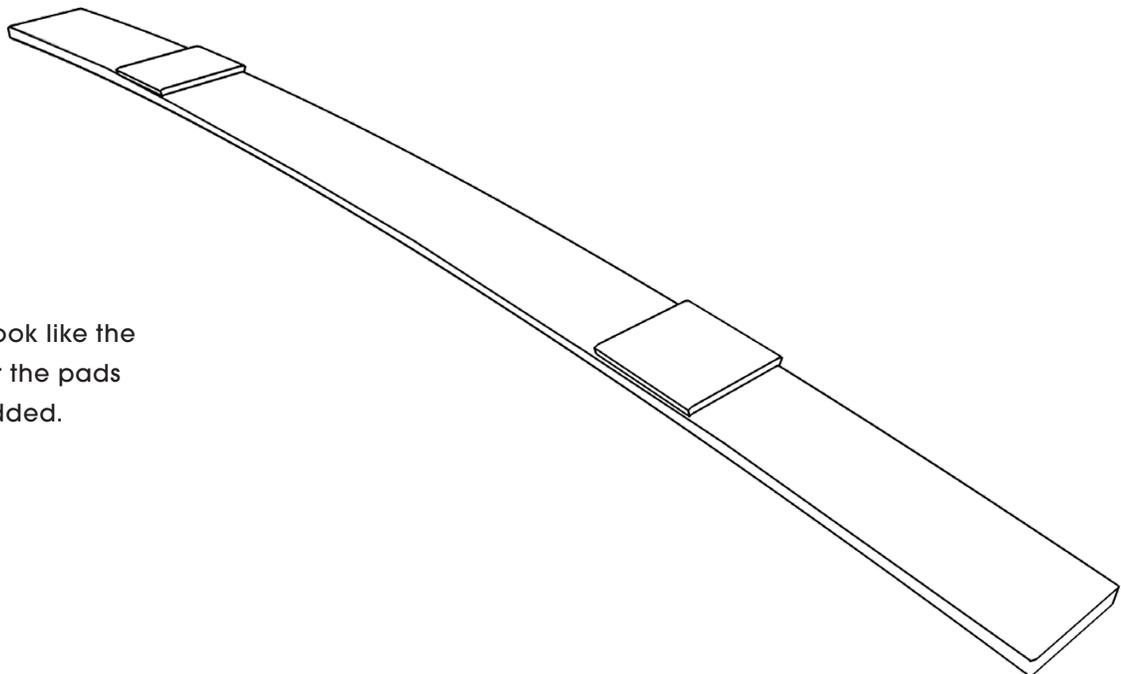


Slats should look like the diagram after the pads have been added.

## Step 5: Place the Slats

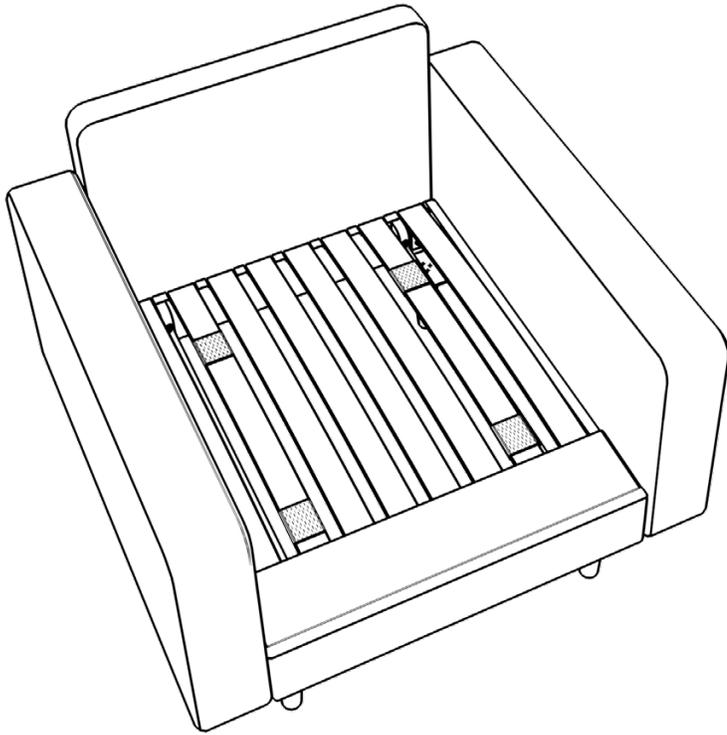


Lay a slat in each groove, as shown. Be sure they arch upward.

NOTE: You may need to gently coax some slats into place depending on how tightly everything has been assembled.

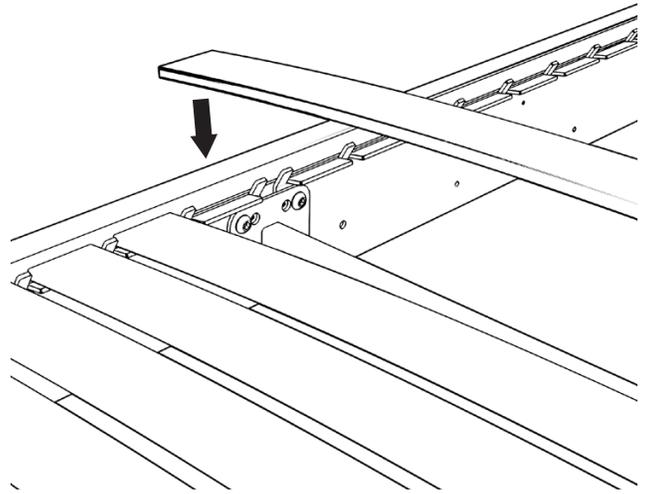

## Step 6: Add the Cushions

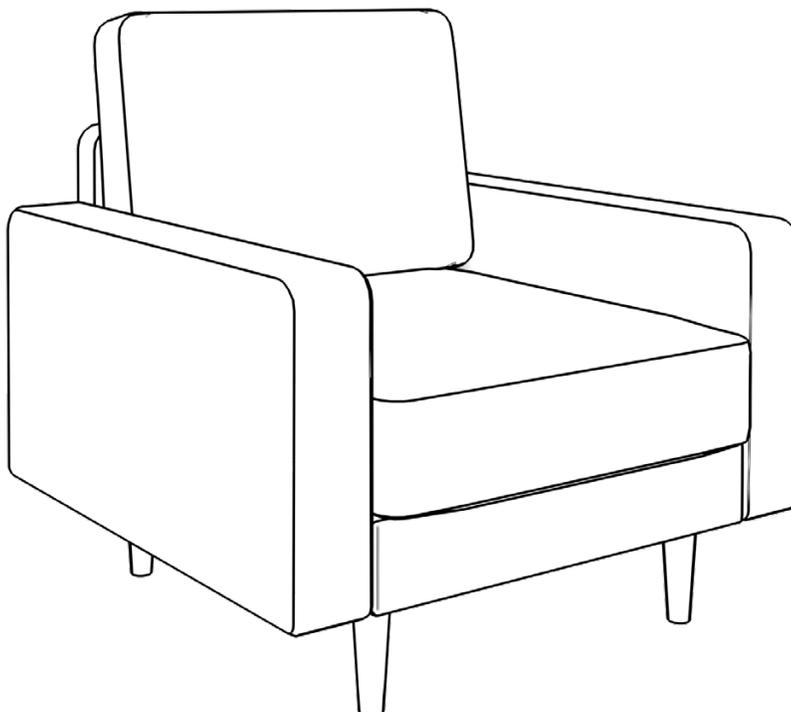

**DONE!**