


Inside Weather

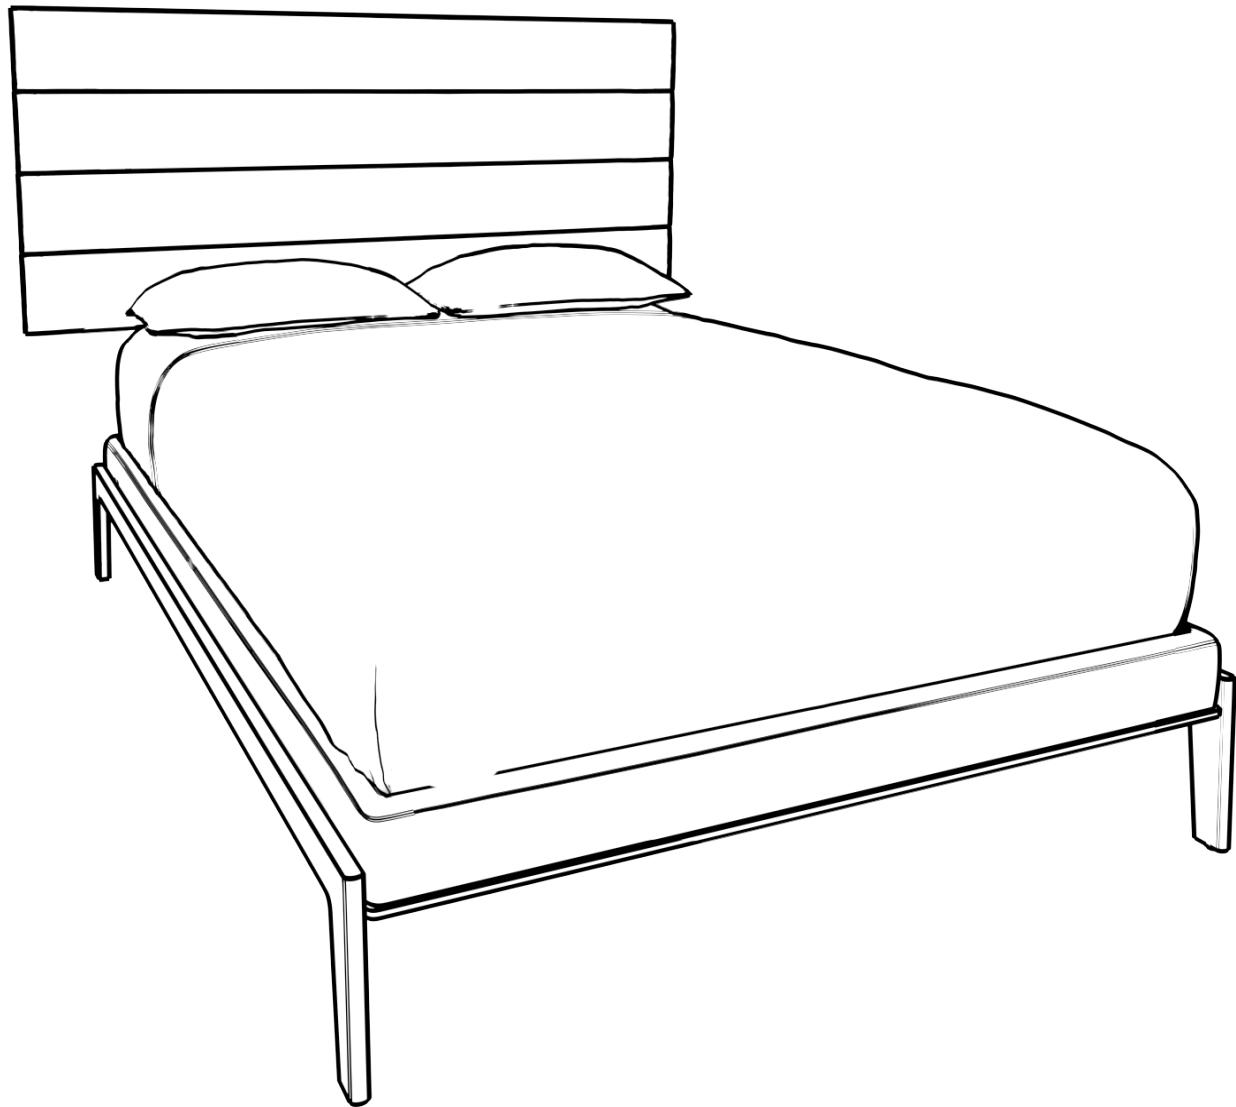


ASHBY HEADBOARD


Gather Your Eggs...



Headboard Tiles (Amount and Length Depend on Configuration)

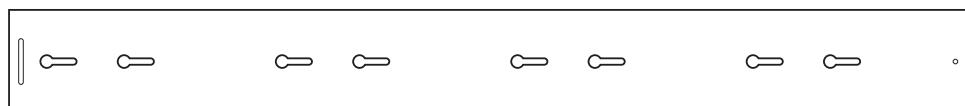


Uprights (Amount, Length and Hole Quantity Depend on Configuration)



Screws



Drywall Anchors

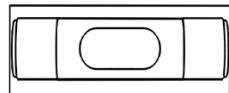


Level


Not included: Pencil for marking mounting locations, measuring tape, screwdriver

Note: Please retain all boxes until you are certain that your product isn't damaged and that you do not wish to return it. Disposal of boxes may prevent/delay our ability to resolve your request.

Reference Diagram

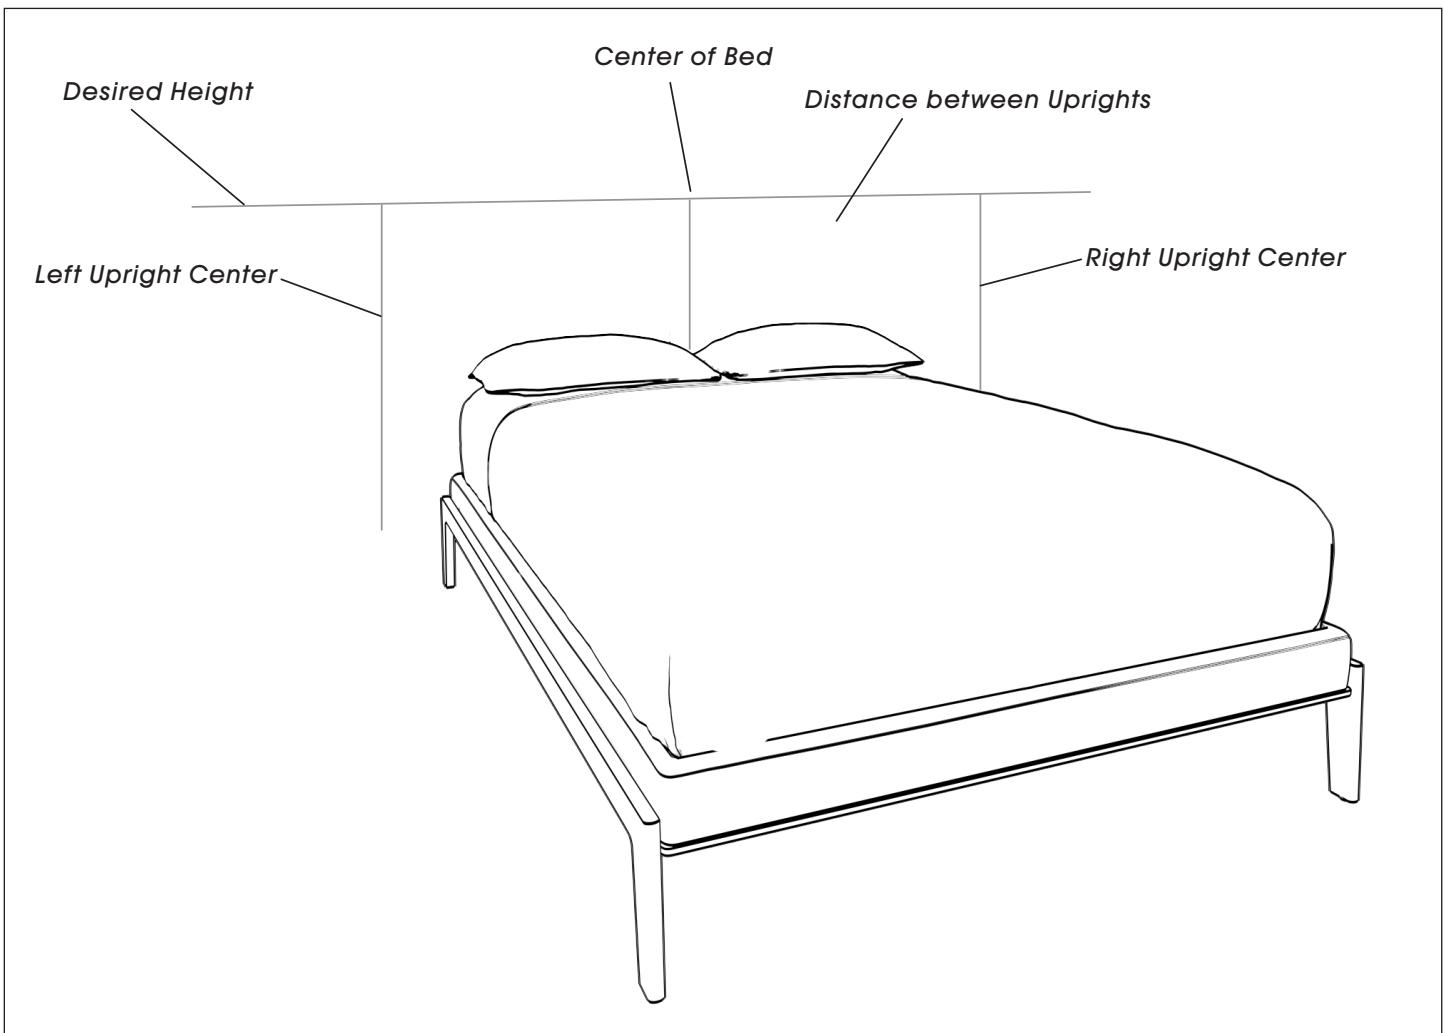


Assembled Headboards: Front

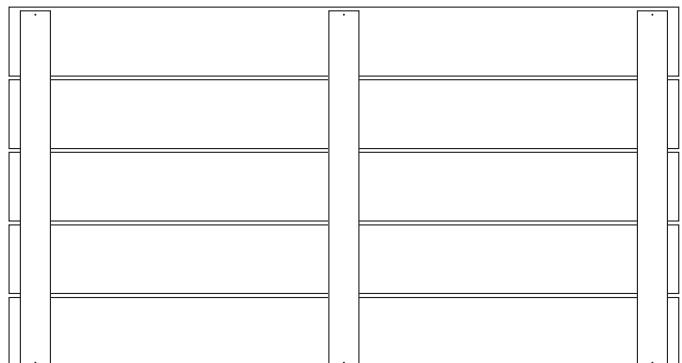

Assembled Headboards: Back



Step 1: Mark Your Center Height

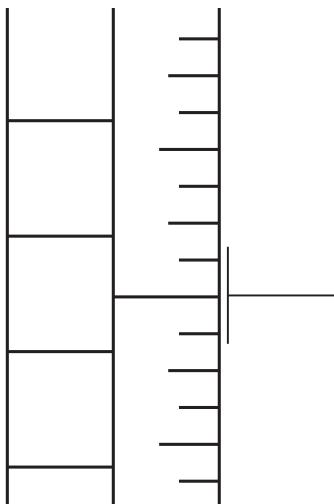

Mark your desired height by placing a crosshair at the center of where your headboards will be mounted. Headboard will stick up 3/8 of an inch from this mark.


Step 2: Mark Outside Center Widths

Mark distance 'A' from center point for left and right uprights.

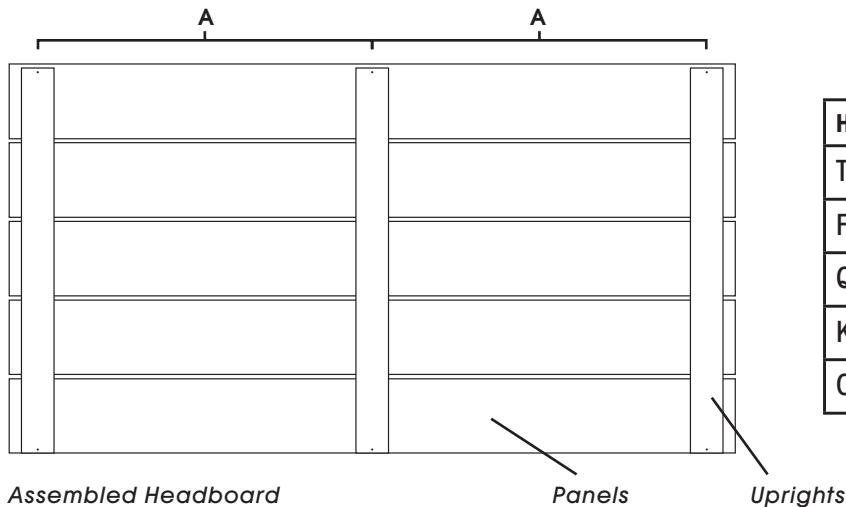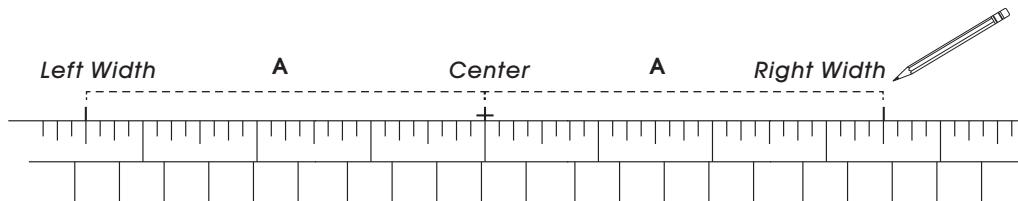


HEADBOARD SIZE	DISTANCE "A"
Twin	19.5"
Full	30.5"
Queen	30.5"
King	38.5"
Cal King	38.5"

Step 3: Mark Your Upright Height

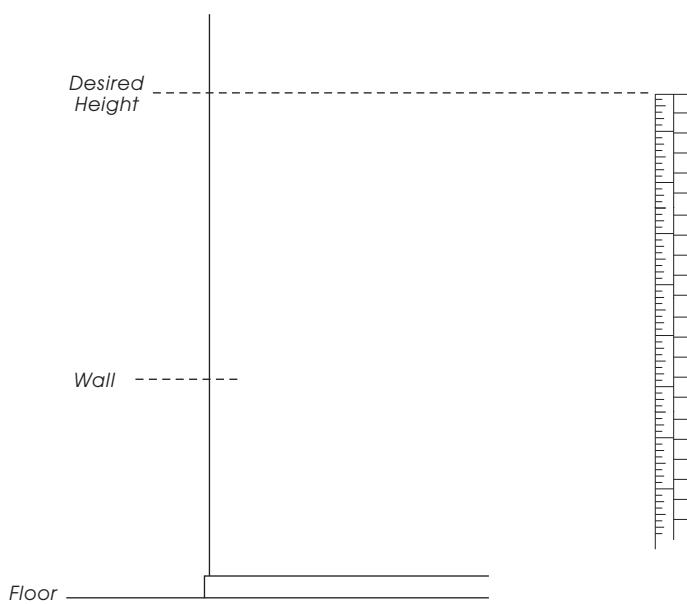

Measure from the floor to your initial desired height, marking that height at each of your marked vertical lines.

Step 4: Mark Upright Width

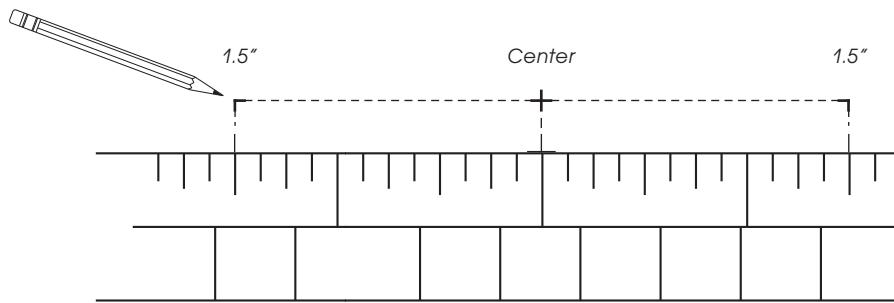

Measure and mark 1.5" on each side of the center vertical lines for all your uprights.

You should end up with markings for every upright like the diagram shown here.




Step 5: Remeasure

Remeasure all lines to verify you have marked the correct locations.


Check for studs at marked locations. If your markings land on a stud, omit the drywall anchor at that location for future steps.

Step 6: Drill Pilot Hole


Align Uprights. Place your upright upside-down. Use the hole in the bottom of the upright to help guide a provided screw. Gently drill in screw just enough to mark the drywall.

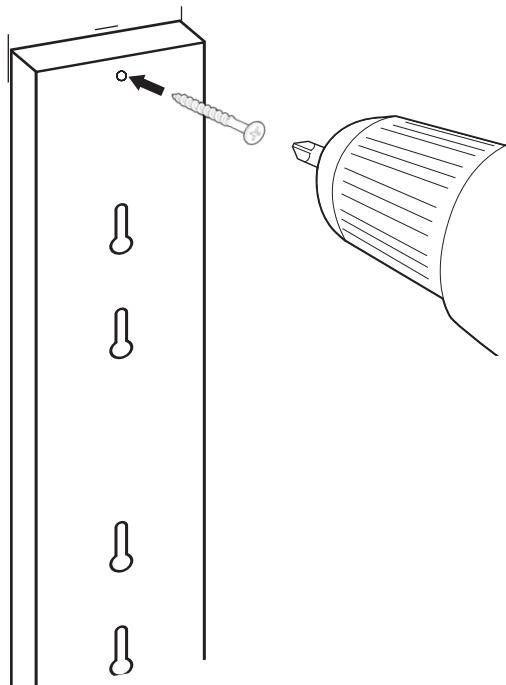



Remove the Upright slat.
Verify the pilot hole.

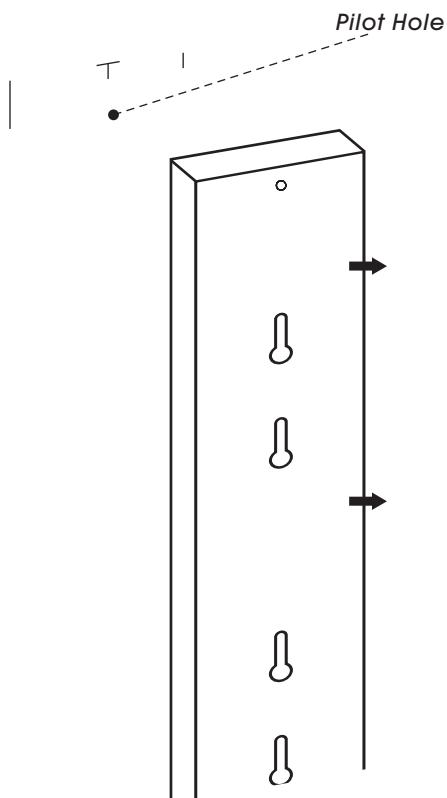

Step 7: Drill Into Drywall

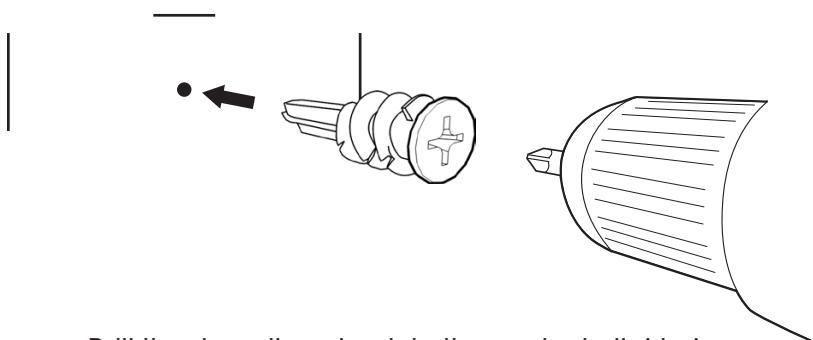

Drill the drywall anchor into the marked pilot hole.

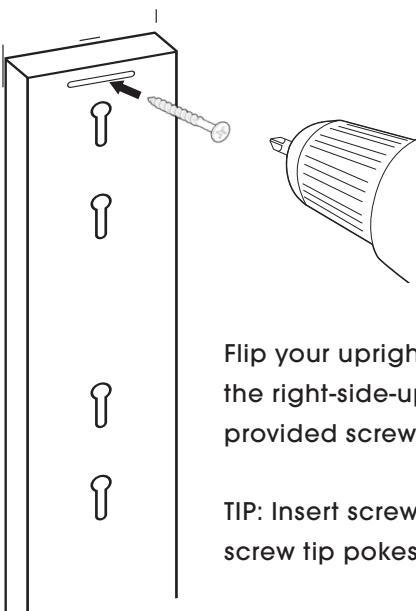
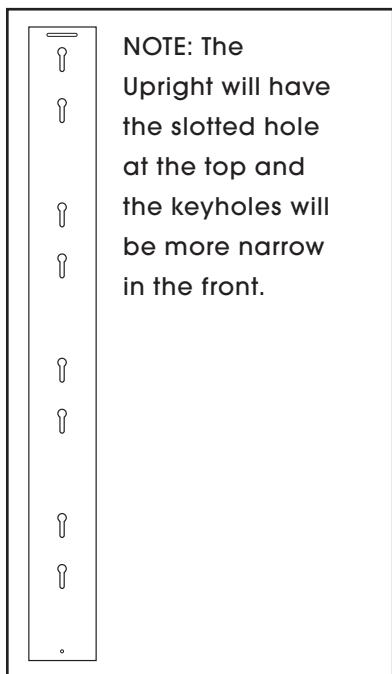


Flip your upright with the slotted hole at the top (this is the right-side-up). Attach Uprights to wall anchors using provided screws.

TIP: Insert screw part way through the upright so the screw tip pokes out to make alignment easier.

NOTE: Only drill into the top holes at this point.

All three Uprights should look like this. The bottoms should swing somewhat freely.

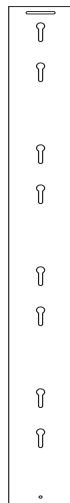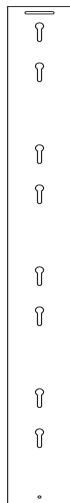


Step 8: Place Headboard Panels


Attach all headboard panels except the bottom one. Start from second lowest and work your way up.

Push the screw heads of the headboard panel into the slots on the upright and sliding down.


A

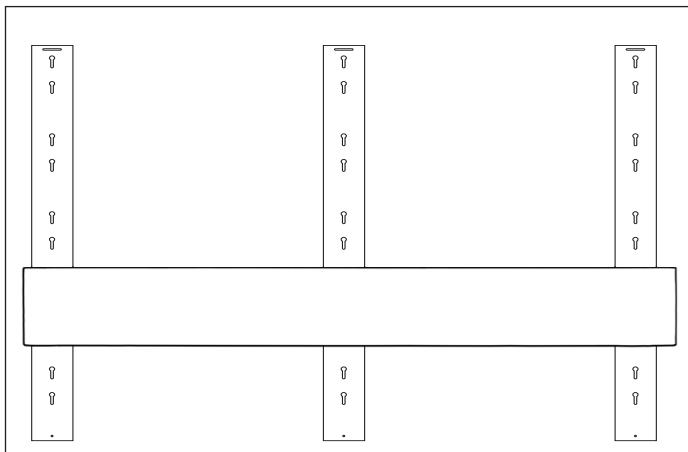


B

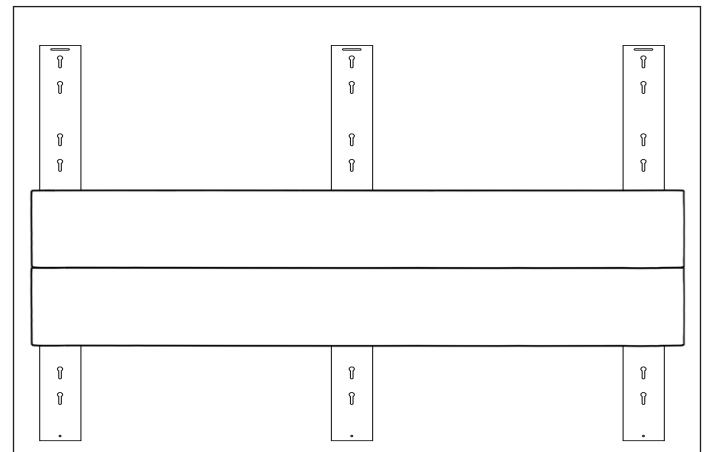

C


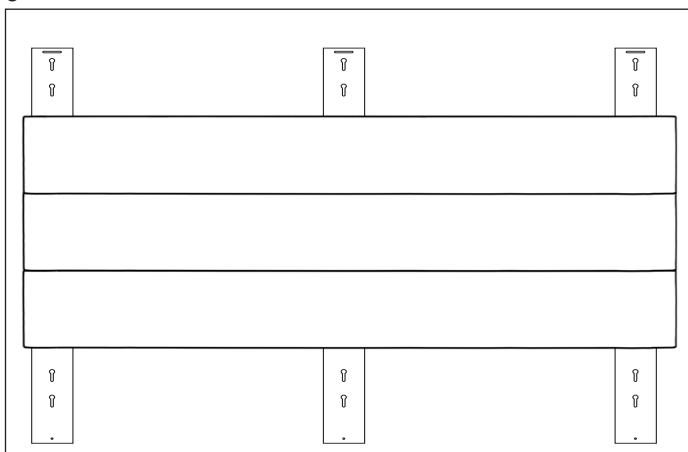


D

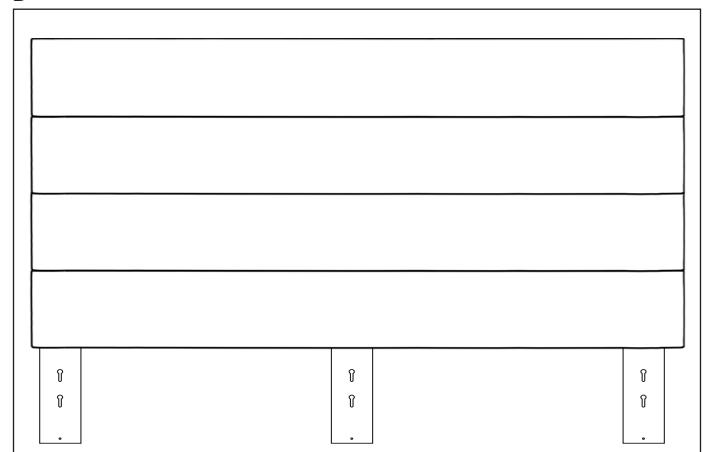


Step 9: Level



Use the provided level on the top headboard panel. Shift the uprights until level.

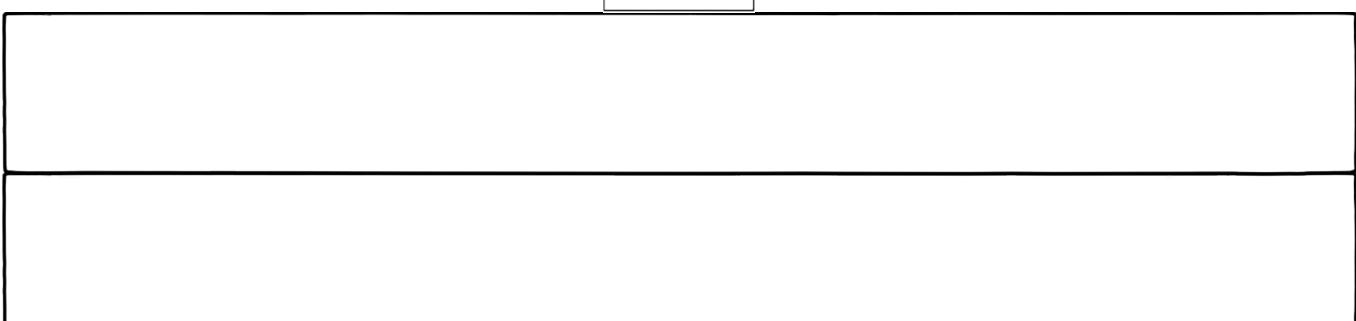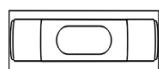



Step 10: Drill Lower Pilot Hole

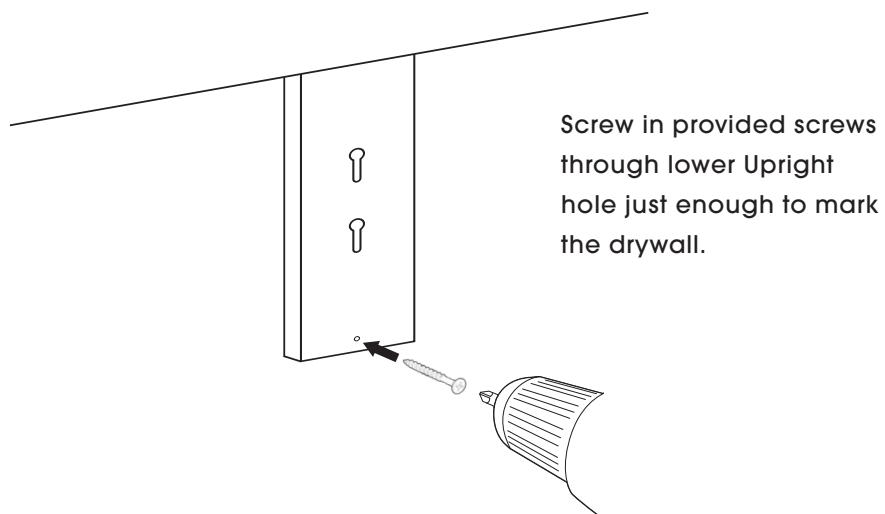


Step 11: Drill Into Drywall

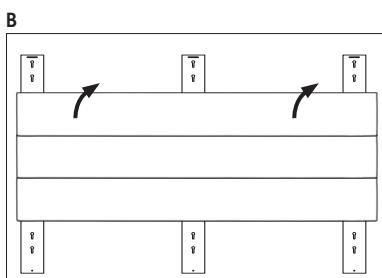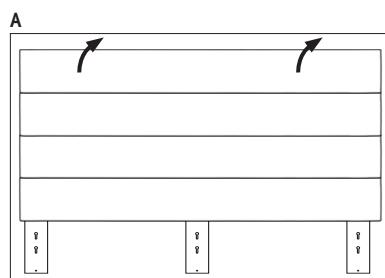


Remove headboard panels by lifting panel up and then pulling out. Start at the top and work your way down.

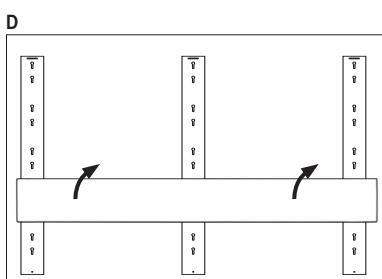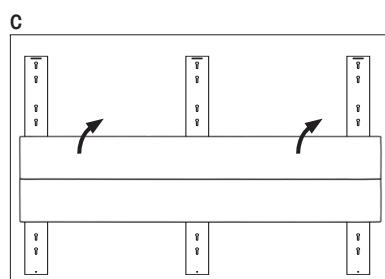

Rotate Uprights out of the way. Drill the drywall anchors into the pilot holes.

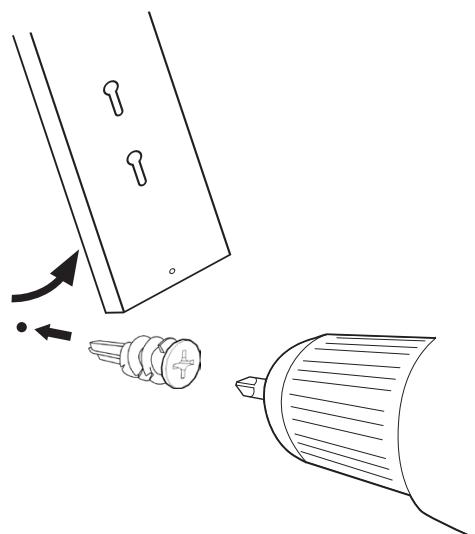


Step 11: Drill Into Drywall (Continued)

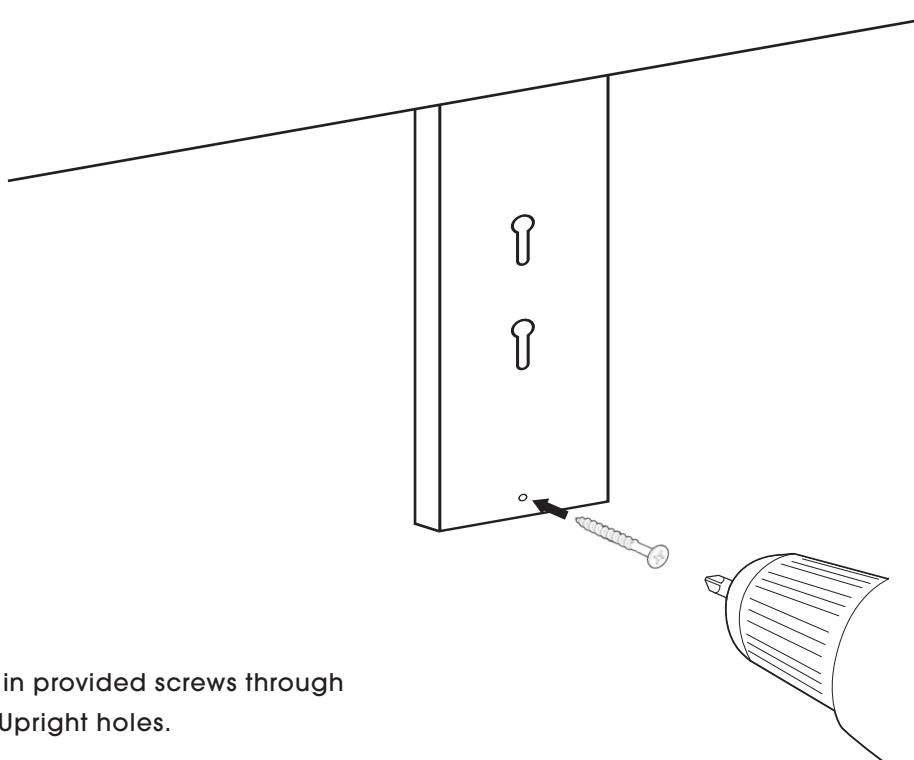


Step 12: Attach Headboard Panels

Once the Uprights are properly anchored to the wall, with the appropriate distance between them, begin attaching each headboard panel from the bottom up.

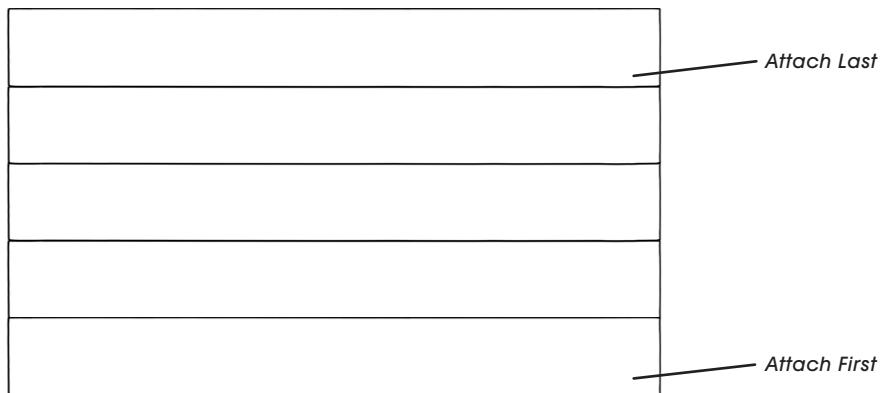

Step 13: Relax

Once all your Headboard Panels are attached,
jump into bed and enjoy the weather!

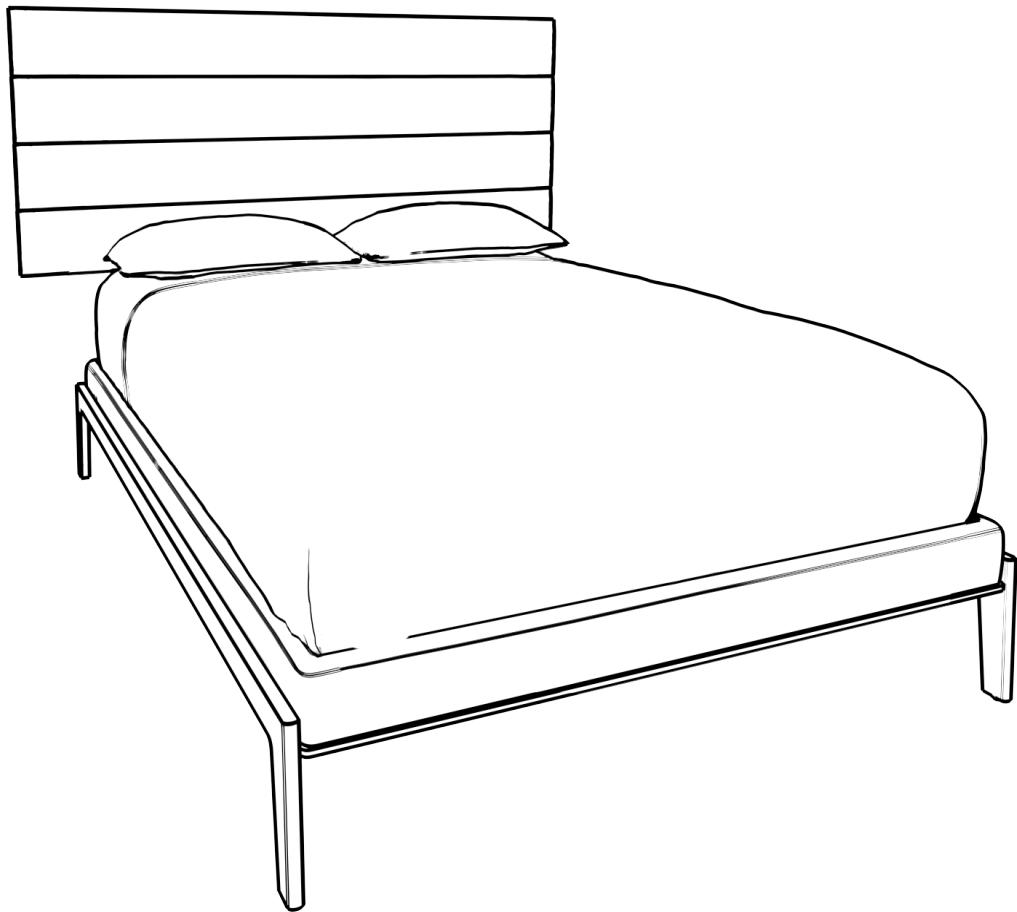

DONE!