



Inside Weather

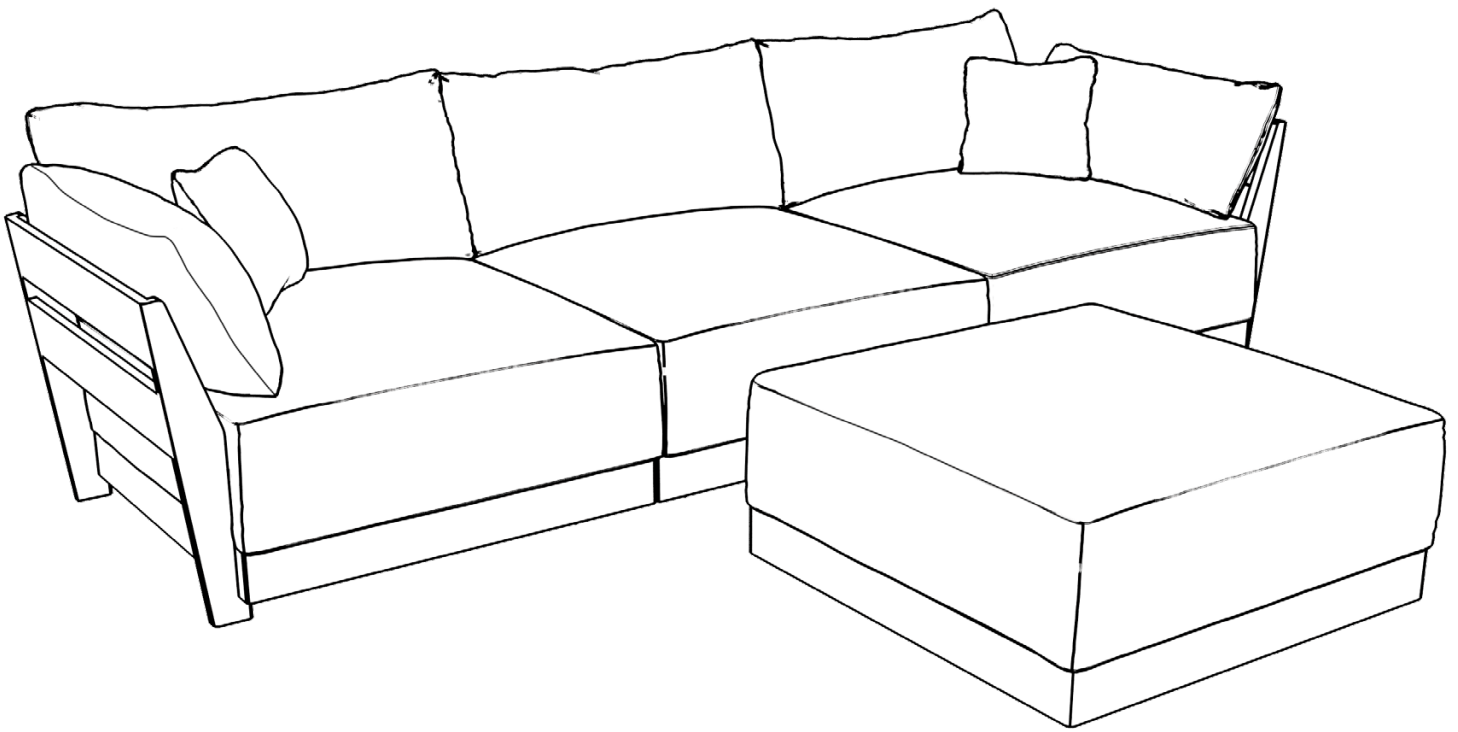


BONDI SOFA

Gather Your Eggs...


The parts shown here are all the available options. The parts you have will depend on your custom order.

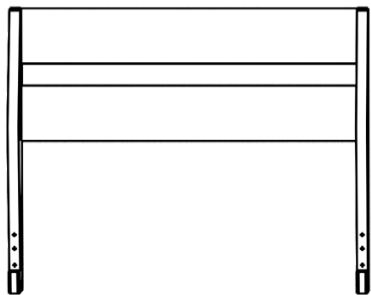

Back / Arm

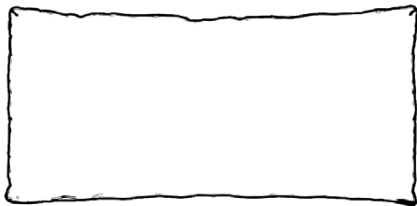


Back Pillow




Leg




Arm Pillow

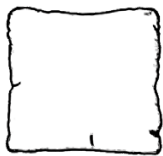

Accent Pillow

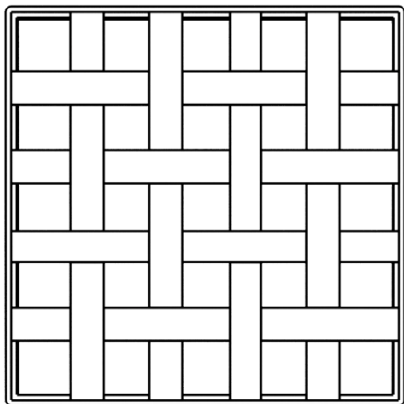

Seat Frame

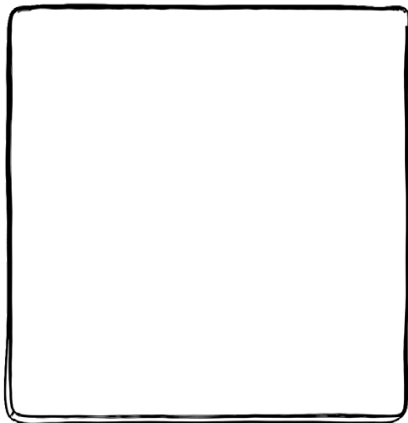


Seat Cushion



Button Head Hex Screw



Washer

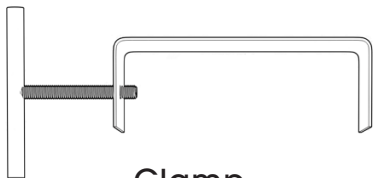


Clamp



Allen Key


Note: Please retain all boxes until you are certain that your product isn't damaged and that you do not wish to return it. Disposal of boxes may prevent/delay our ability to resolve your request.

Step 1: Assemble Ottoman Frame

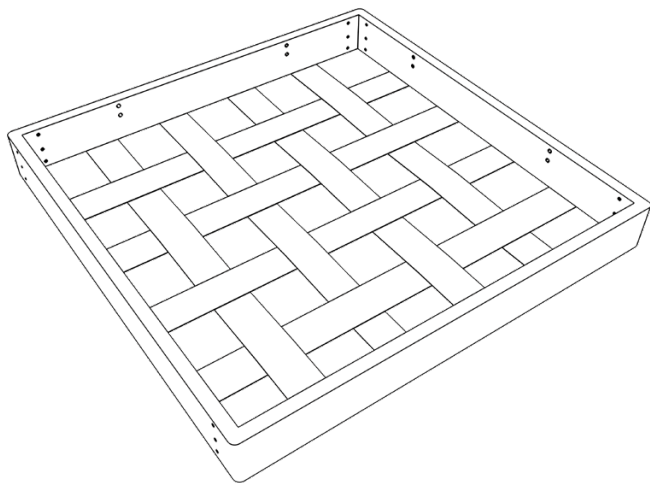


Place the ottoman frame upside down (with the straps down) on a soft surface to protect from scratches.


NOTE: The seat and ottoman frame are slightly different. The seat frame has 3 holes on each corner (to attach the back / arm frame) where the ottoman frame does not.

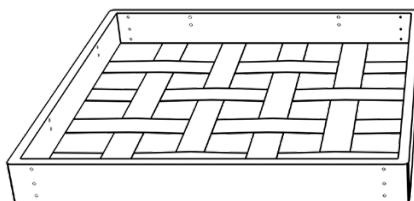


Seat Frame

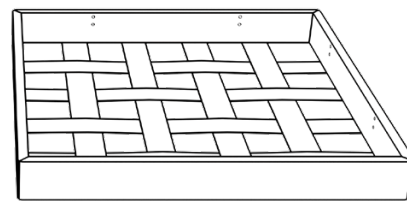

Ottoman Frame

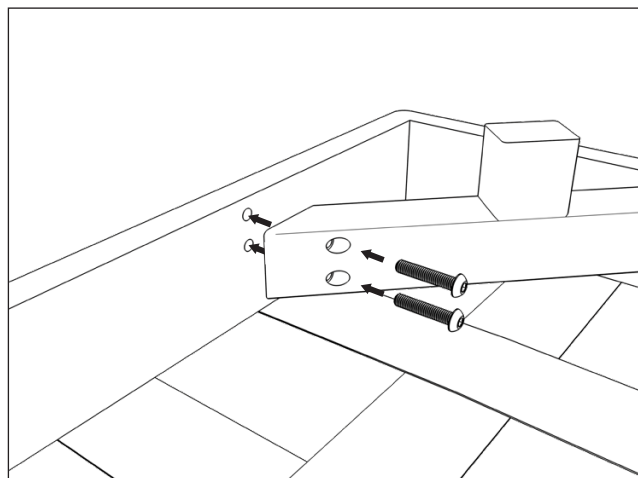


Align the leg to the corner of the frame and use the hex screws to fasten together.

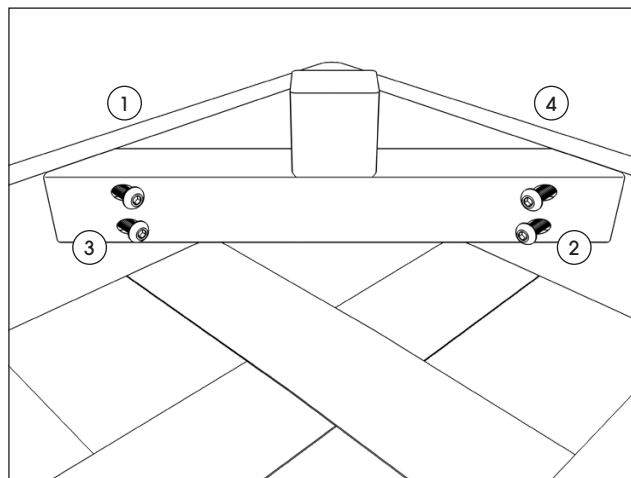


Note: Screw in the hex screws in alternating order. Repeat for all four corners.

Step 2: Upholster the Seat Cushion

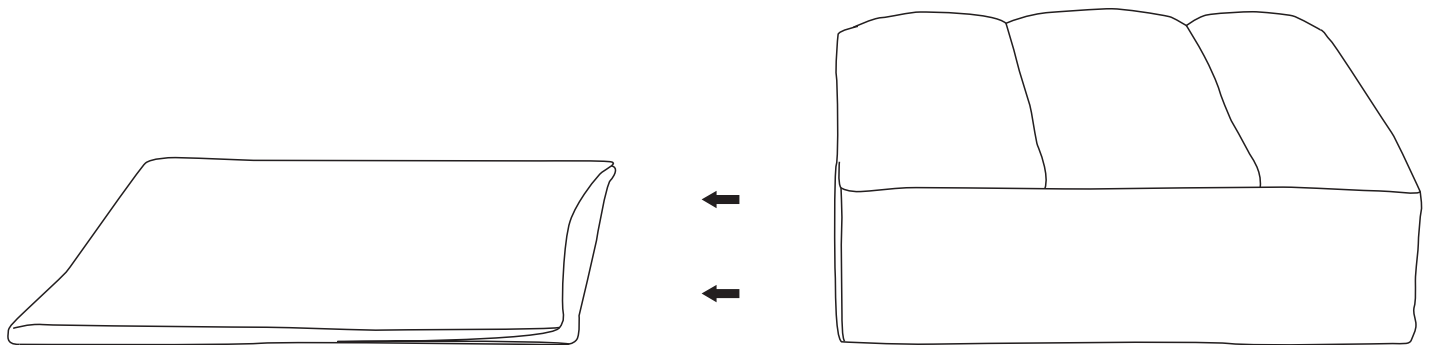


Cover your cushion with the upholstery. The Dacron layer will be the top layer of the cushion and should be inserted perpendicular to the upholstery opening. Make sure the zipper is on the bottom of the cushion.

Flip over the ottoman frame and add the cushion.

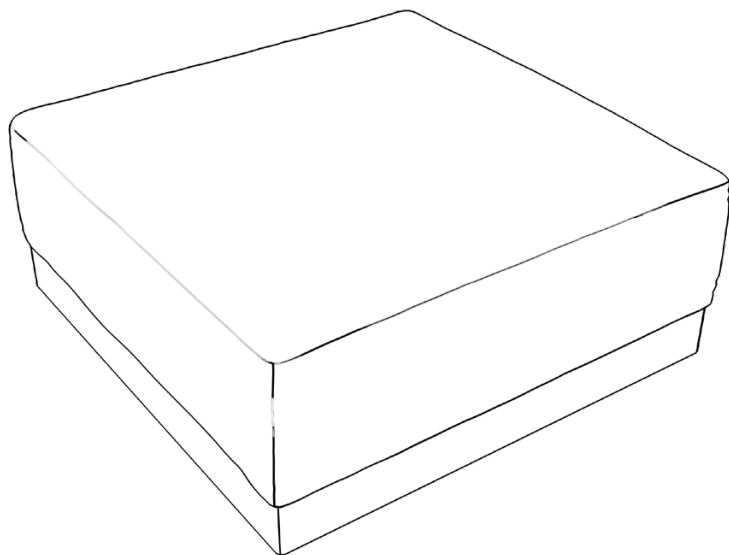



Step 3: Assemble Sofa Frame

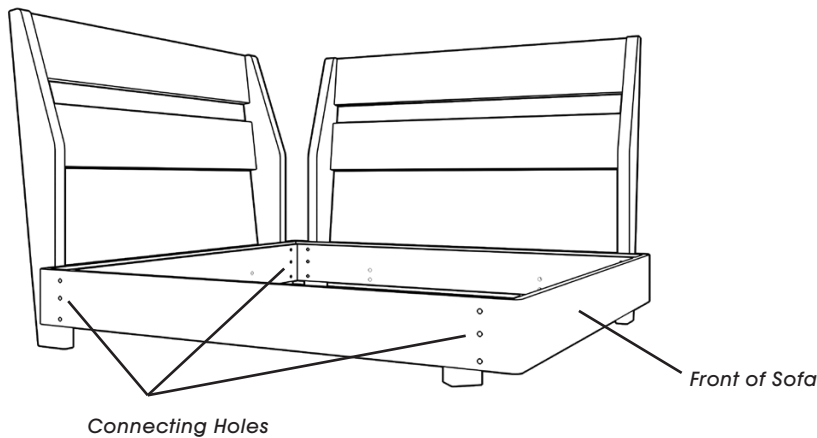

NOTE: Before starting, align your legs and backs with the holes in the sofa frame. There will be no holes going all the way through the front of the frame.

Pictured here is the frame with the legs and backs already attached. We'll cover that in the next steps.


ALIGNMENT DIAGRAM

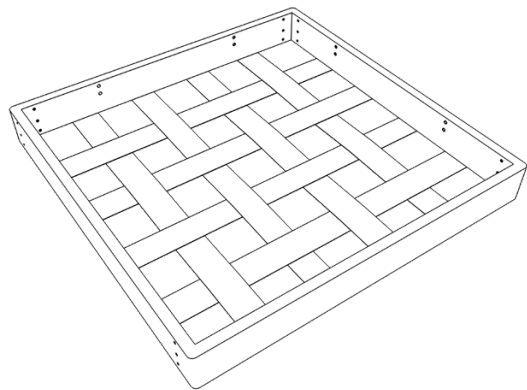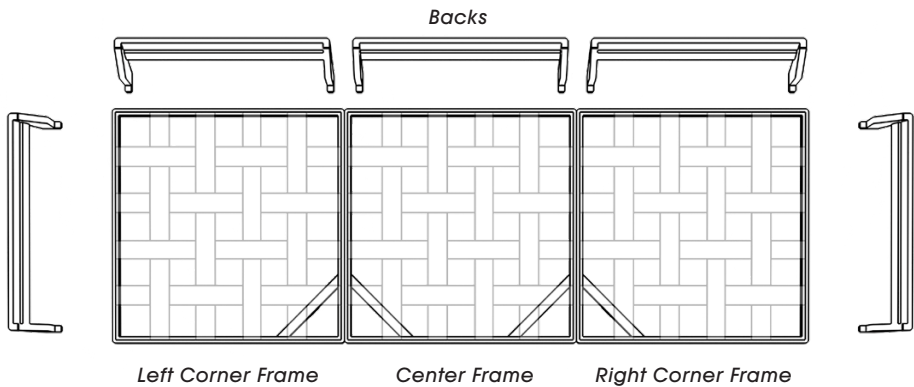


Place the sofa frame upside down (with the straps down) on a soft surface to protect from scratches.

Fasten the hex screws following the same instructions as the previous step.

Note: A leg only needs to be attached on the corners that won't have a back attached. See diagram above

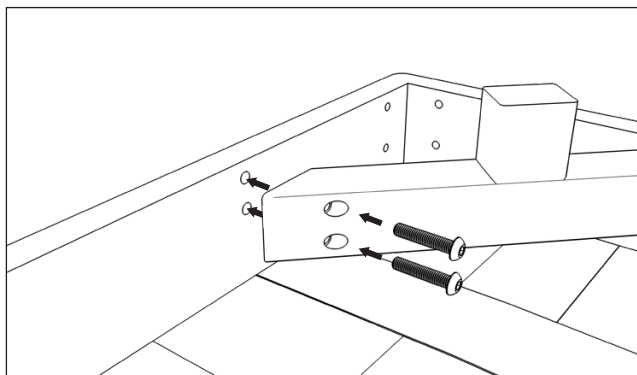


Align the leg to the corner of the frame and use the hex screws to fasten together.

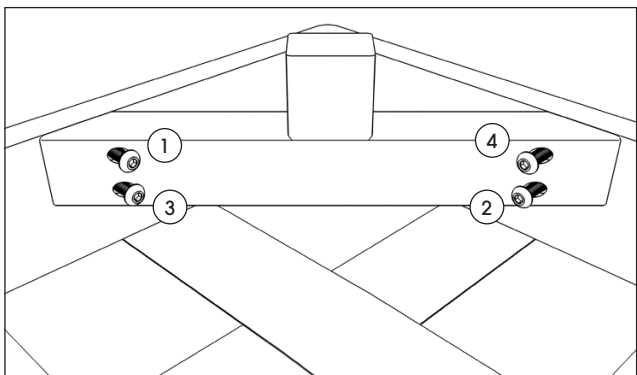


Note: Screw in the hex screws in alternating order.


Step 4: Attach Sofa Backs

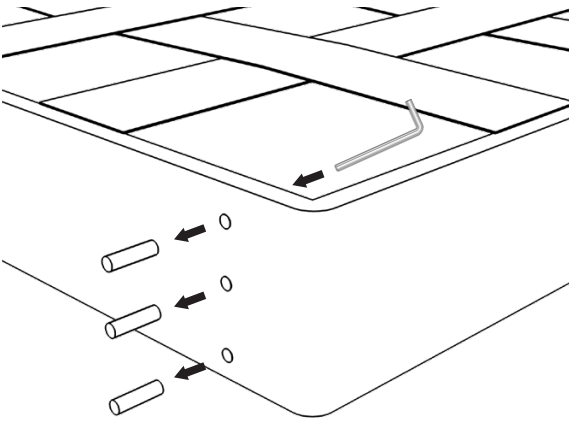


NOTE for sofas that will be in the ARMCHAIR configuration:
The wood frames have wood plugs that must be removed when installing the back frame. Use the provided allen key and gently push outward from the inside of the frame to remove the plugs.

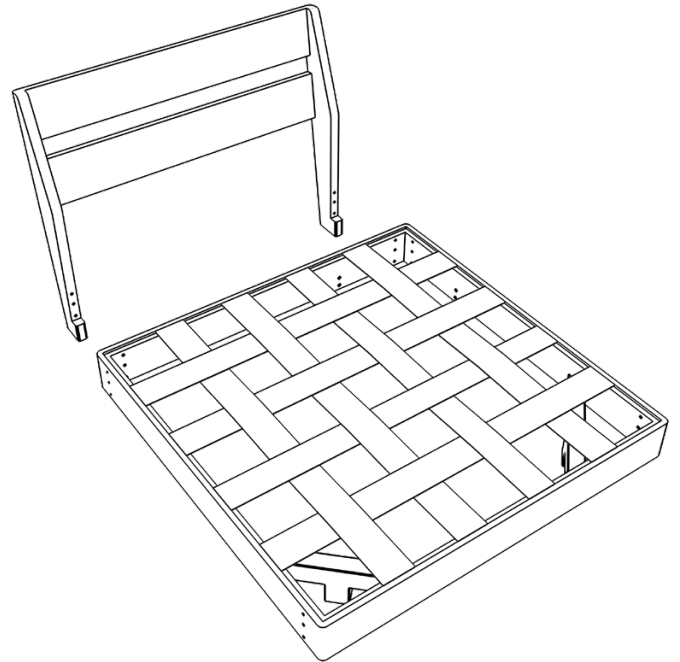

Flip the frame right side up. Align the sofa backs on the opposite side of the frame from the two front legs.

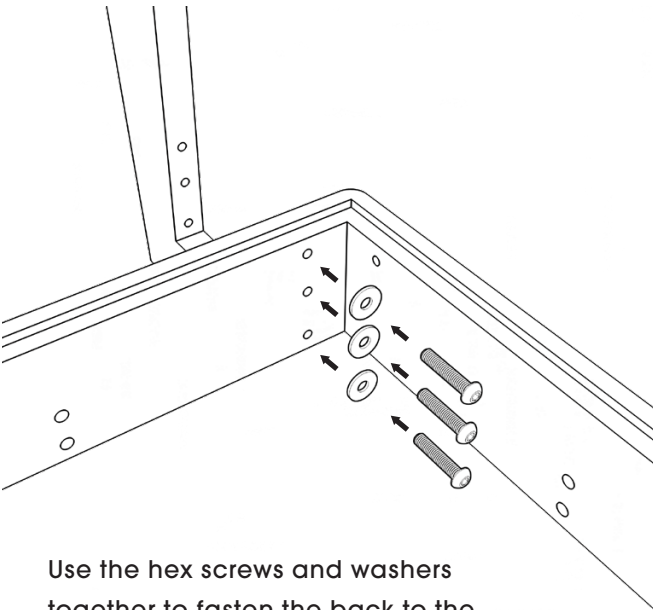


Use the hex screws and washers together to fasten the back to the frame corners.

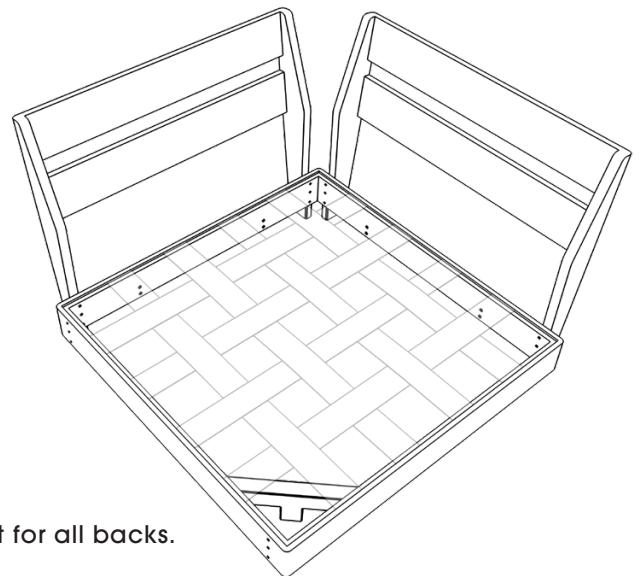


Repeat for all backs.

Step 5: Clamp Frame Together

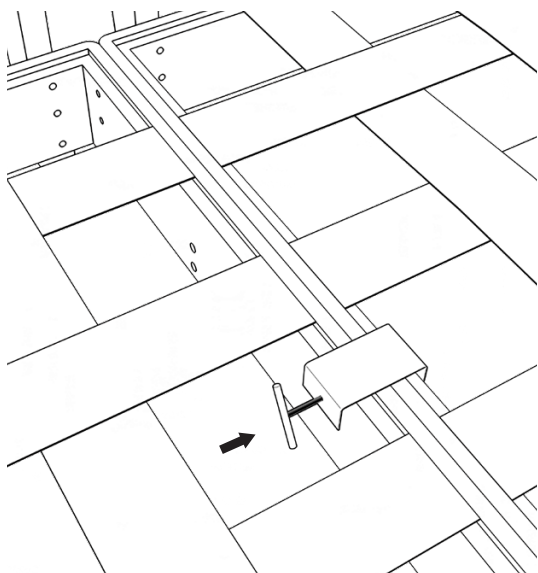


Align the sofa frames together and join each with a clamp. Twist the knob to tighten.

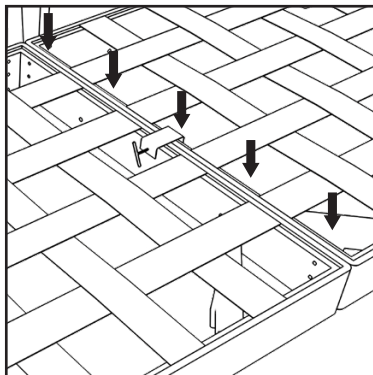

NOTE: The clamp can be installed at any of the points shown. Alternatively, it may also be installed anywhere along the bottom of the frames. If the bracket is difficult to install, try rearranging the frames so that the flattest sides of the frames are together.

Step 6: Add Pillows

Add the seat cushions, back & side pillows.

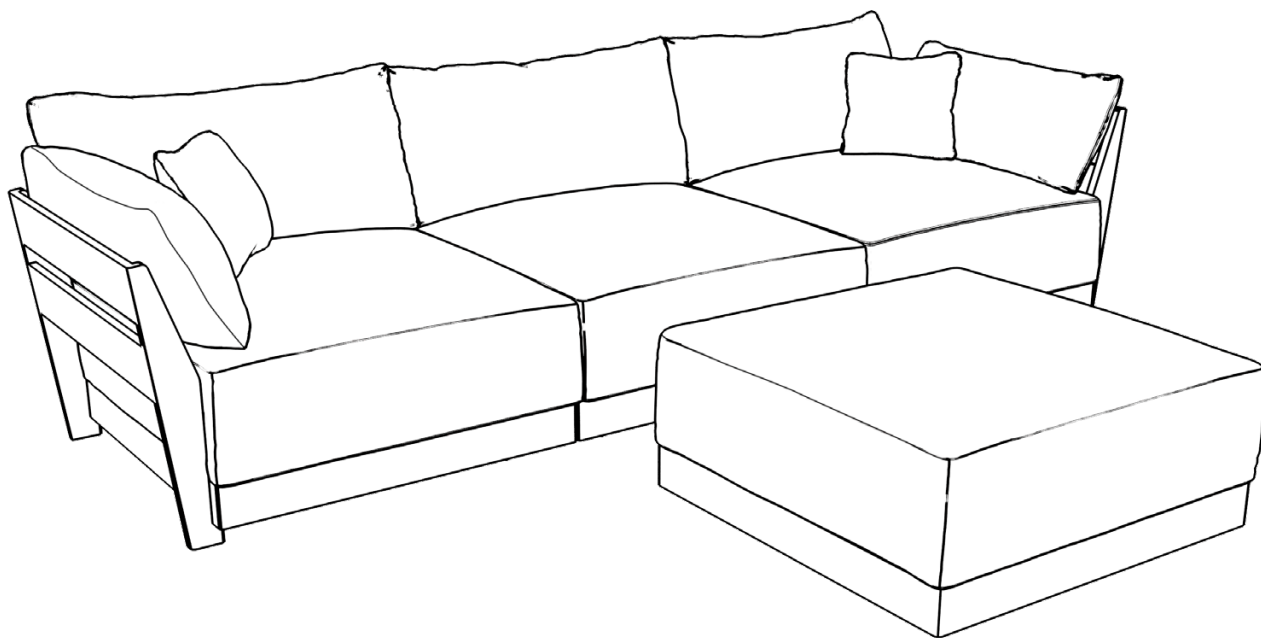

DONE!