

Inside Weather

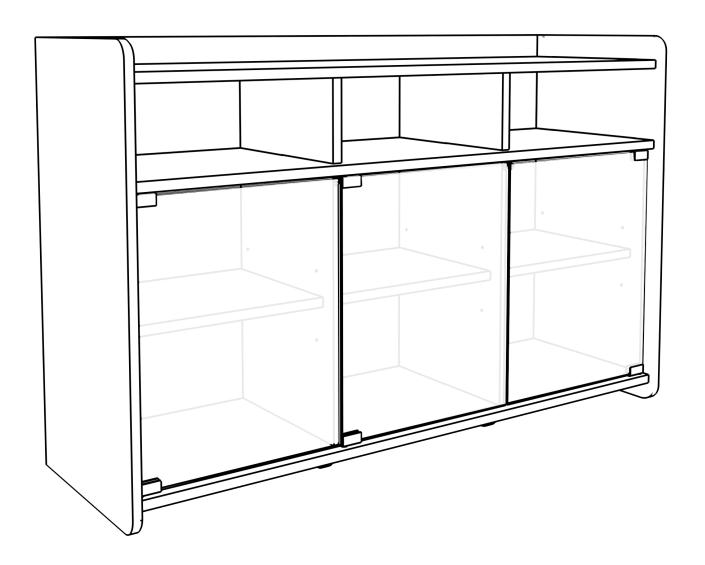

ELM STORAGE


Gather Your Eggs...


The parts shown here are all the available options. The parts you have will depend on your custom order.

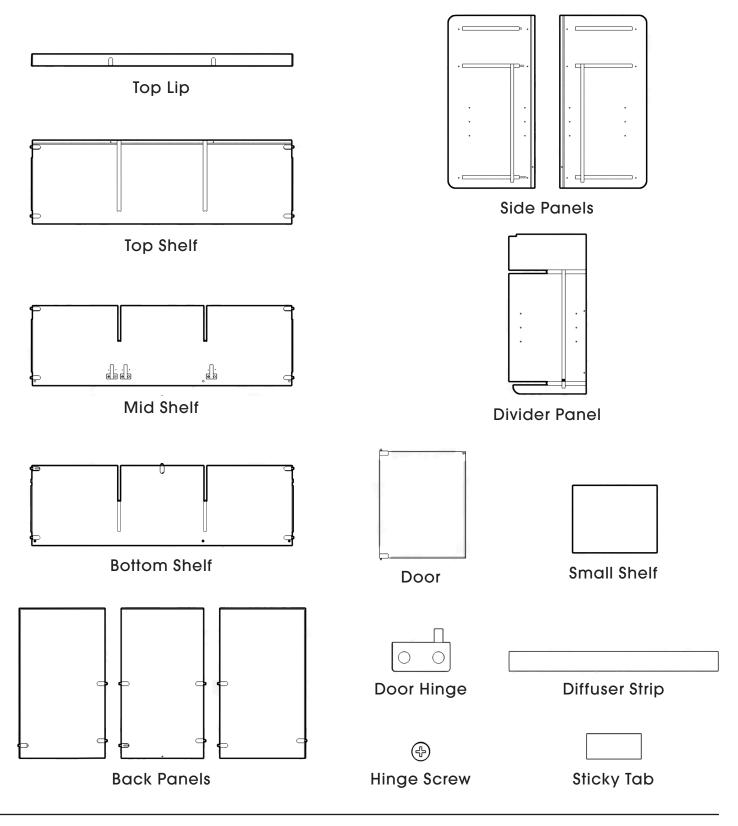


Note: Please retain all boxes until you are certain that your product isn't damaged and that you do not wish to return it. Disposal of boxes may prevent/delay our ability to resolve your request.


Step 1: Attach Top to Right Side Panel

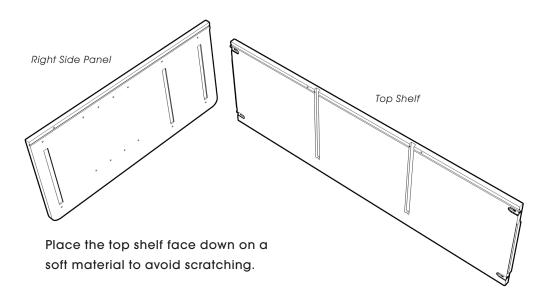

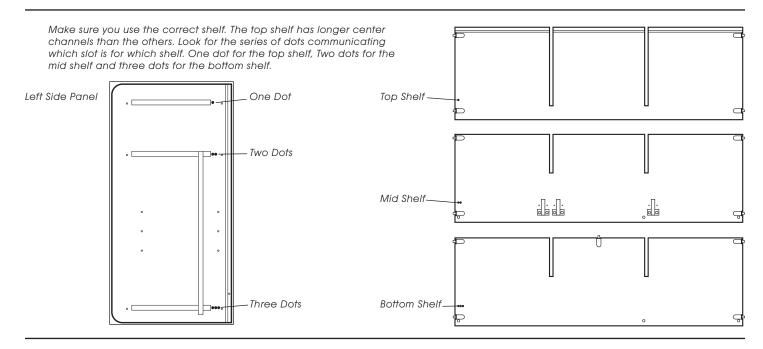


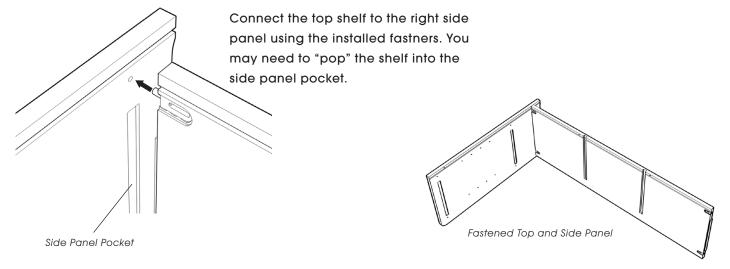


Step 2: Attach Mid and Bottom Shelf

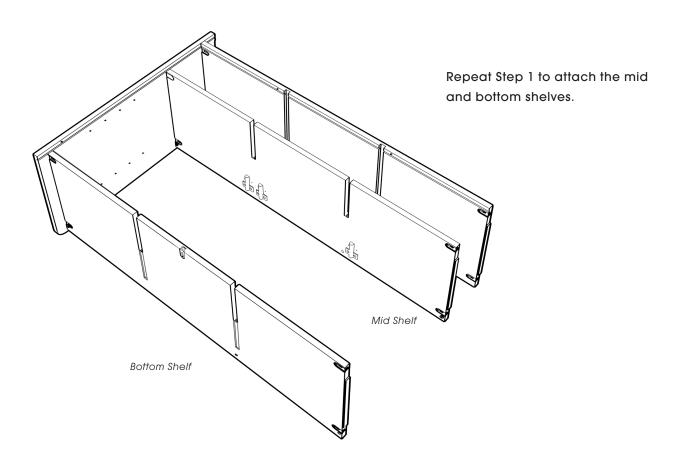


Step 3: Attach Left Side Panel

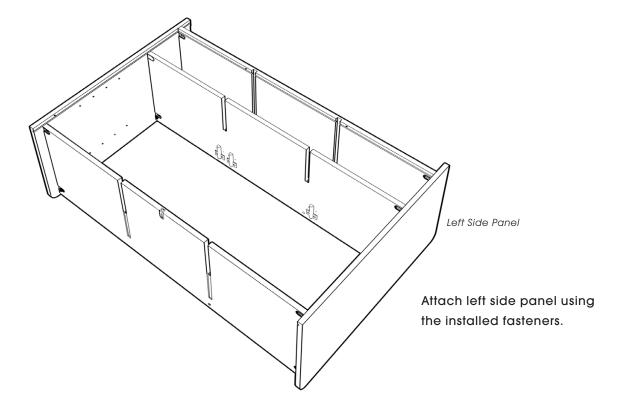


Step 4: Inster Divider Panels

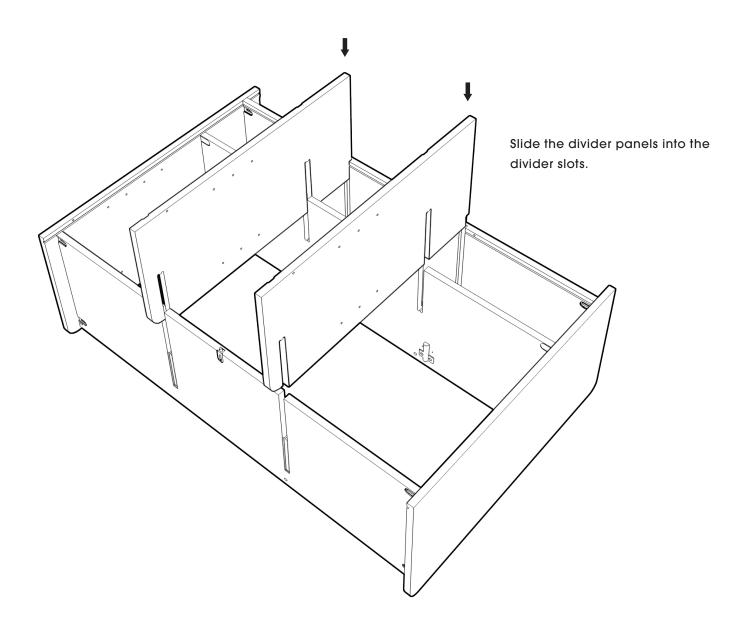


Step 5: Insert Back Panel

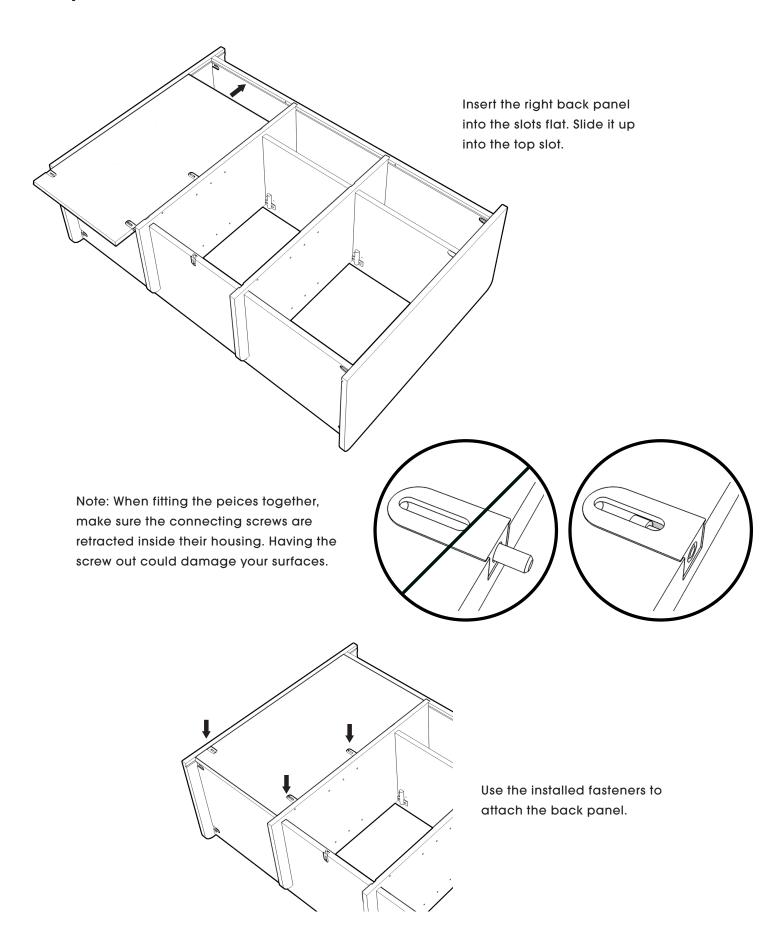


Step 6: Insert Remaining Panels

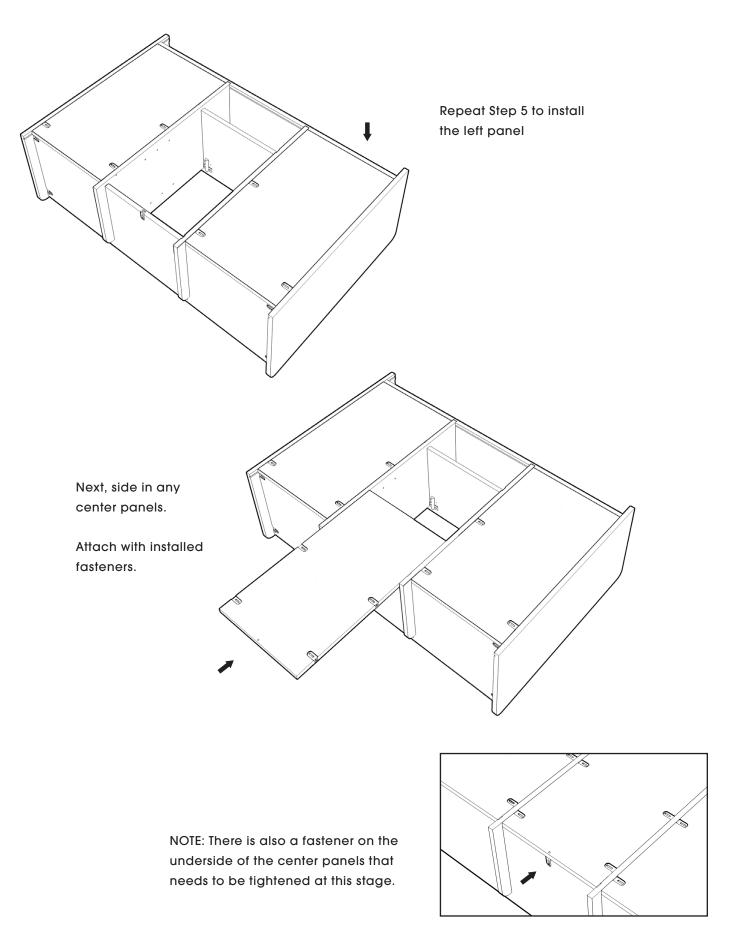


Step 7: Insert Remaining Panels

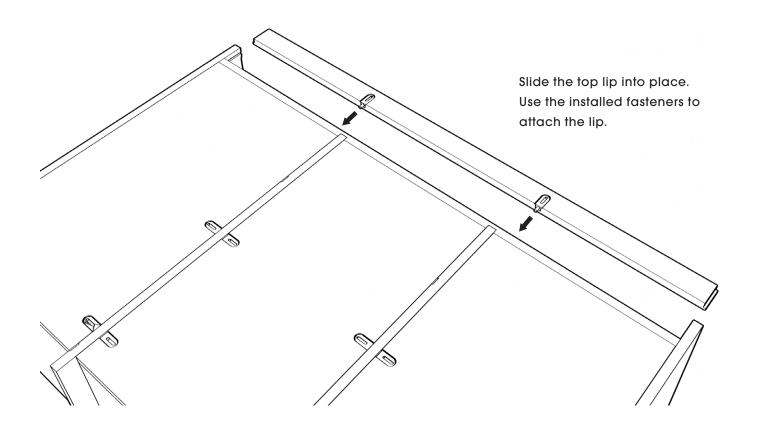


Step 8: Place Caps

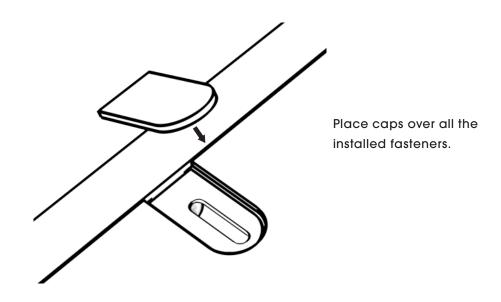

Step 9: Install Shelves (Optional)

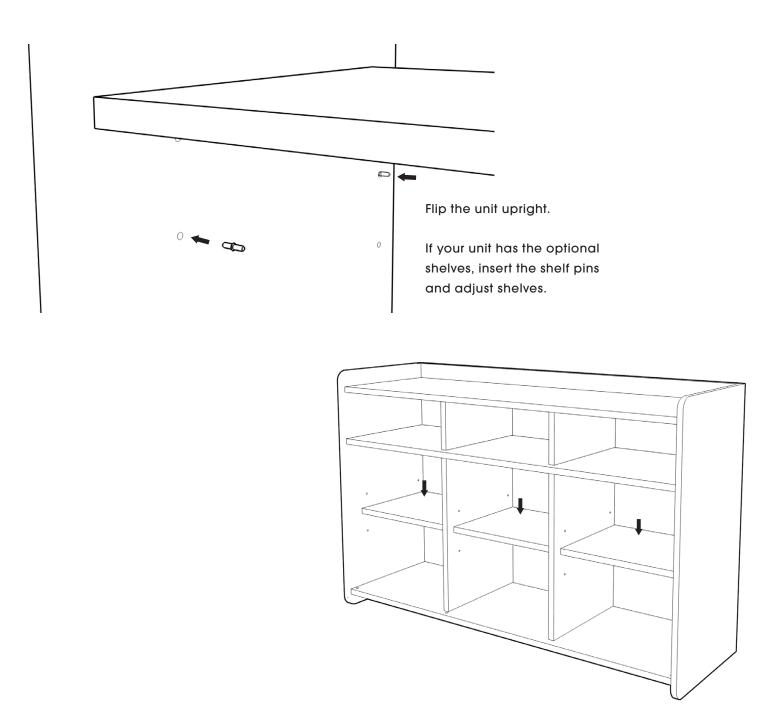


NOTE: Units that are 1 door wide will receive a standard small shelf. Units that are 2 to 4 doors wide will receive small shelves with a notch. Use the center notched shelf in the center alcove of your unit, and shelves with a notch on the side on the outer alcoves

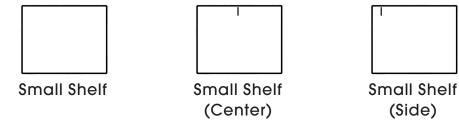


(Side)

Step 10: Install Lighting (Optional)

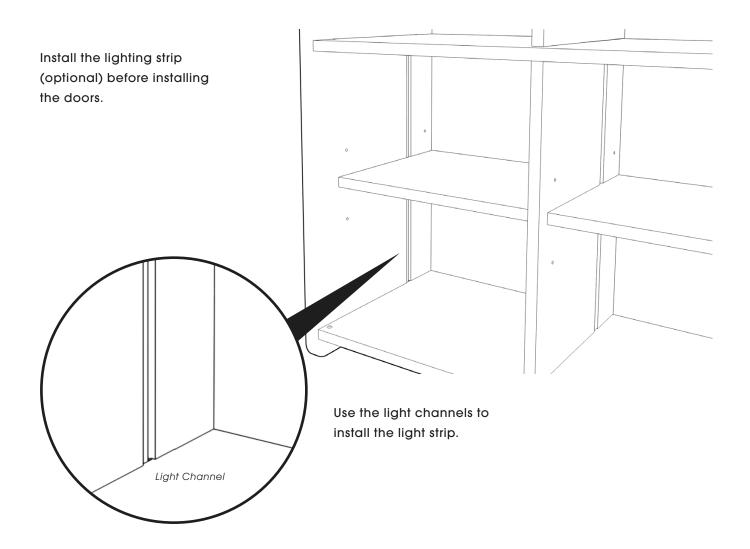


Attach the reciever to the bottom of the unit. Feed the light strip up through the hole in the bottom shelf on either end of the unit and feed the strip through each cubby. Peel back the paper from the adhesive side of the light strip and stick it to the inside of the light channels.


Cut away any excess light strip. Use diffuser strips to cover the light channels.

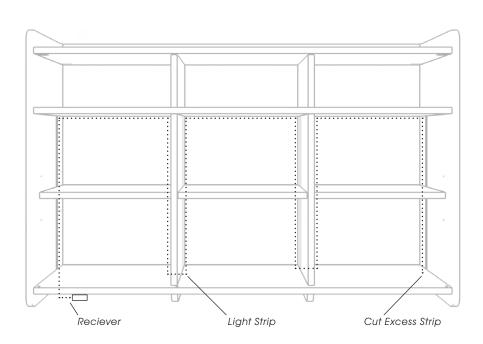


Step 11: Install Doors

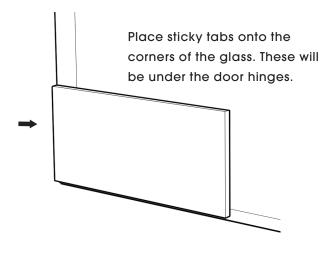


Insert the door hinges into the hinge holes.

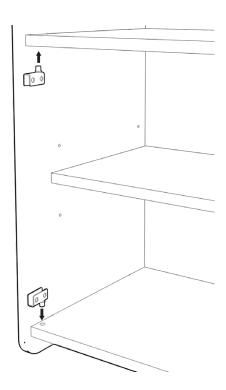

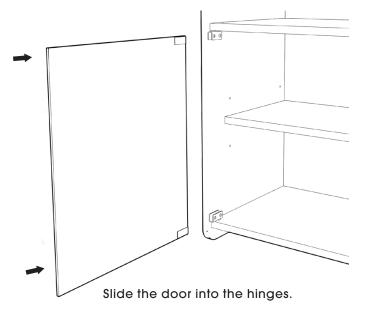


Frosted glass will have the frosted side on the inside.

Fluted glass will have the flutes on the outside.

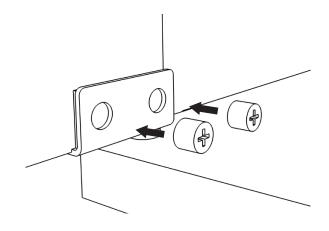

Tighten the hinge screws to attach the glass. Make sure the edge of the glass is flush to the back of the hinge.

Step 12: Add Strike Plate

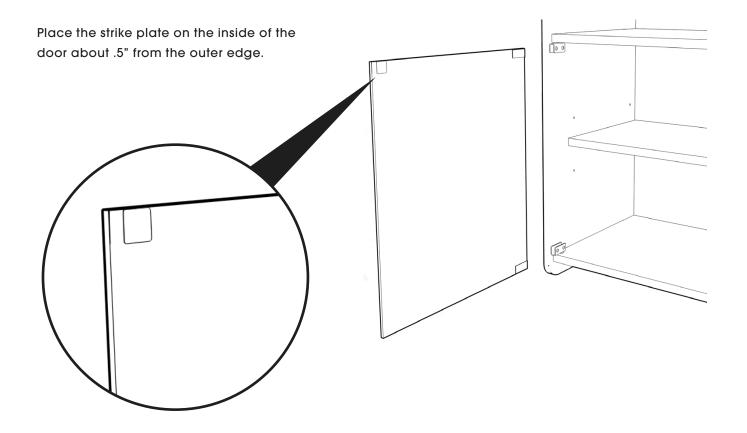

Step 13: Install Remaining Doors

