



Inside Weather

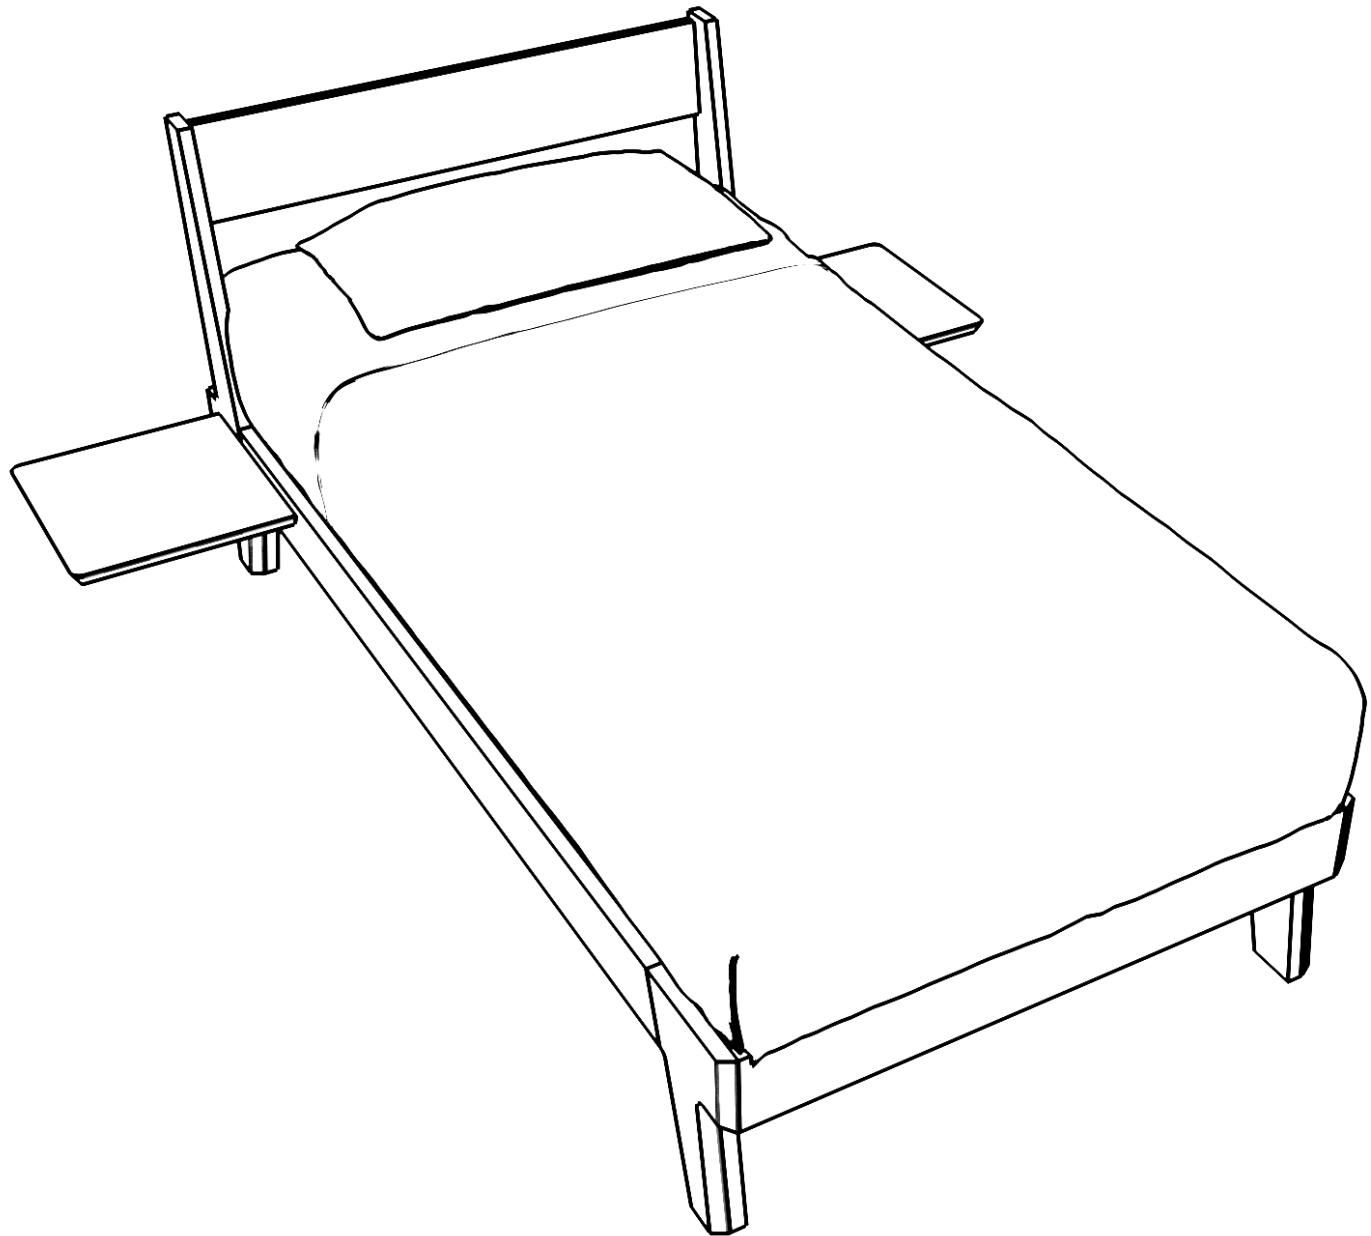

SAVOY BED


Gather Your Eggs...

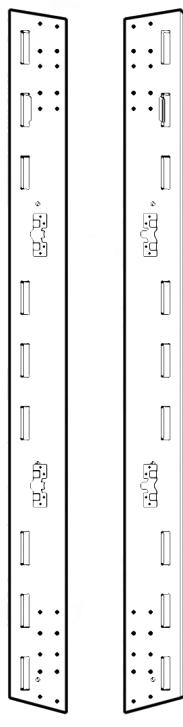

Side Rails




Headboard

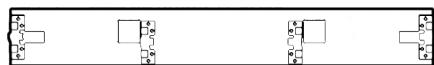

Back Rail




Front Rail

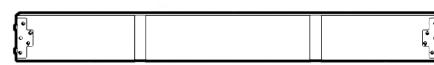


Mega Slats




Support Rail

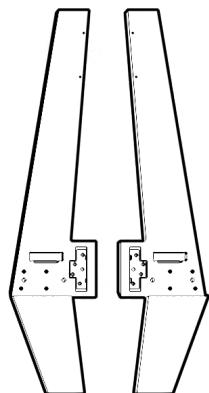

Back Legs

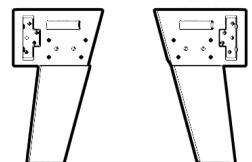

Front Legs




Back Connection Plate



Front Connection Plate




Slats

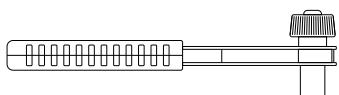

Ratchet



40mm Bolt



Long Hex Bit




Washer



6mm x 25 Hex Bit



Dowel





Bed Bracket Bolt



Screw Caps

Optional Parts if Side Table is included

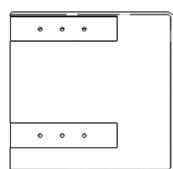

Back
Connection Plate
(for side table)




Side Table
and Bracket



16mm Bolt


Note: Please retain all boxes until you are certain that your product isn't damaged and that you do not wish to return it. Disposal of boxes may prevent/delay our ability to resolve your request.

Step 1: Connect Side Rails to Legs (Rear)

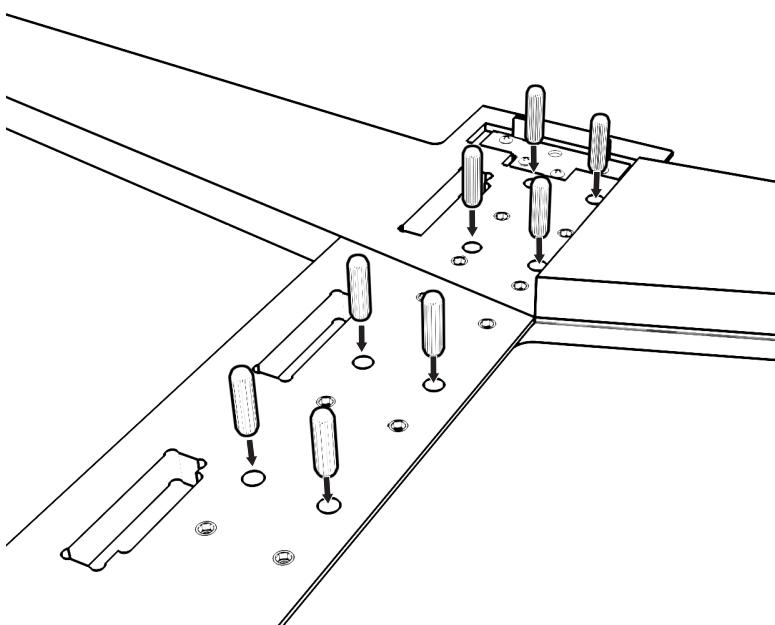

Place cardboard on the ground to protect the floor and the bed frame pieces. You can use the box it came in.


Align the left headboard leg frame with the left side rail. Insert 8 dowels into the corresponding holes.

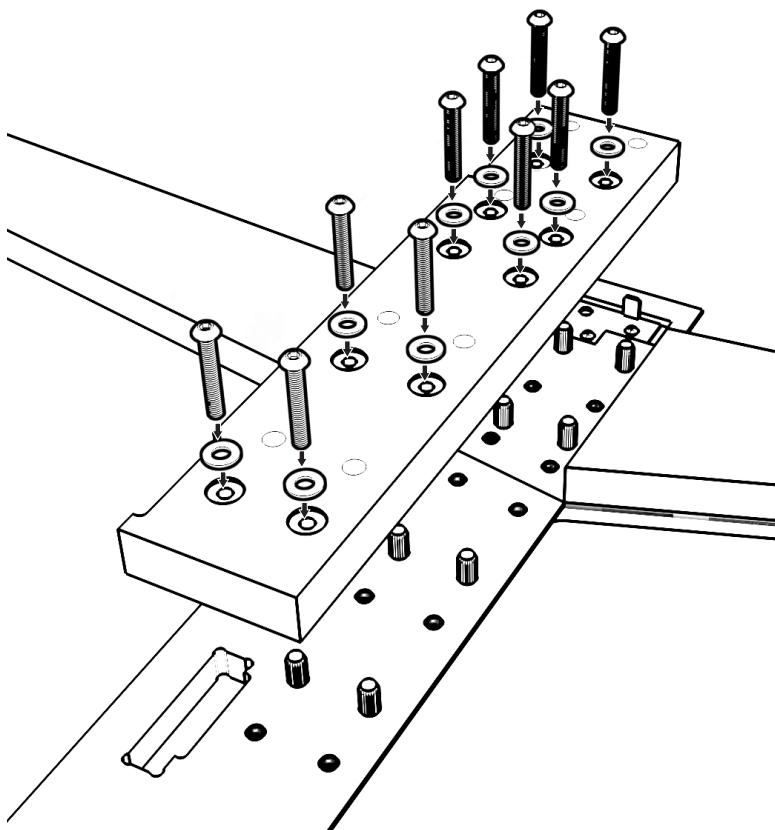


With counterbore for washers facing up, fit back left connection plate over the dowels to align the leg and rail.

Attach plate with ten 40mm bolts and washers.


If your bed comes with the optional side table, attach the connection plate with only six bolts for now. The additional four bolts will be added in a later step.

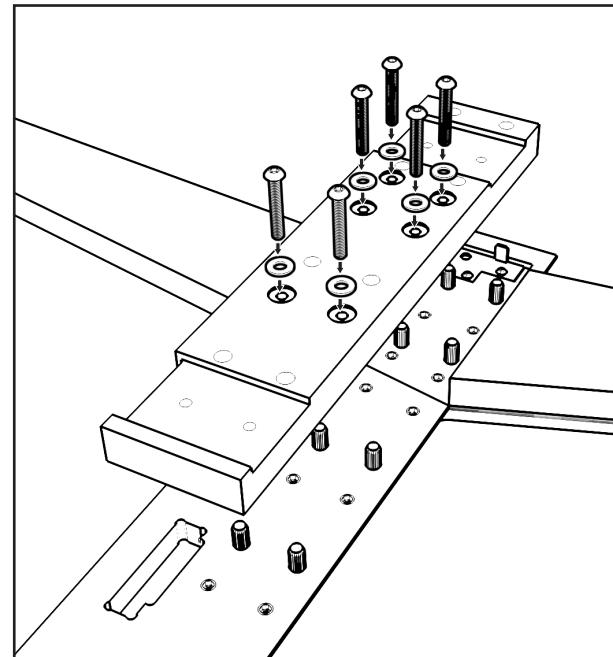

Step 2: Connect Side Rails to Legs (Front)

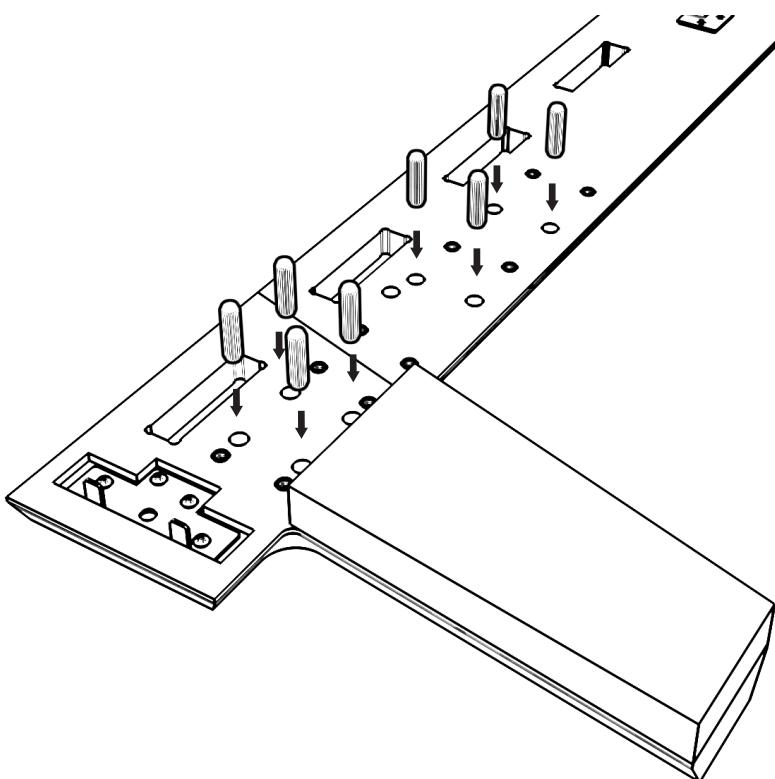


Align the left front leg with the left side rail. Insert 8 dowels into the corresponding holes.

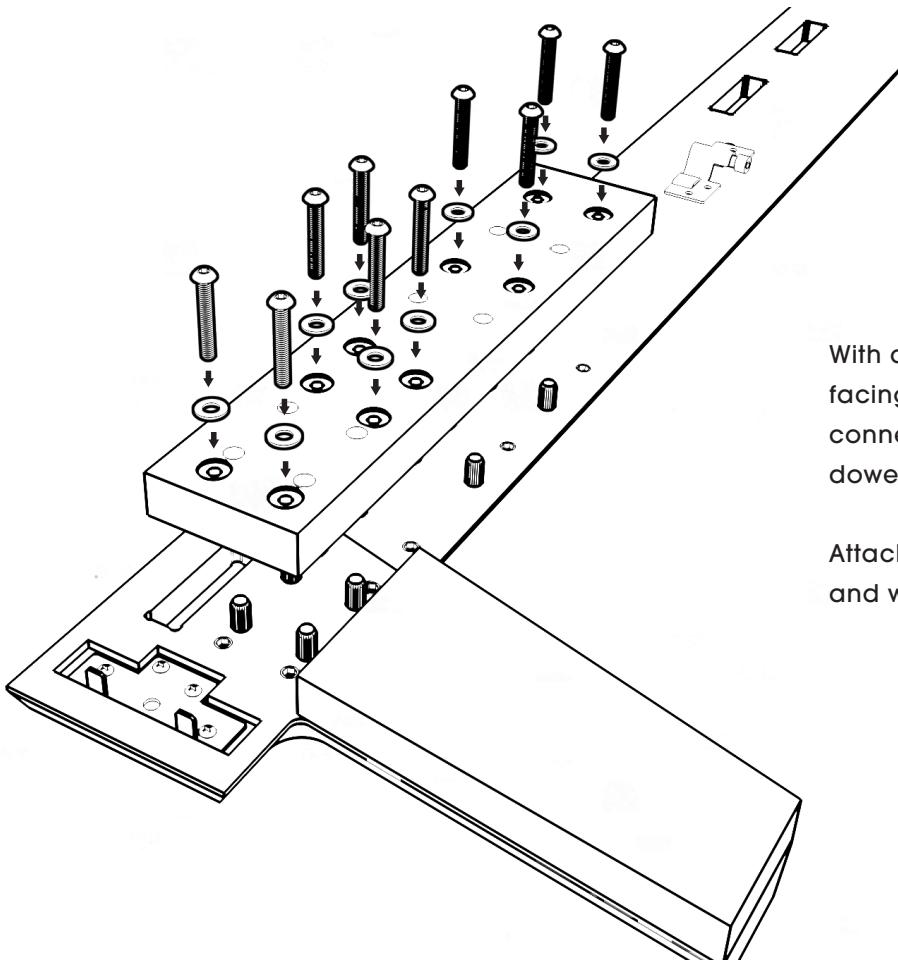

With counterbore for washers facing up, fit front left connection plate over the dowels to align the leg and rail.

Attach plate with ten 40mm bolts and washers.


Step 3: Connect Side Rails to Legs (Front)

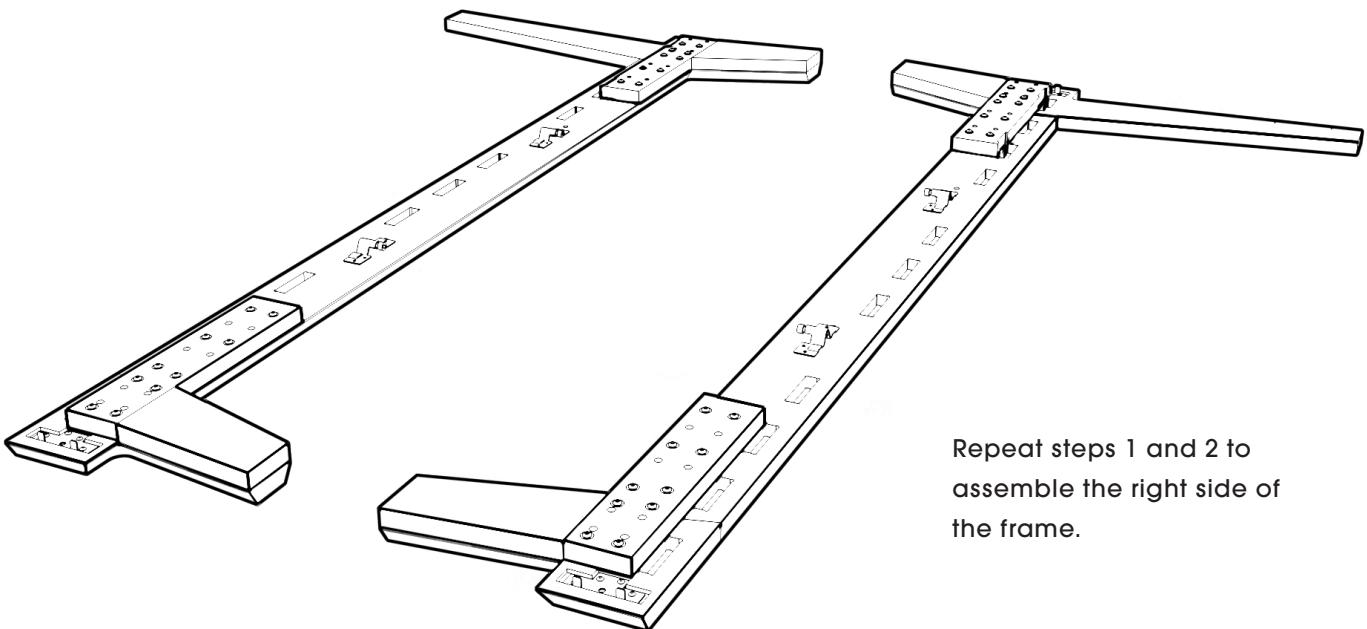


Step 4: Attach Back and Front Rail

Stand left side of the frame up and attach the back rail by inserting the tabs into the corresponding slots. Insert the bed bracket bolt and tighten with ratchet tool and 6mm hex bit. Repeat for the right side of the frame.


Attach the front rail after the back rail has been assembled.

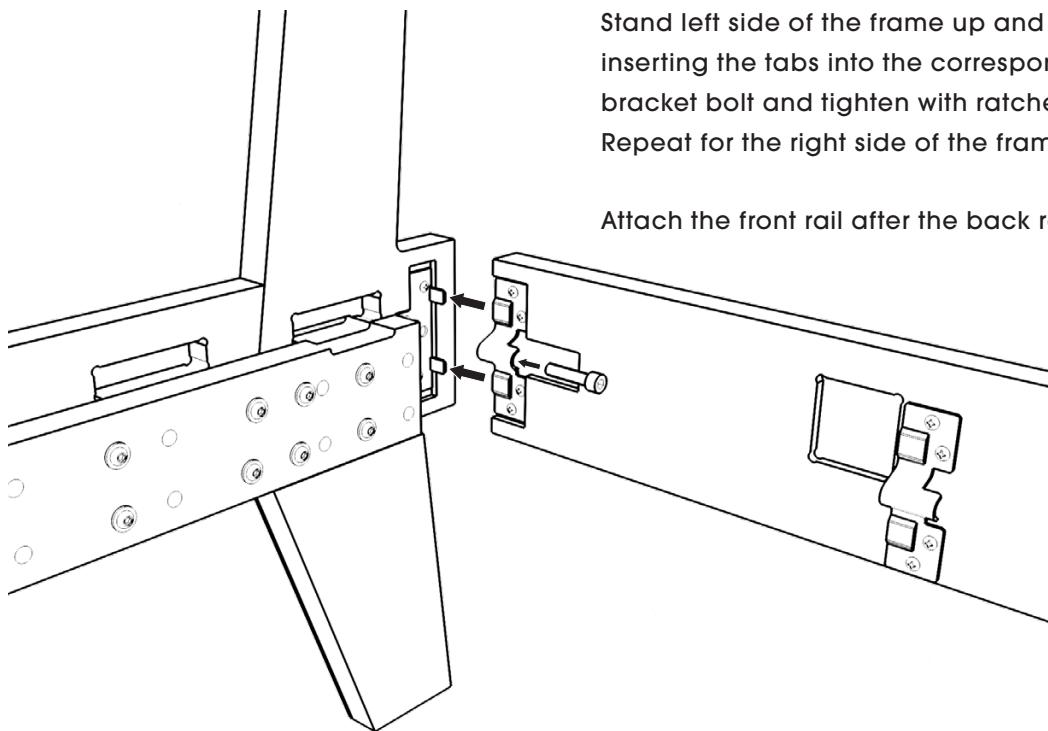

Step 5: Insert Table Brackets (Optional)

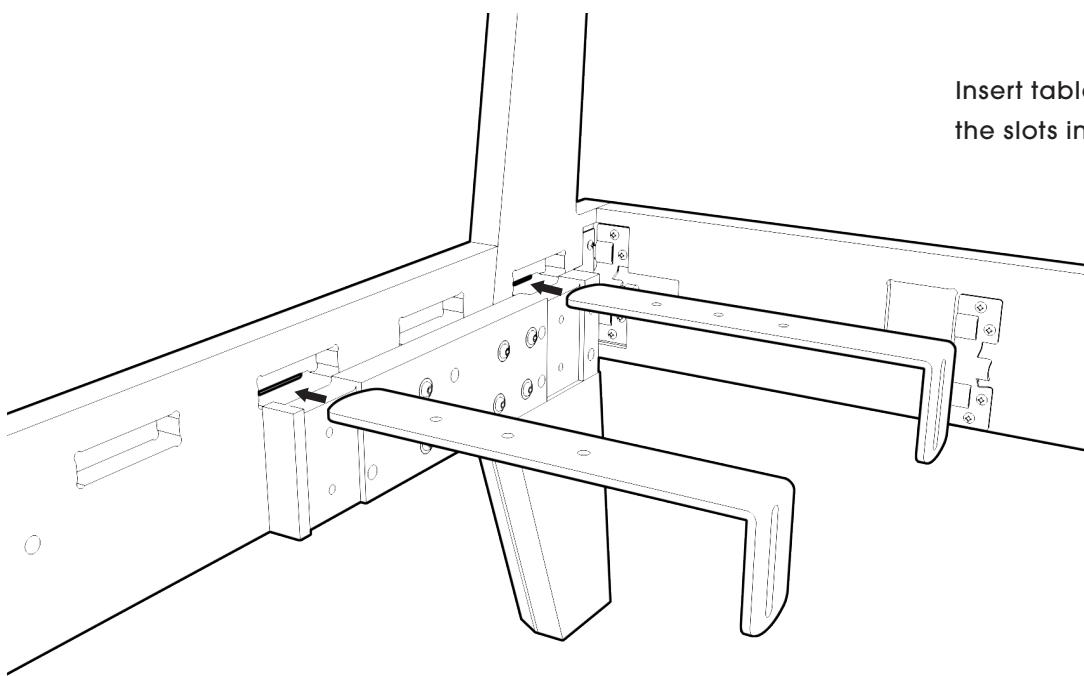

Insert table brackets through
the slots in the side rails.

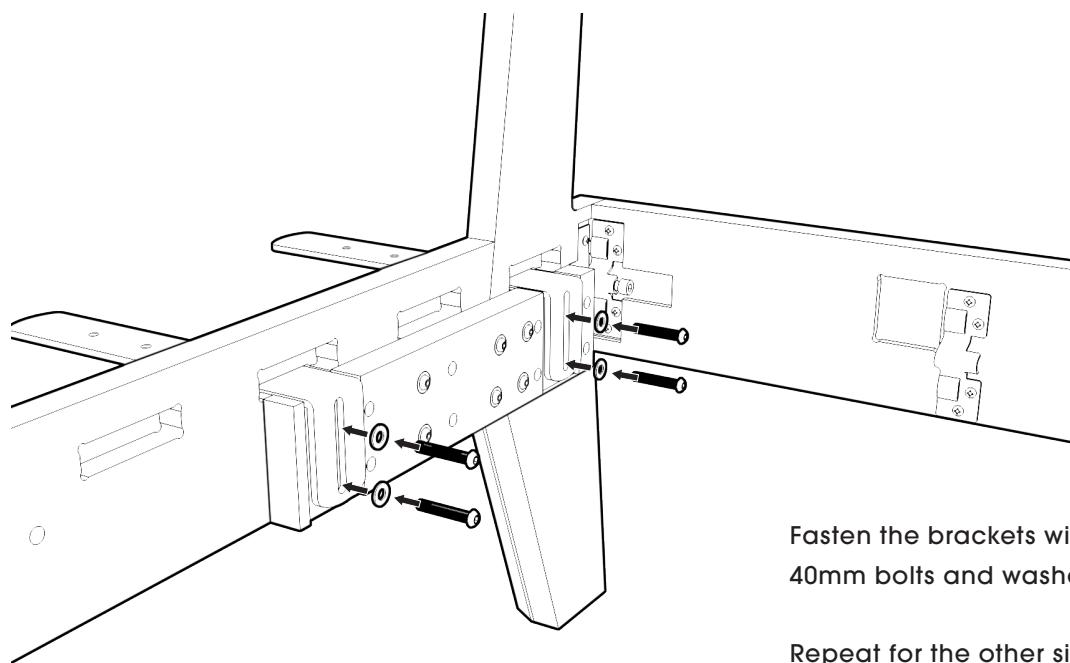


Fasten the brackets with four
40mm bolts and washers.

Repeat for the other side.

NOTE: Optional side table will be added at a later step.

Step 6: Attach Support Rails

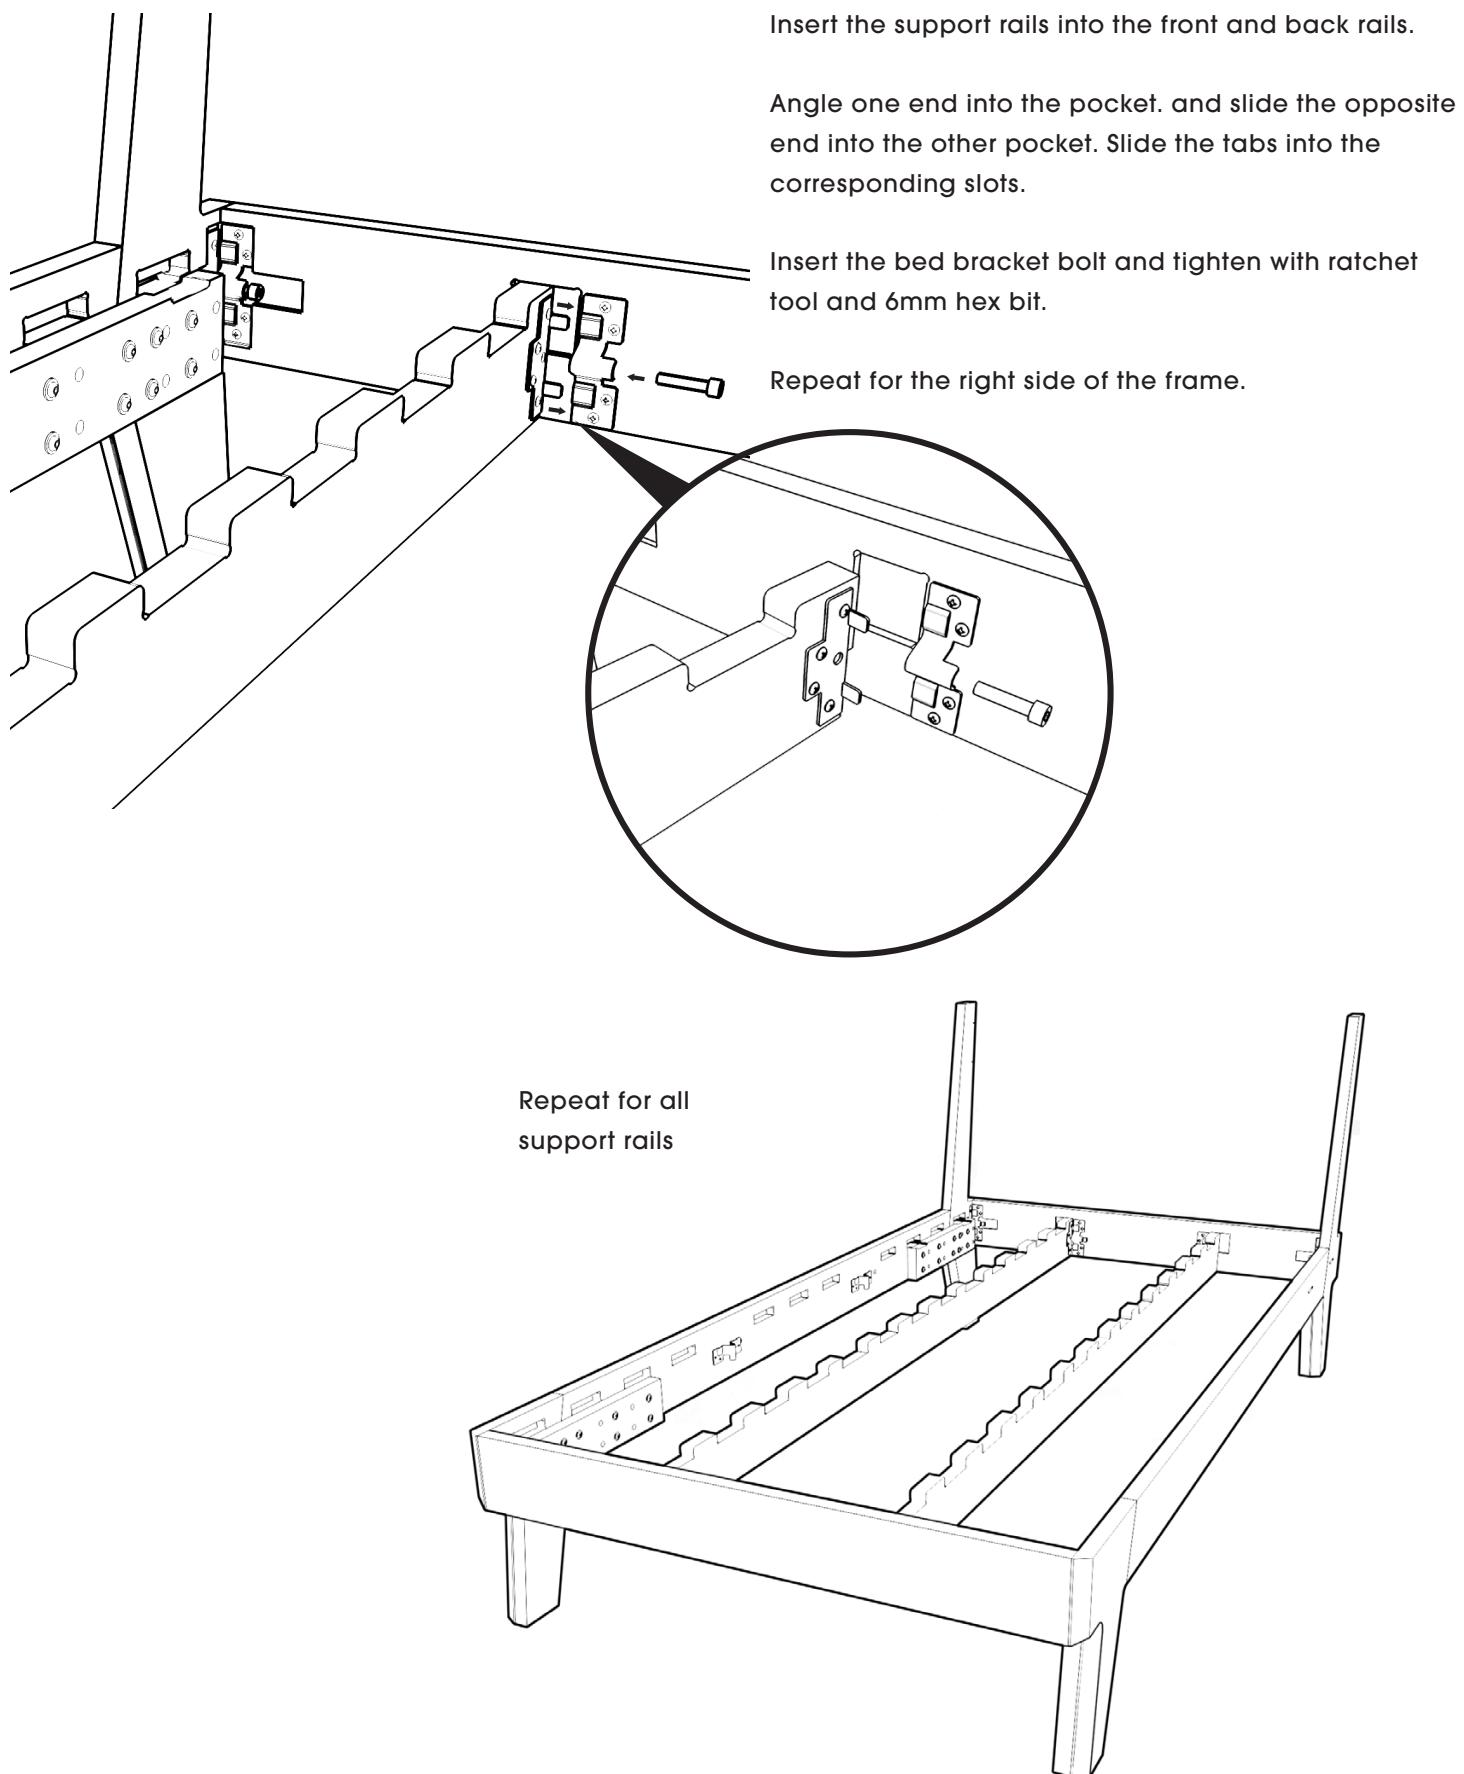


Step 7: Attach Mega Slats


Insert the mega slats into the support rails by inserting the tabs into the corresponding slots.

Insert the bed bracket bolt and tighten with ratchet tool and 6mm hex bit.


Repeat for the right side of the frame.

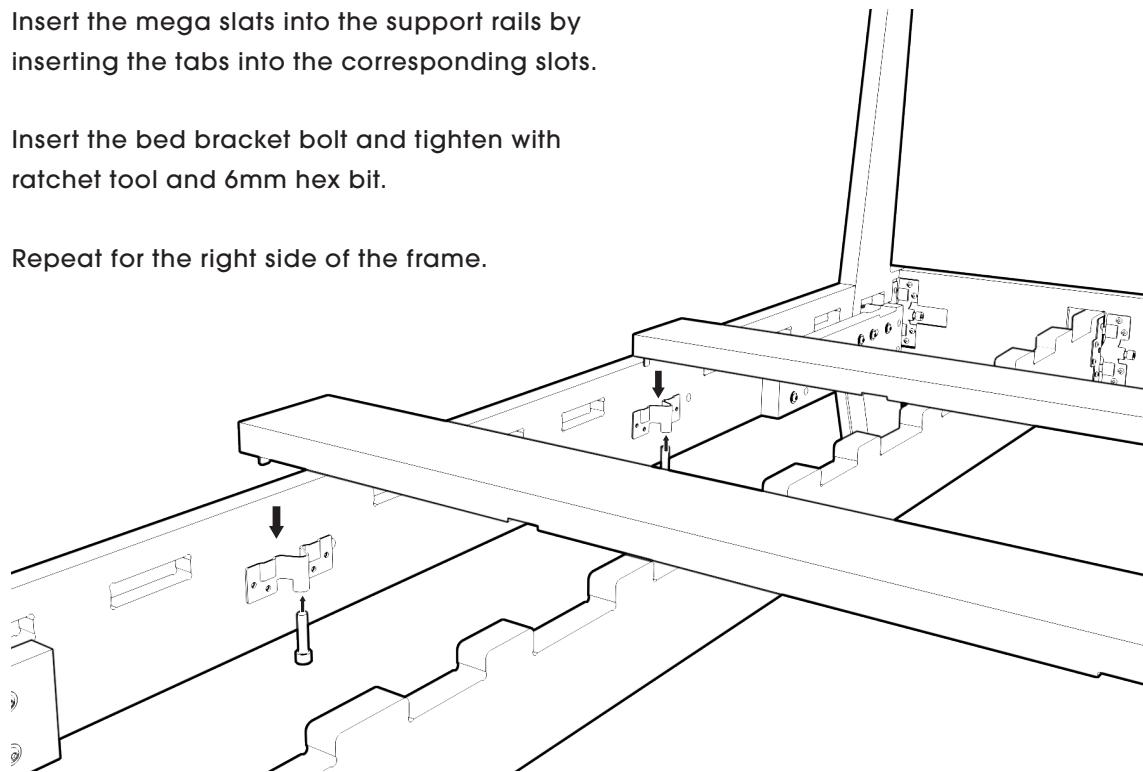

Step 8: Insert Slats (Left Side)

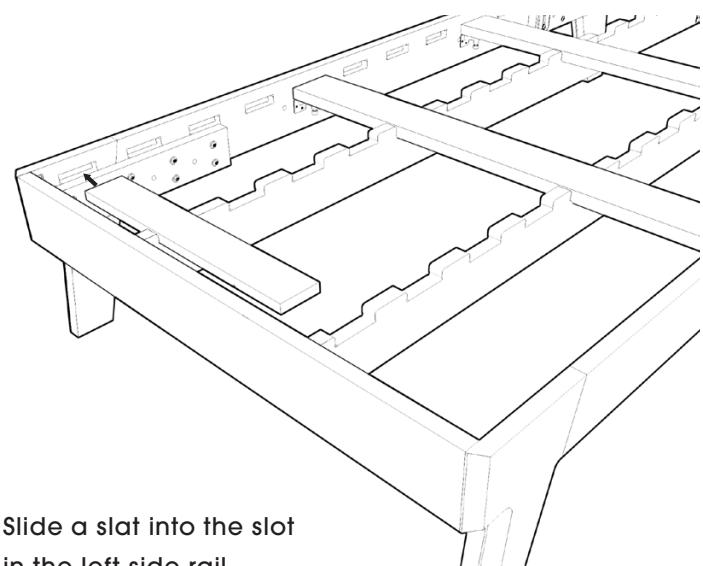


Slide a slat into the slot in the left side rail.

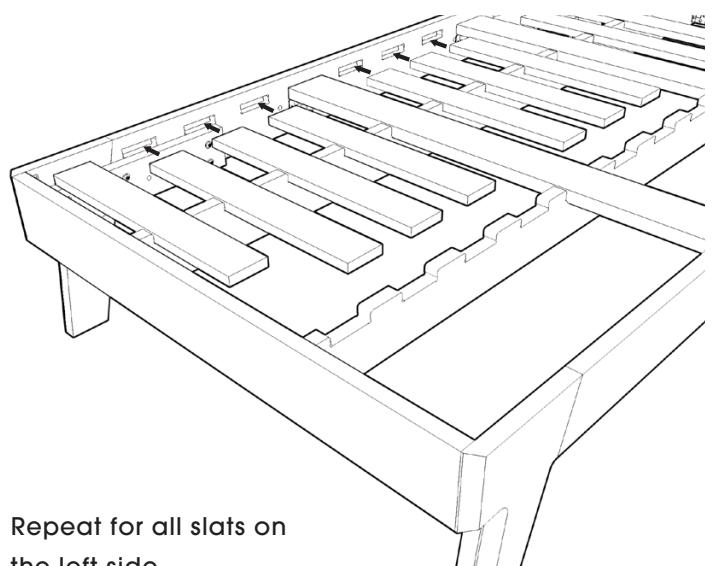


Repeat for all slats on the left side.

Step 9: Insert Slats (Right Side)

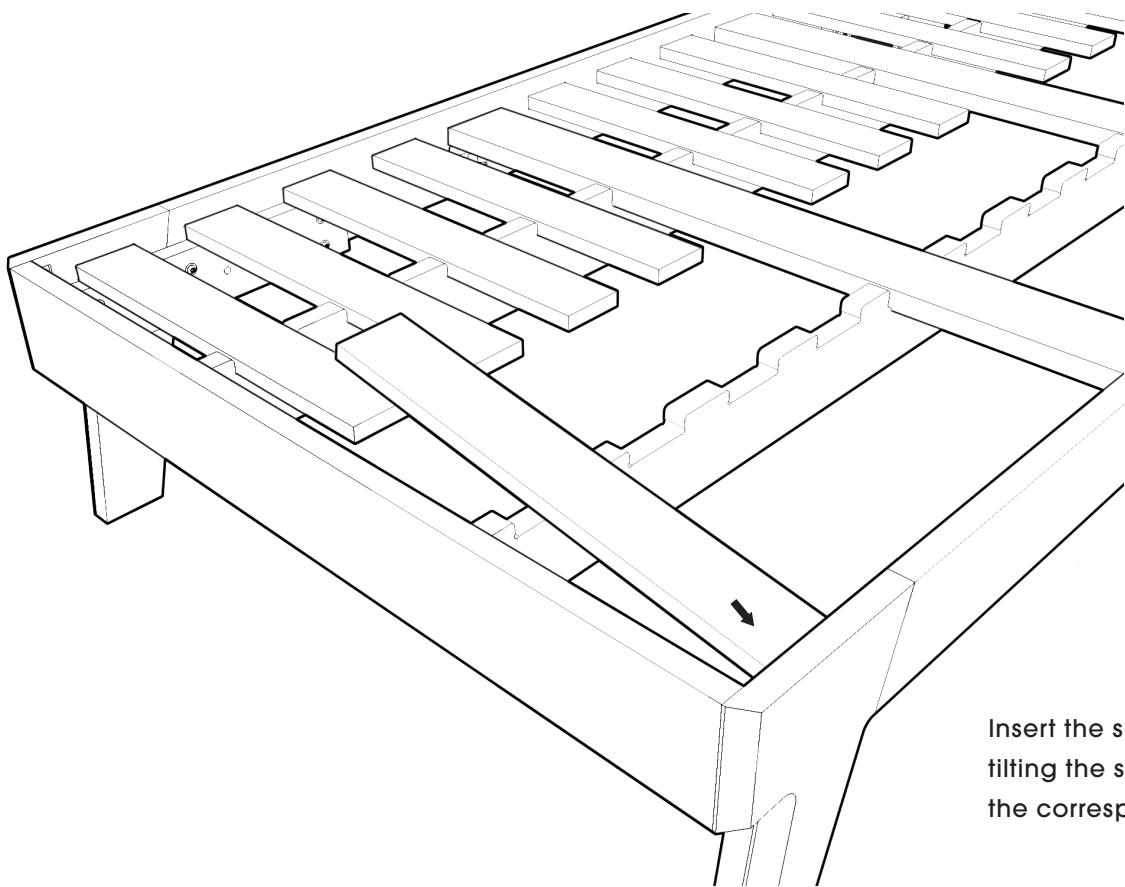


Insert the slats for the right side by tilting the slat and inserting it into the corresponding slot.

Step 10: Attach Table (Optional)


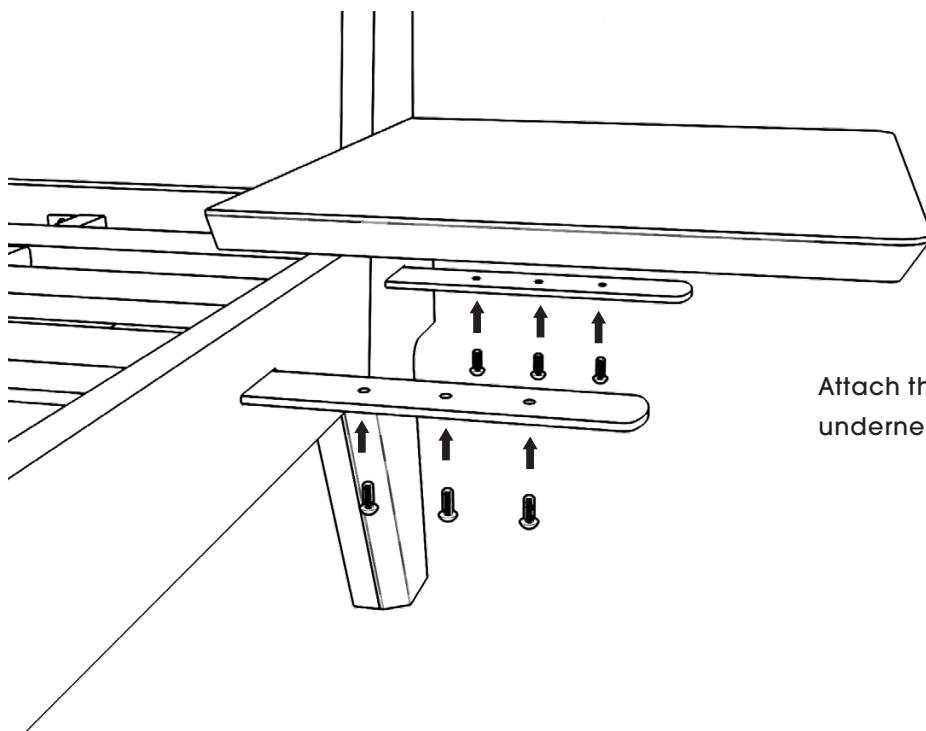


Attach the side tables from underneath using the 16mm bolts.

Step 11: Attach Headboard

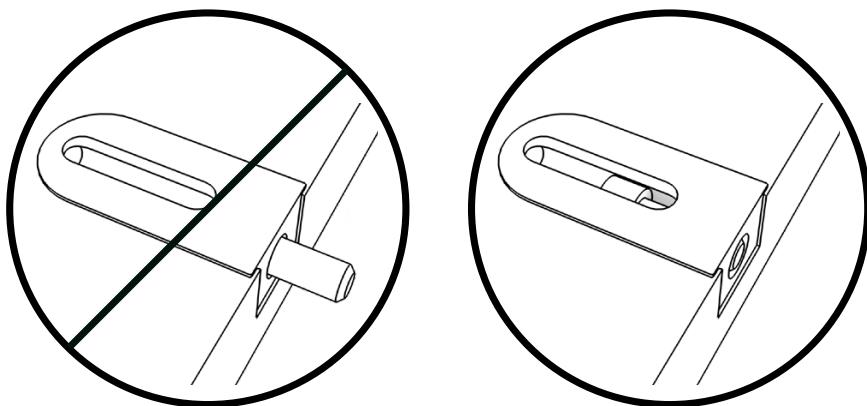


Note: When fitting the pieces together, make sure the connecting screws are retracted inside their housing. Having the screw out could damage your surfaces.

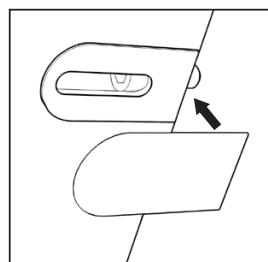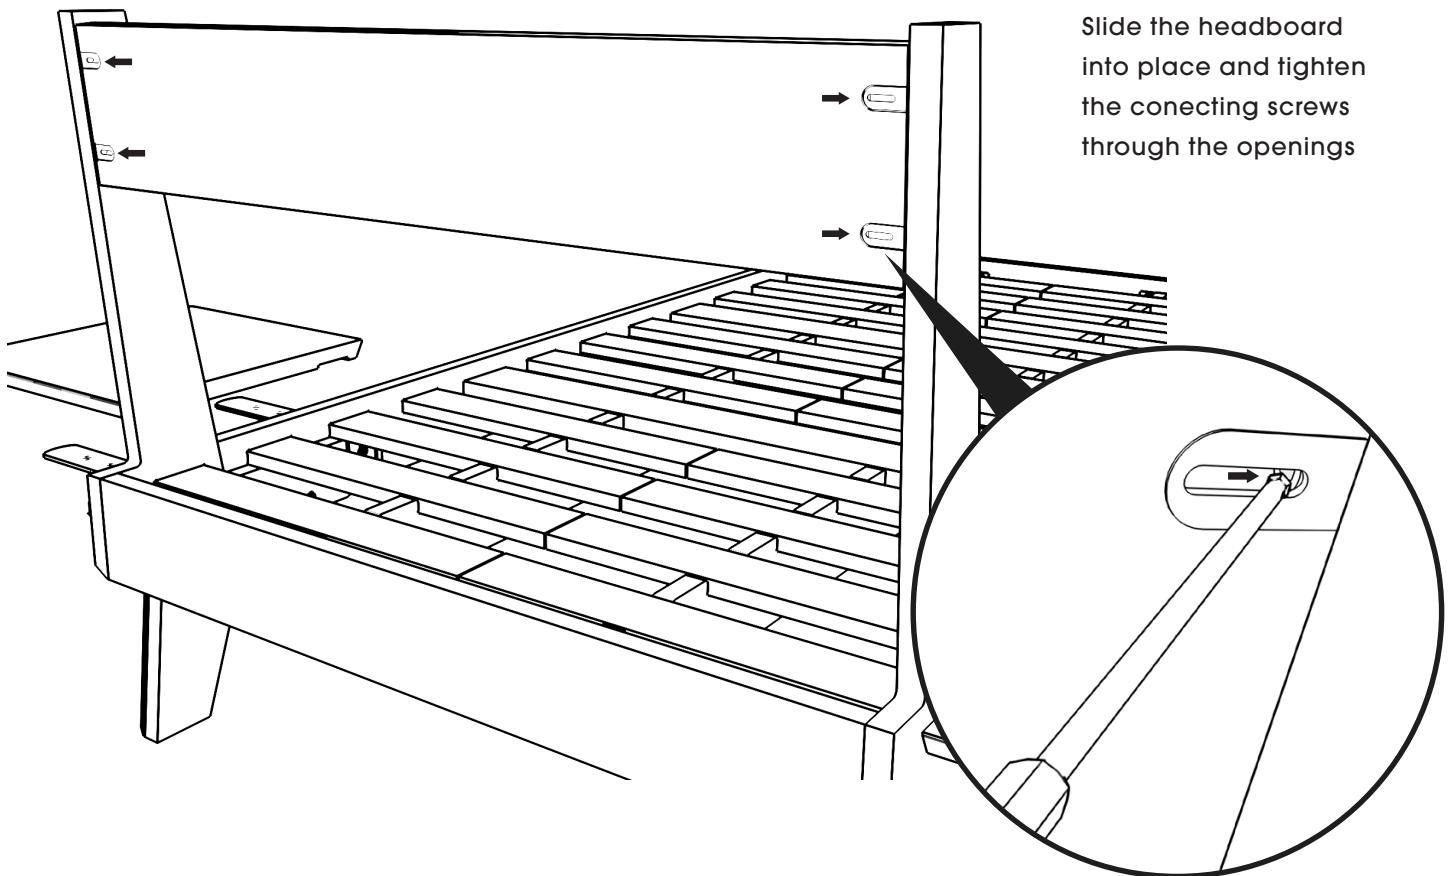

Use screw caps to cover the openings after all are tightened.

Step 12: Add Mattress

Add a mattress (sold separately).

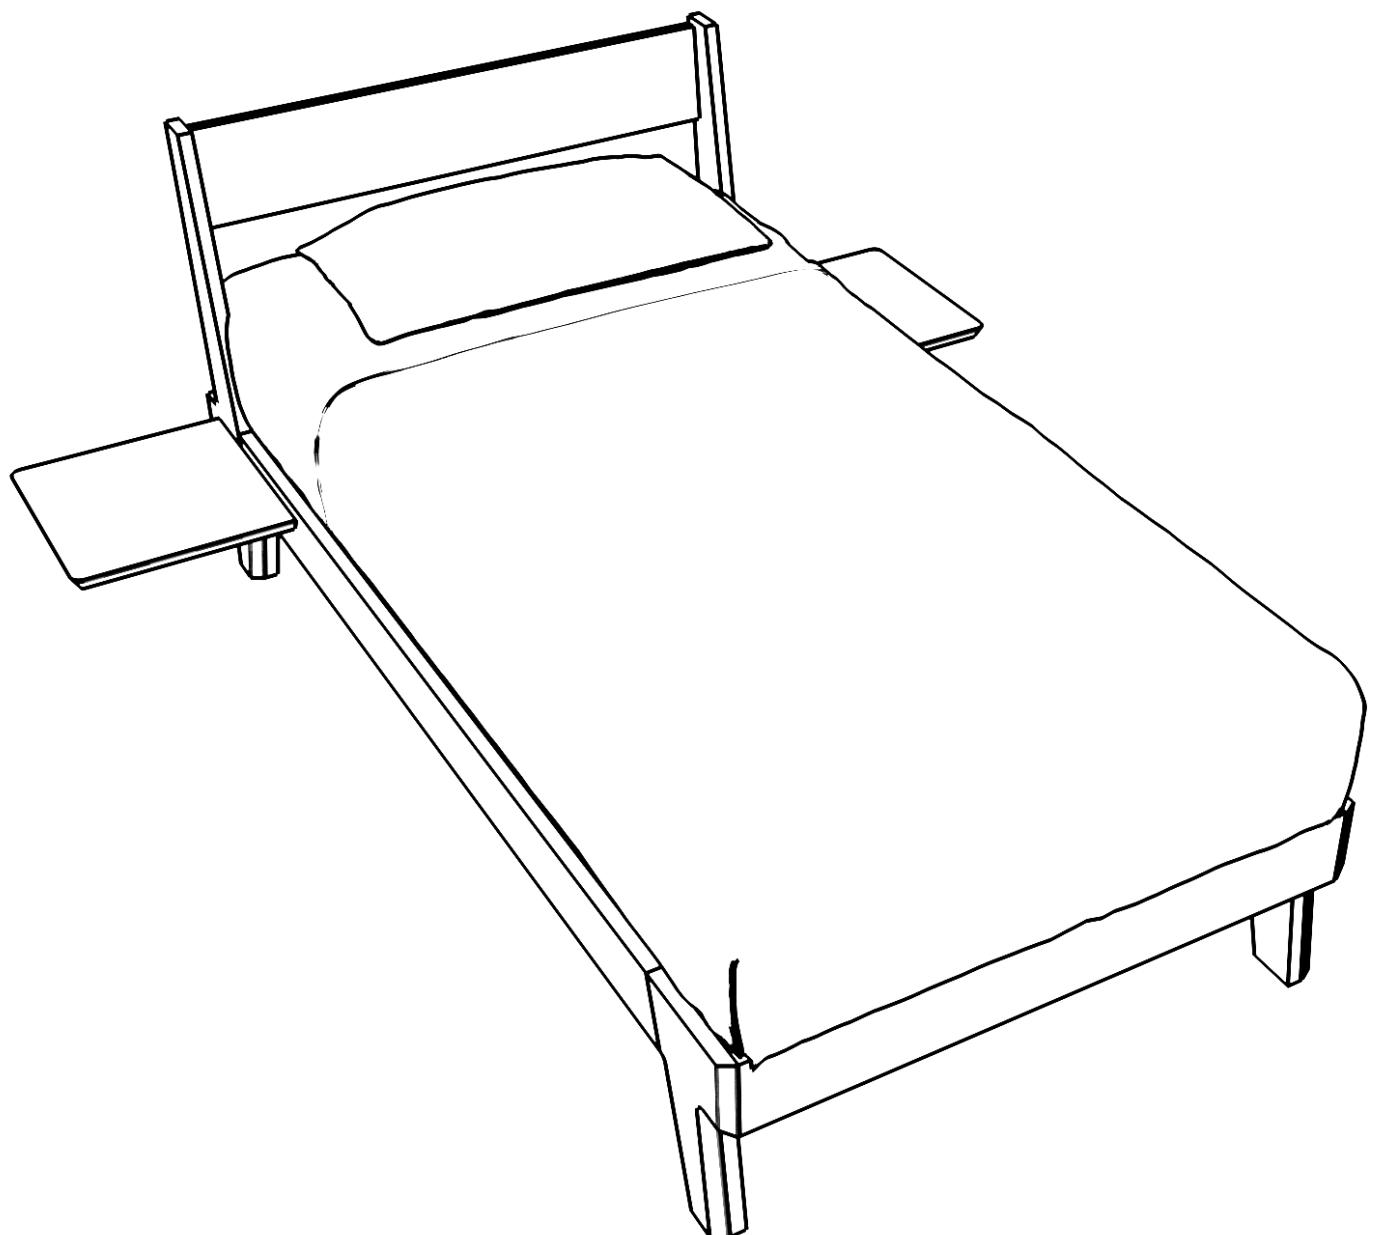

DONE!