



4 SEAT SOFA

Gather Your Eggs...

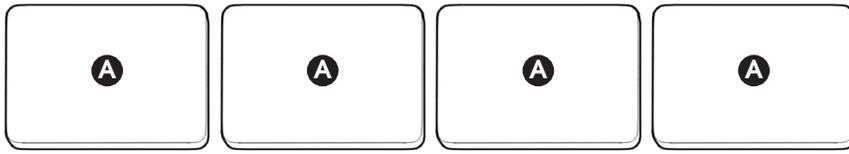

A BACK PILLOWS

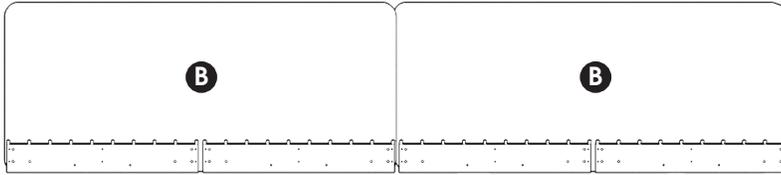


B BACK PLATES




C 2x ARMS




D 2x FRONT PLATES

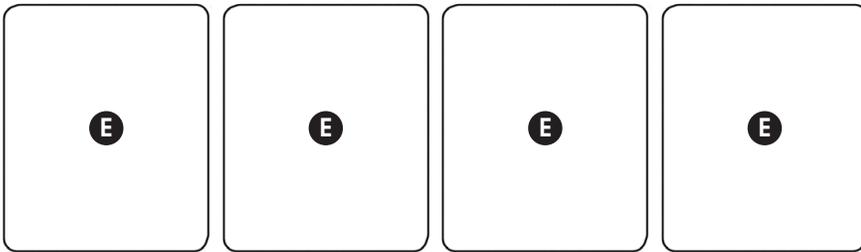

E SEAT CUSHIONS

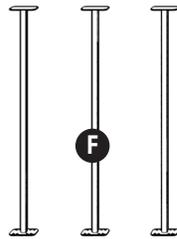


F 3x INNER SUPPORT BRACE

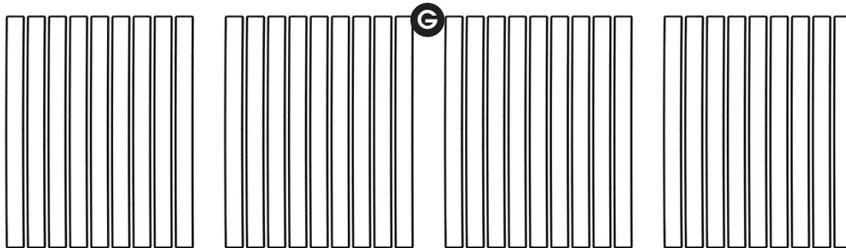

G 36x SLATS

Note: Please retain all boxes until you are certain that your product isn't damaged and that you do not wish to return it. Disposal of boxes may prevent/delay our ability to resolve your request.

You should have:

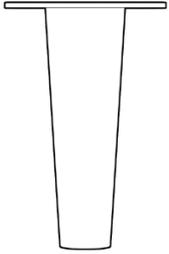


4x LEGS



16x SOCKET HEAD CAP SCREW




48x BUTTON HEAD HEX SCREW
(5 MM HEX BIT)

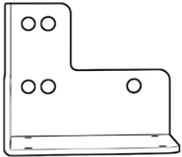

4x CORNER BRACKETS




CENTER SUPPORT LEG

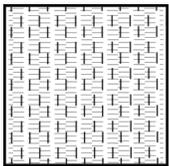

16x NEOPRENE
STICKY PADS



8x SET SCREWS

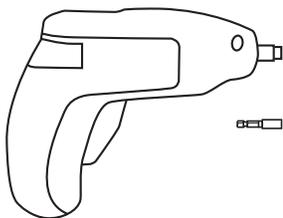


- DRILL + EXTENSION
- 5MM HEX BIT
- 4MM BALL HEAD BIT
- 3MM HEX BIT
- USB CHARGER



Note: Drill may need to be charged before use

Note: Don't be surprised if you find a few extra screws, washers and even an extra support brace among your supplies. It's just our way of being extra sure you have everything you need.

Step 1: Connect the Back Panels

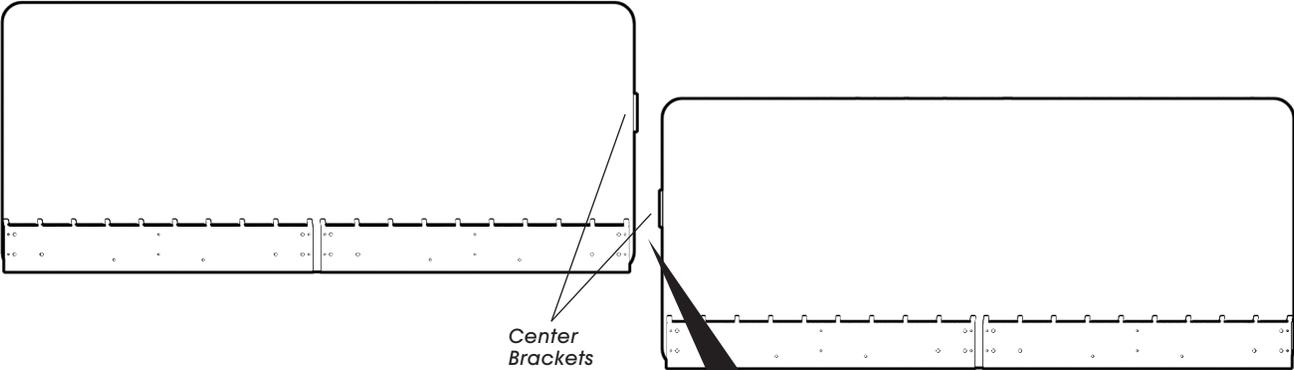


Push the back panels together to lock them in place.

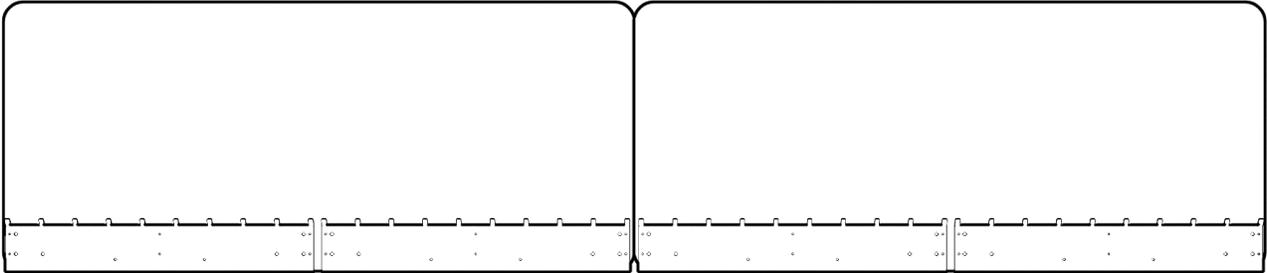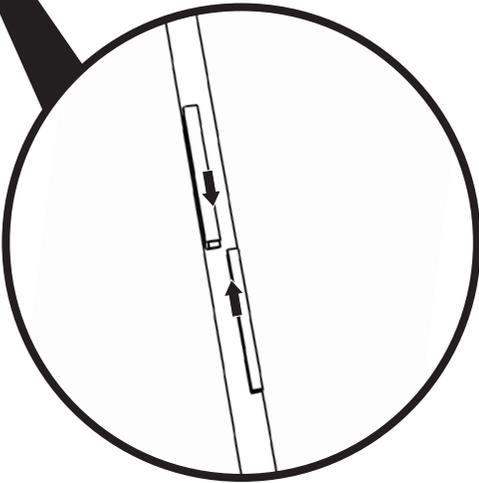


Connected Back Panels

Step 2: Connect the Arms

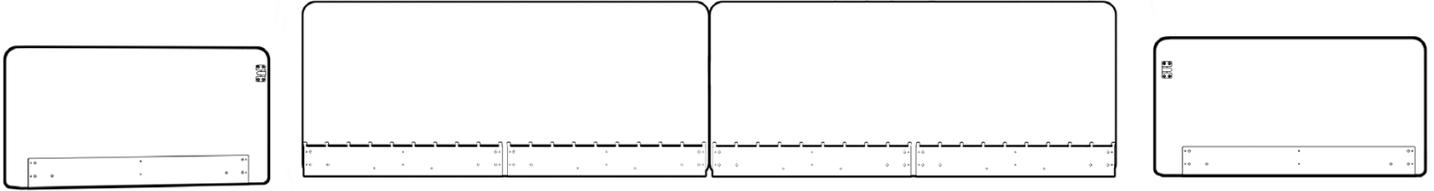

Next we'll connect the back panels to the arms.
The process is identical for both arms.

Connect the Hooks

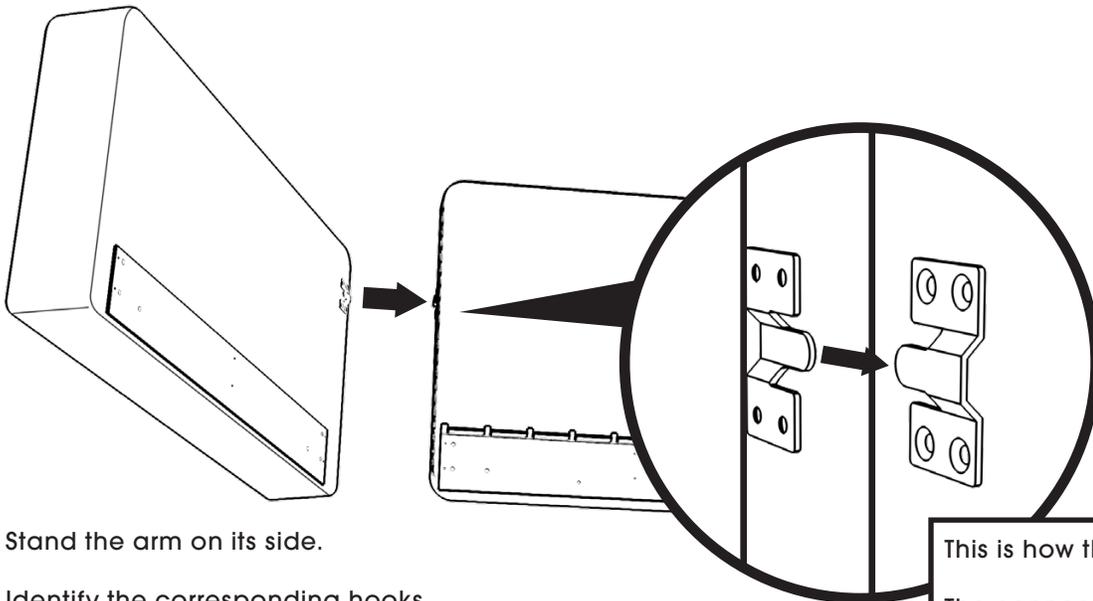


Stand the arm on its side.

Identify the corresponding hooks
located on the arm and back panel.

This is how they connect.

The connection is the same
for both sides

Align the arm and back panels
so that the metal frames meet
at a right angle. Lean the arm
slightly away from the back
panel. Lift the top of the back
panel and gently lower the
hook until it connects. Repeat
on both sides.

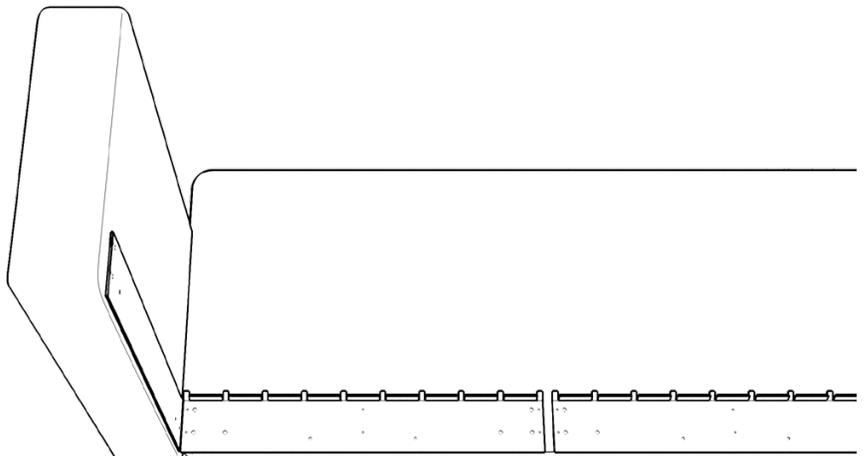

Connect the Arms (Continued)




Place a corner bracket to connect the back and arm panels.

Put a 5mm button head socket cap screw in each of the three holes in the back panel. Loosely hand tighten only for now.

Screws will be tightened after they have all been placed.

Connect the corner bracket to the arm by hand-threading a button head socket cap screw into each of the three remaining holes.


Once all six screws have been connected, use the drill to fasten each bracket until secure.

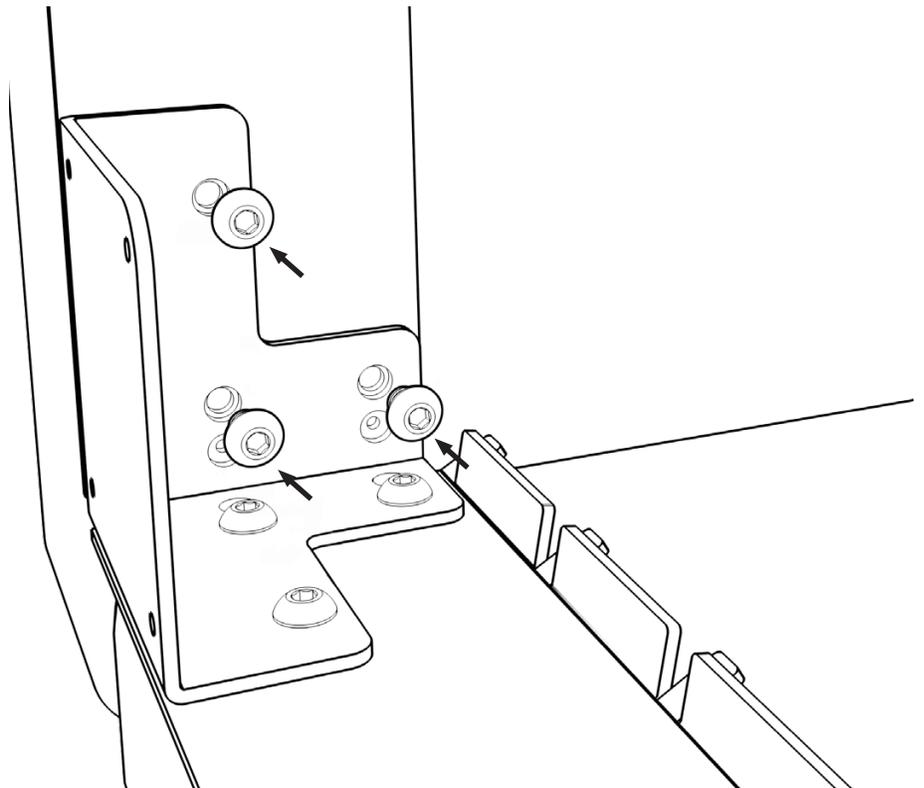

Step 3: Install the Inner Support Braces


You'll Need: 3x INNER SUPPORT BRACES

12x BUTTON HEAD SOCKET CAP SCREW (5 MM HEX BIT)

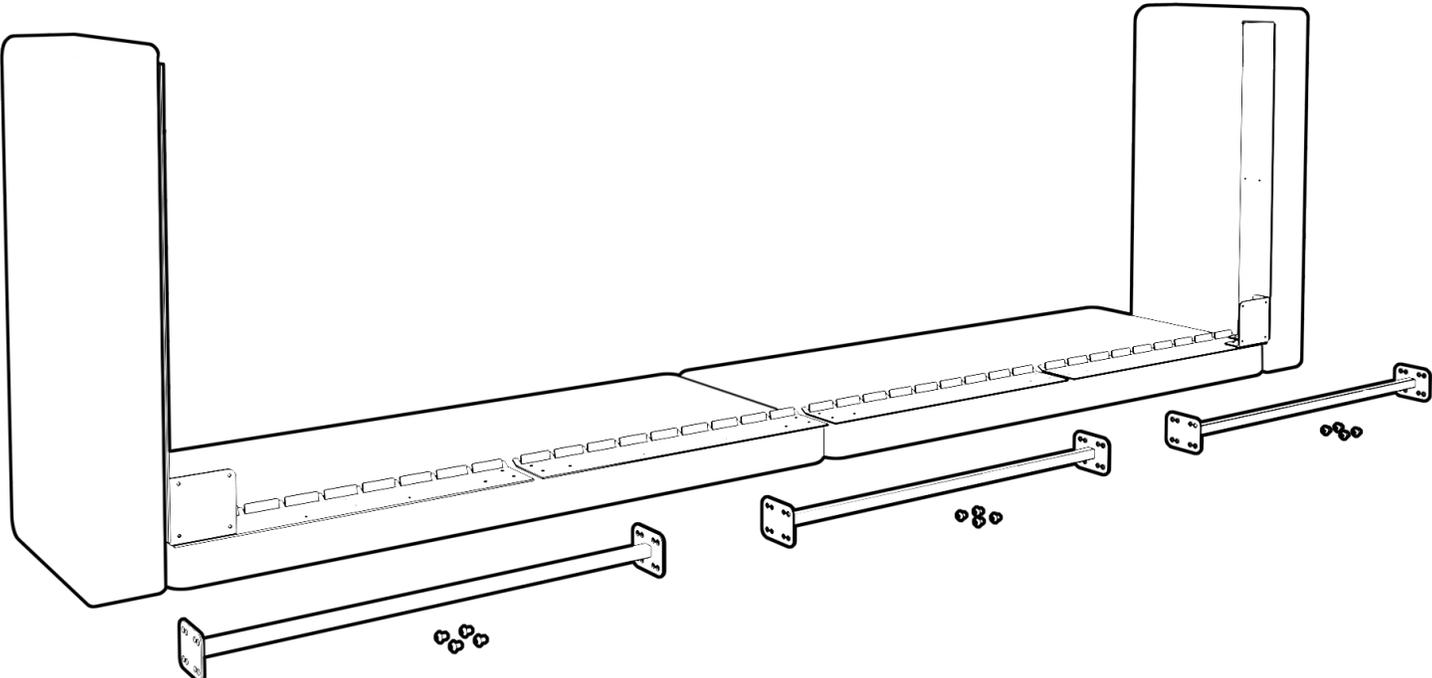


Install the Inner Support Braces (Continued)

Line up the holes in the support brace with the corresponding holes on the frame.

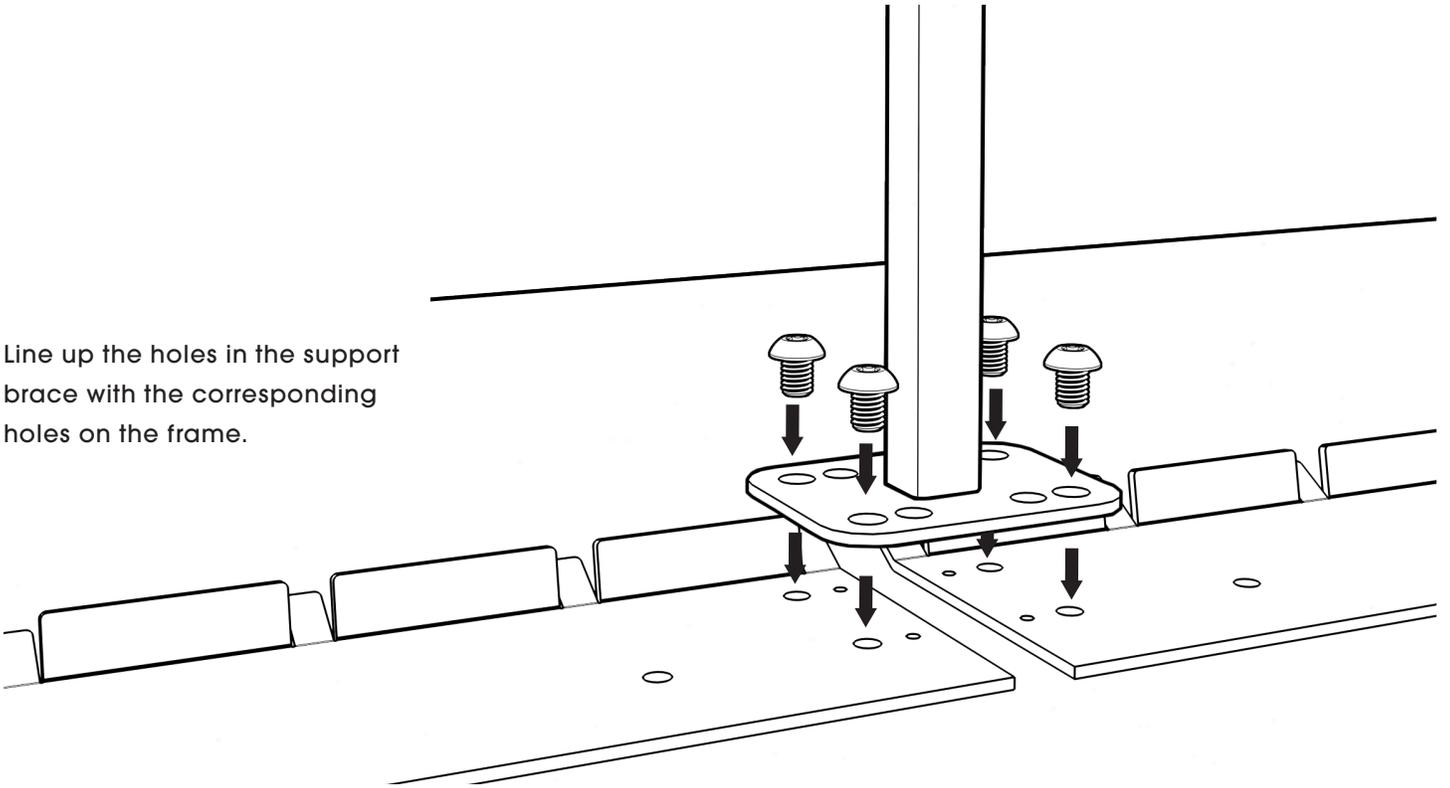


Make sure the edges are flush
Hand tighten before finishing with
the drill to make sure everything is
properly aligned.

Repeat for the other braces.

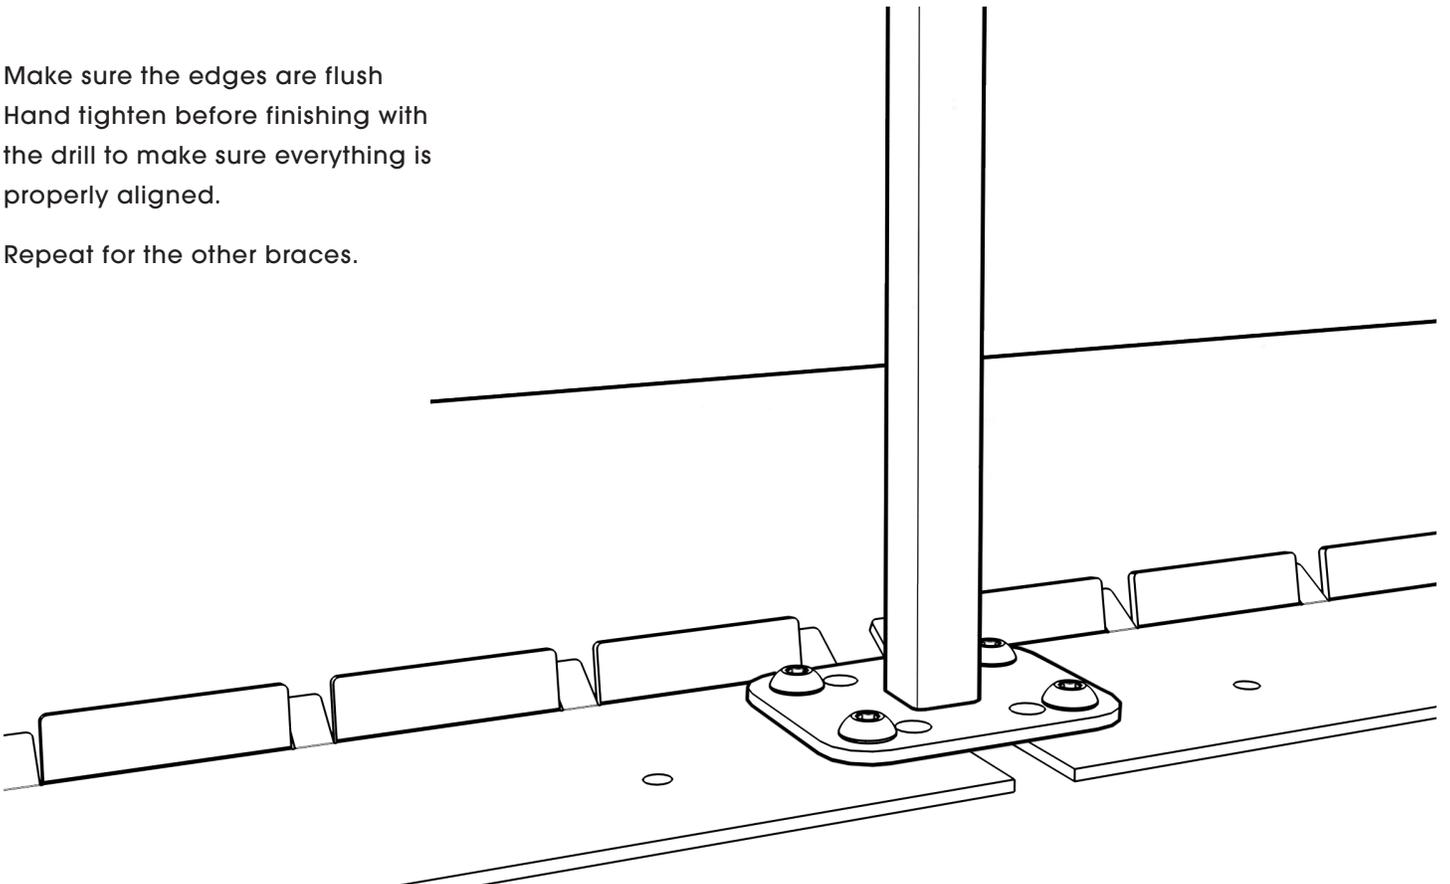



Step 4: Attach the Front Plate

You'll Need: 2x FRONT PLATES
2x CORNER BRACKETS
12x 5MM BUTTON HEAD SCREWS

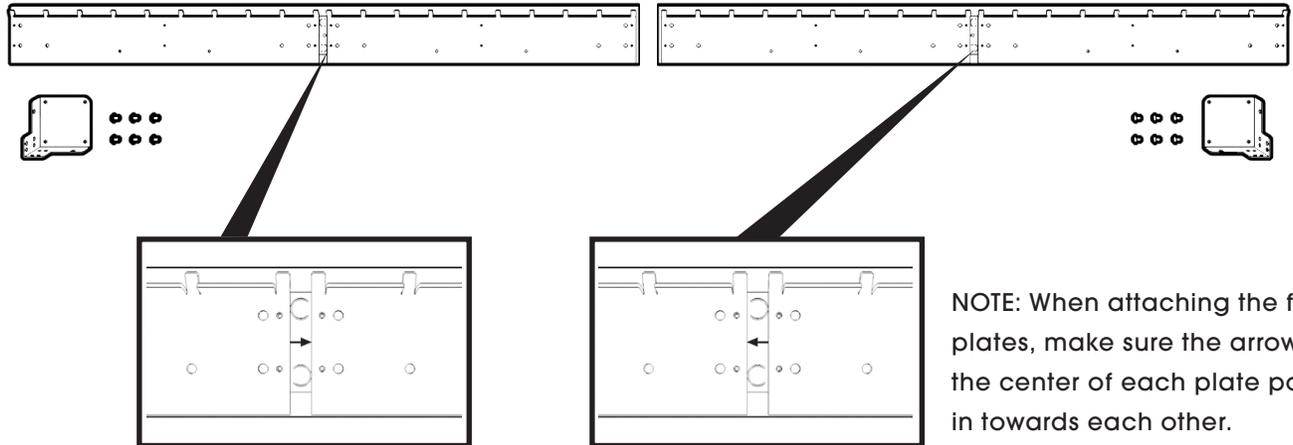

NOTE: When attaching the front plates, make sure the arrows in the center of each plate point in towards each other.


In this step we'll be adding the front plate. But first let's make sure everything is ready!

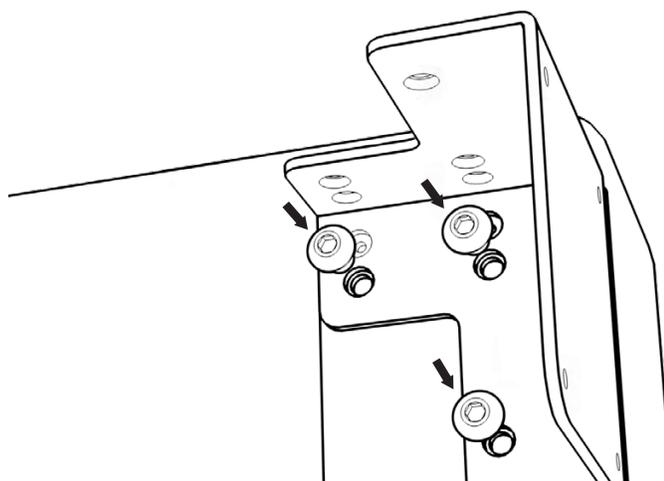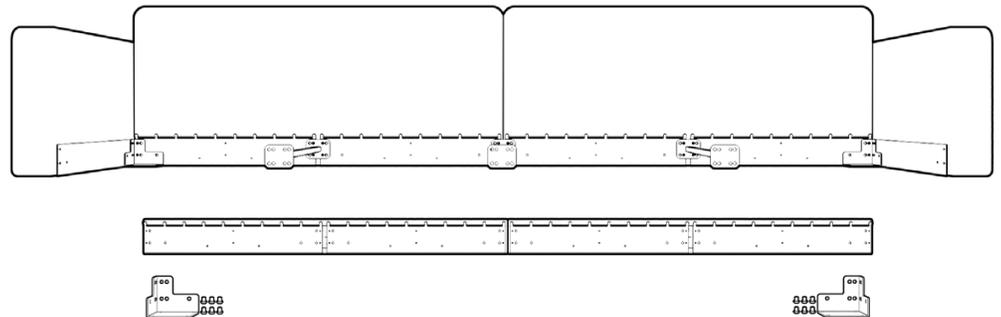

Attach a corner bracket to the arm rest using 3 5mm button head bolts. Hand tighten only.


Repeat for other side.

Attach the Front Plate (Continued)

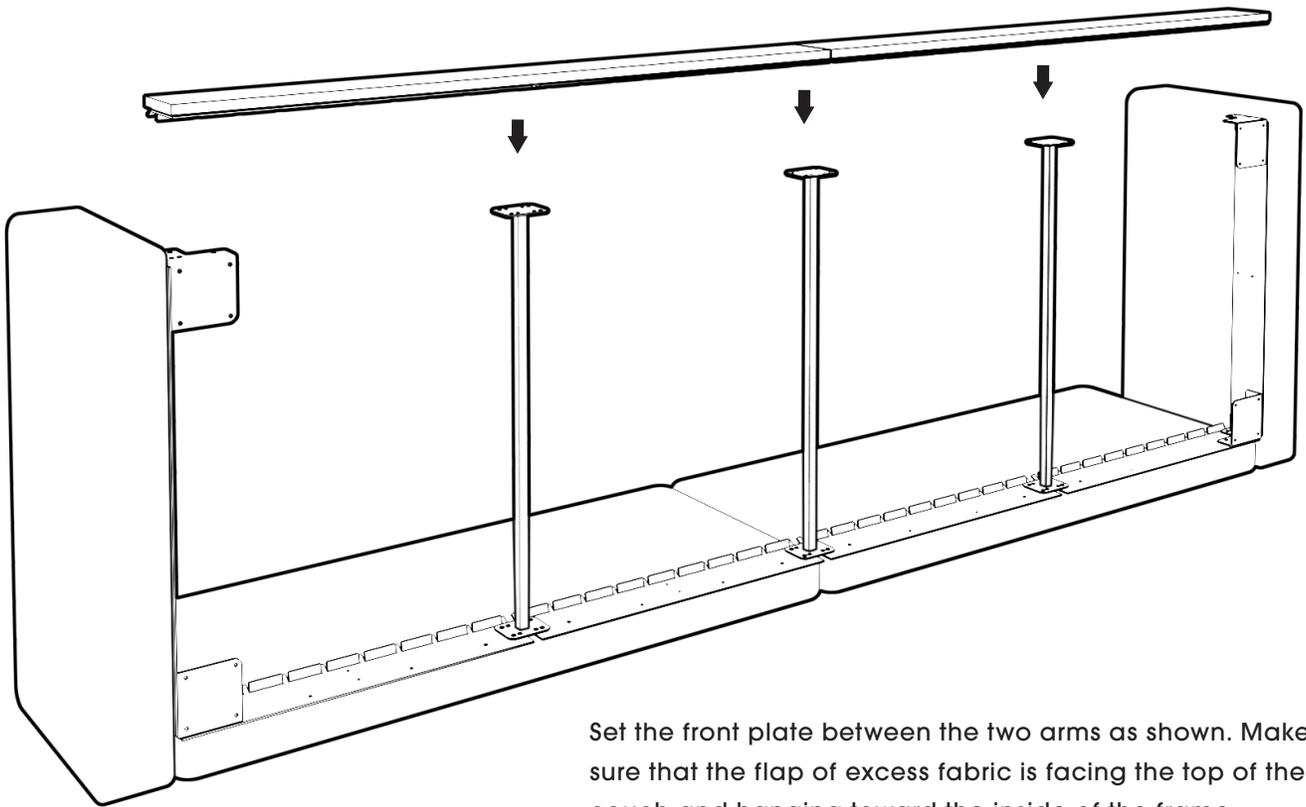


Set the front plate between the two arms as shown. Make sure that the flap of excess fabric is facing the top of the couch and hanging toward the inside of the frame.

This will ensure that the plate is rotated correctly.

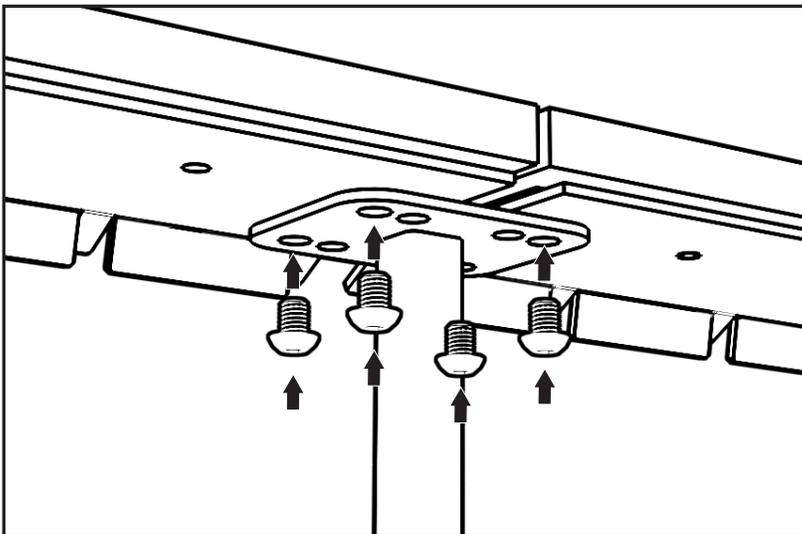

Line up the holes in the support brace with the corresponding holes on the frame. Insert the 5mm button head screws.

Make sure the edges are flush. Hand tighten before finishing with the drill to make sure everything is properly aligned.

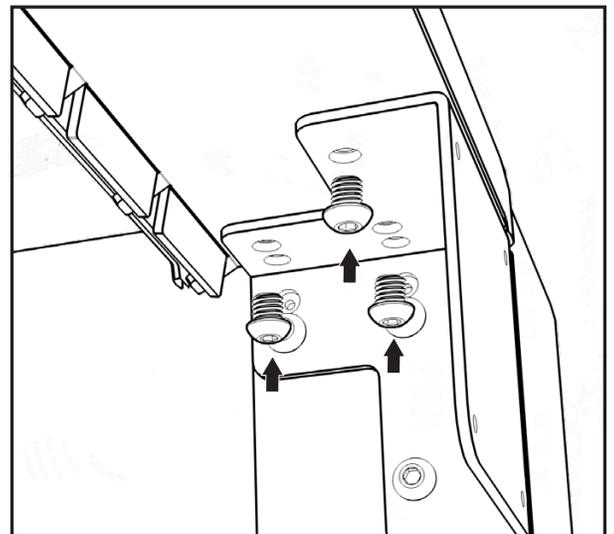

Add 3 more bolts to the corner bracket.



Go back over each screw in the corner brackets and center braces with the drill. Tighten until secure.

Step 5: Install the Legs

You'll Need: 4x LEGS


16x SOCKET HEAD CAP SCREW

Note: Our legs are universal, and are used across multiple products. All sofa and ottoman legs will attach securely with 4 fasteners per leg.

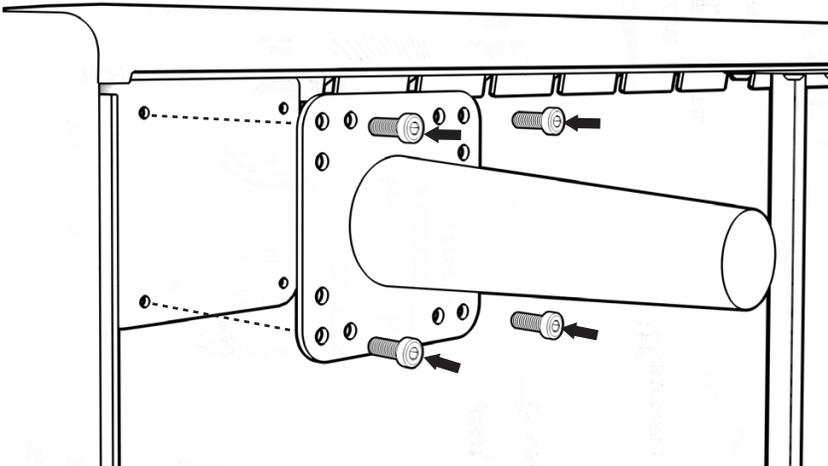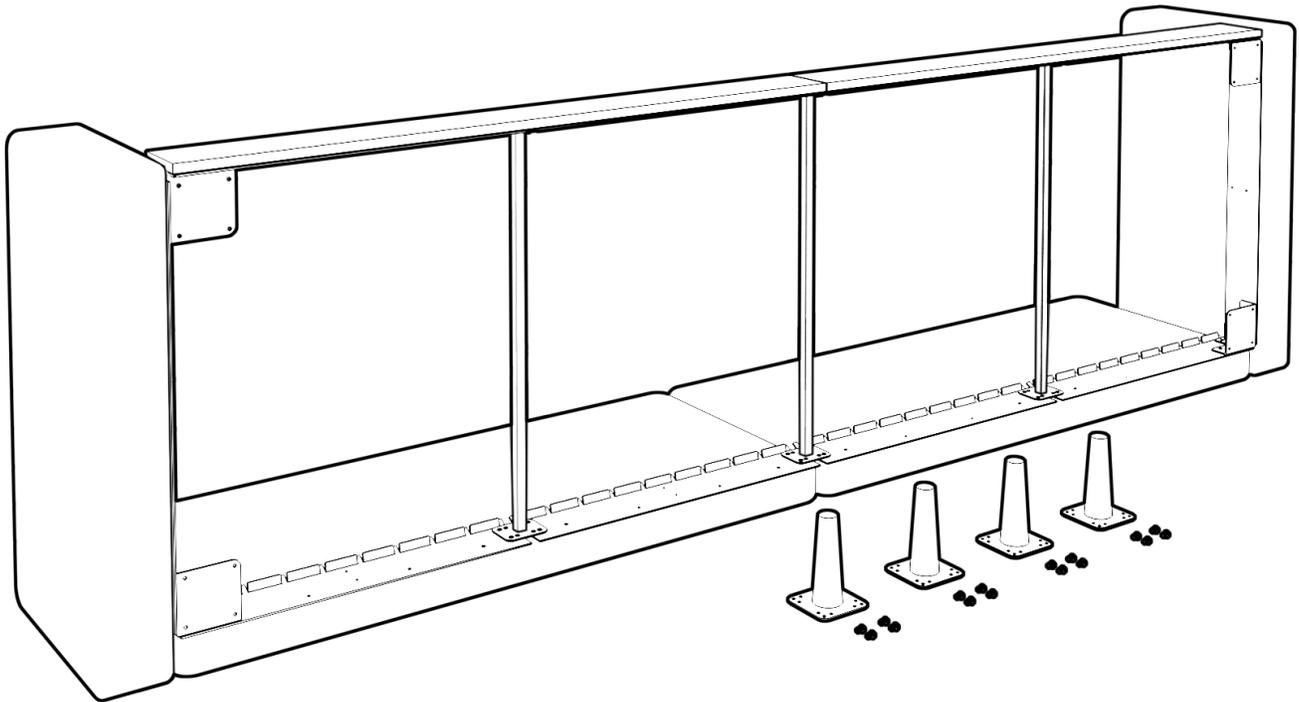

Start by aligning the leg over the mounting holes. Insert bolts into corresponding threaded holes as shown and tighten by hand.

Note: if you have flared legs, make sure that each leg points outward toward its respective corner.

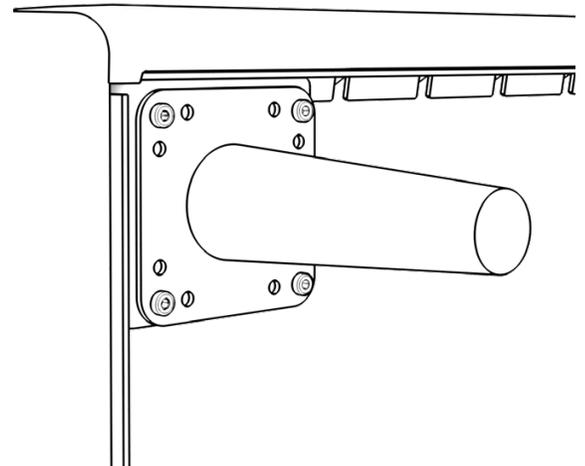



Once each bolt is started by hand, use the drill to finish securing the leg.

Repeat for all four legs.





Step 6: Install the Center Support Legs

Attach a center leg to the center brace. Add 4 set screws to fix the leg in place. The foot can be adjusted for proper height. Repeat for other leg.

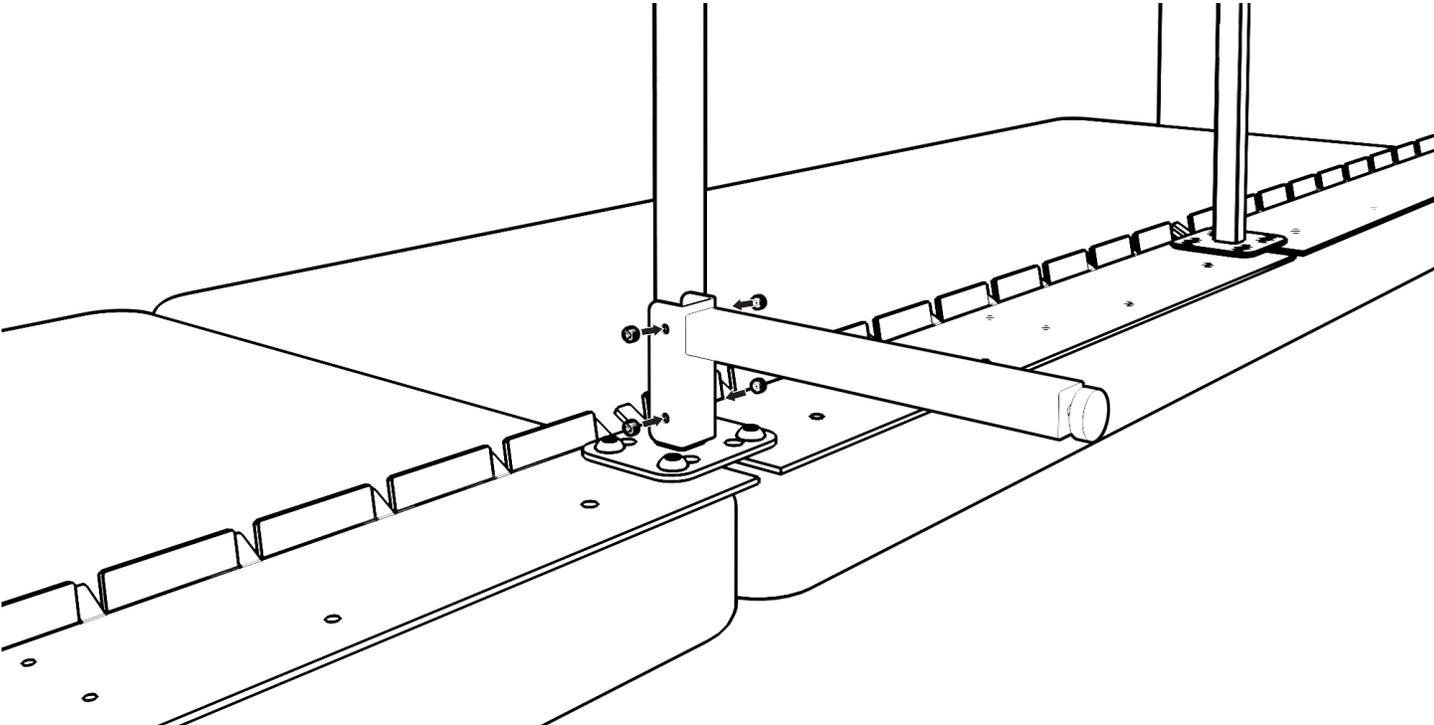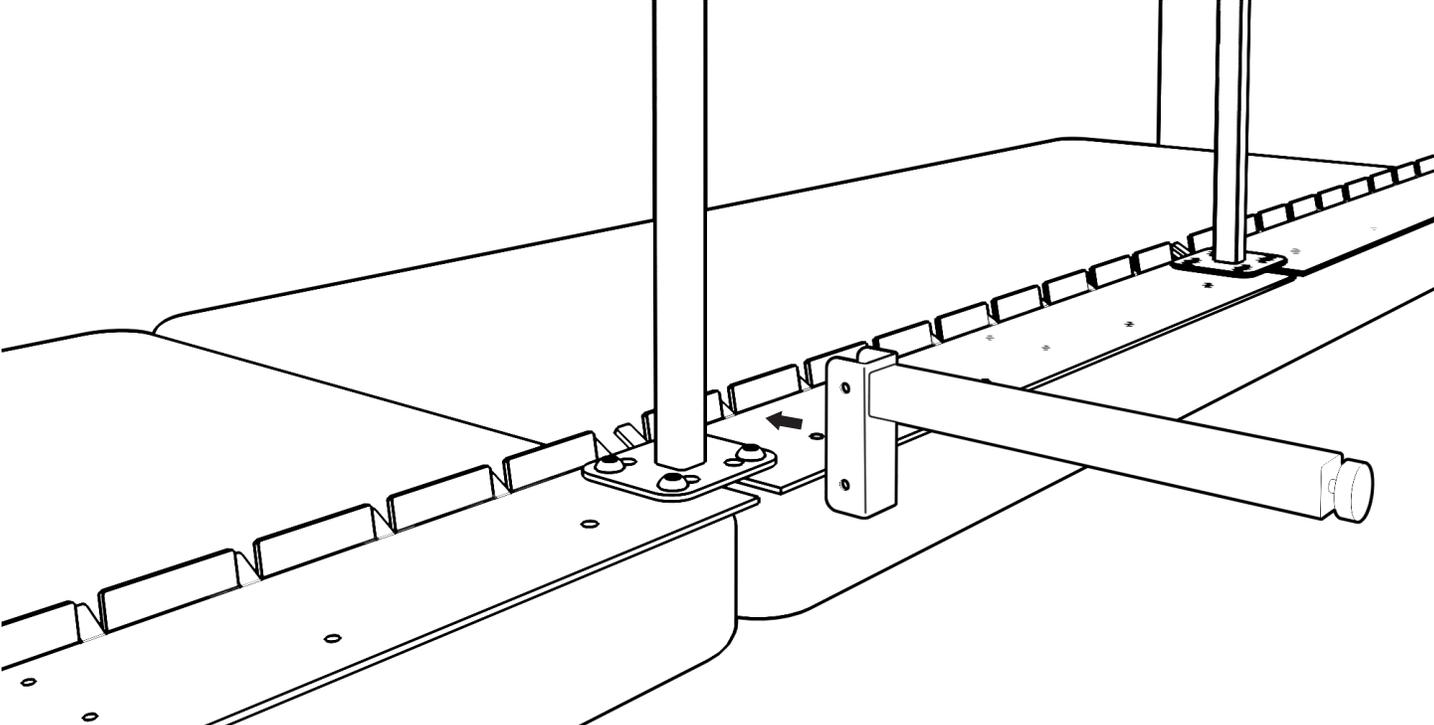


Step 7: Add the Neoprene Pads

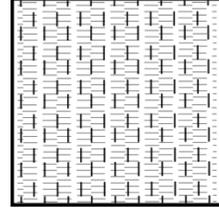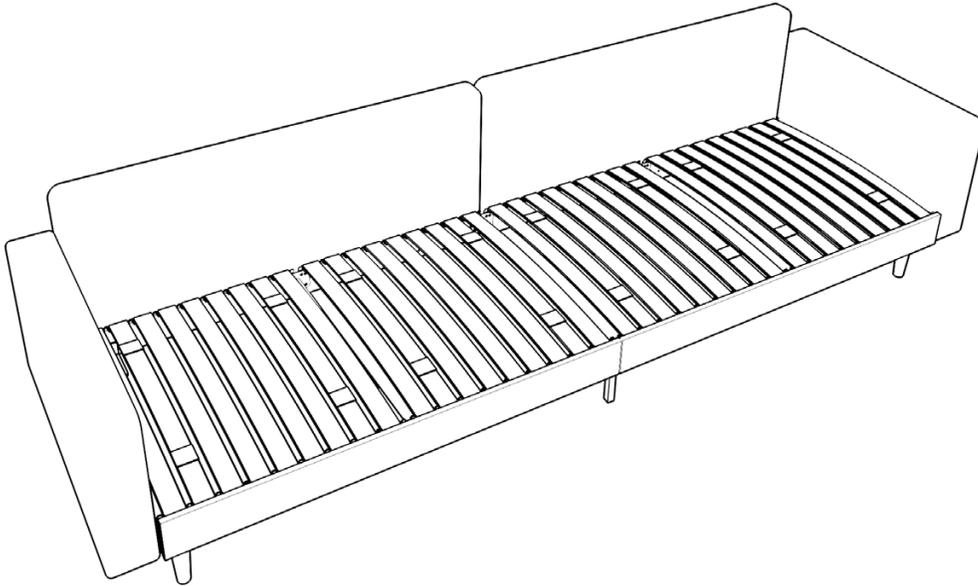

To keep the cushions from sliding add the non-slip neoprene pads.


2 pads will be stuck onto a slat.
Only 8 of the slats of the sofa will need pads.

Please see diagram for correct placement.

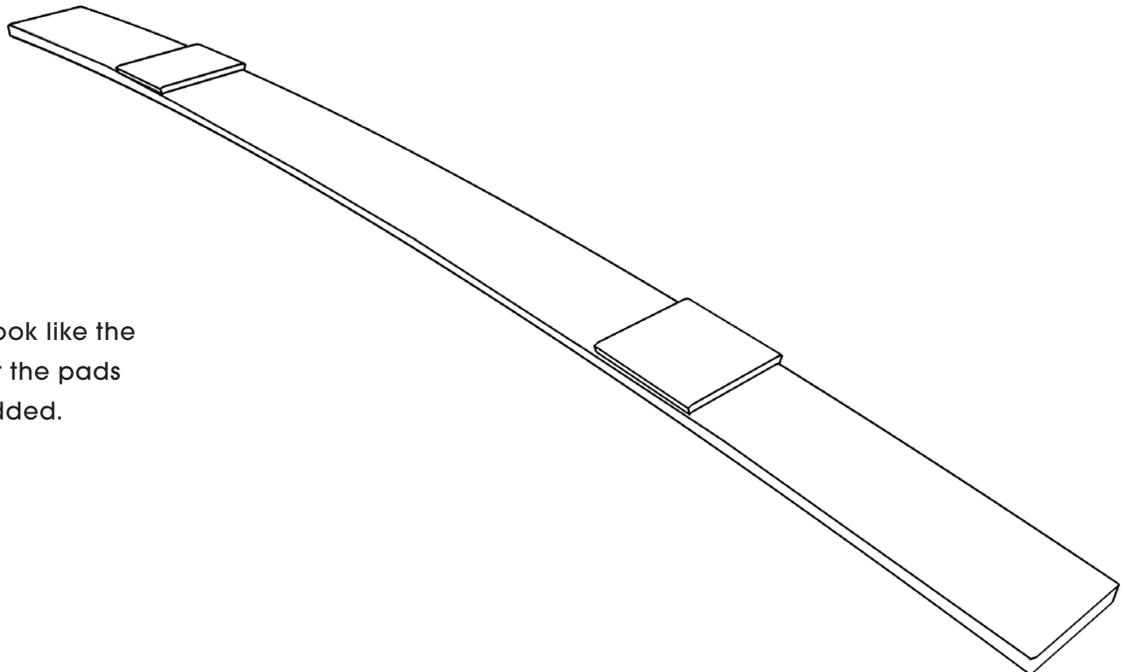


Slats should look like the diagram after the pads have been added.

Step 8: Place the Slats

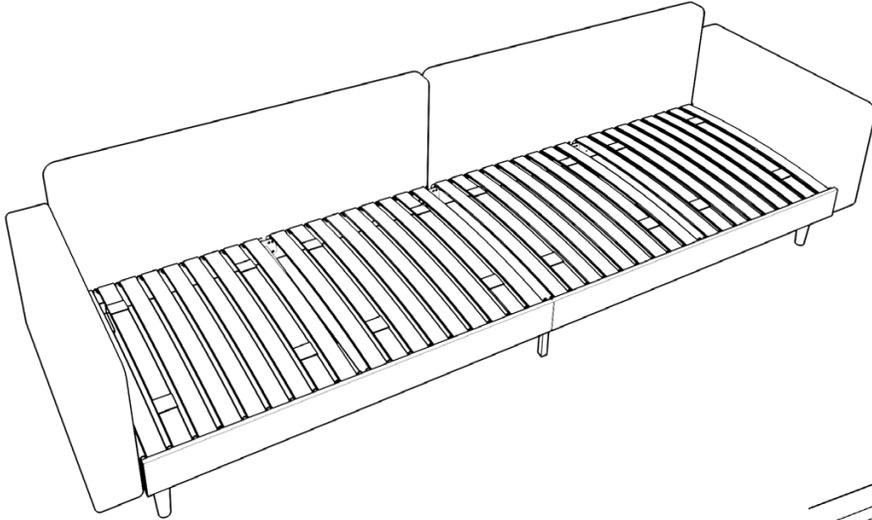


Lay a slat in each groove, as shown. Be sure they arch upward.

NOTE: You may need to gently coax some slats into place depending on how tightly everything has been assembled.

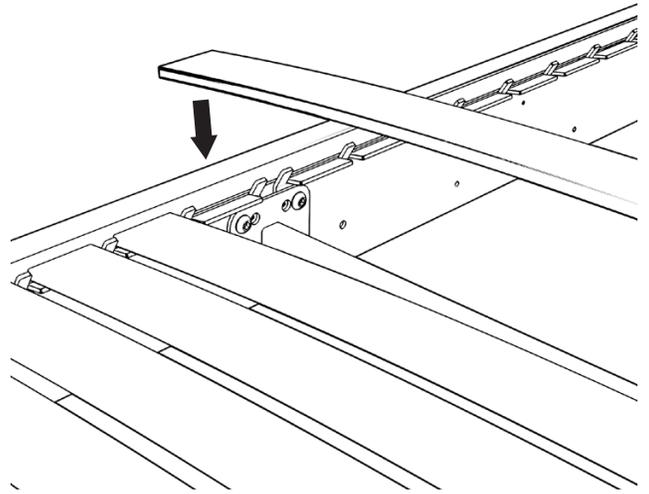

Step 9: Add the Cushions

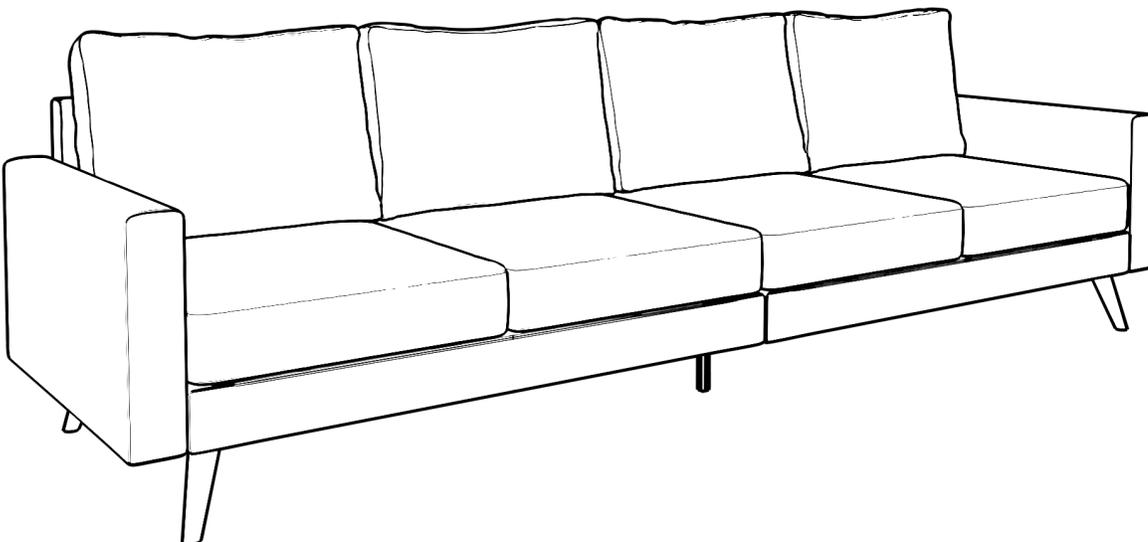

DONE!